

Assembly Instructions

Model:	KLE250C, KLE300B/C
Description:	Fog Lamp
Part Number:	99994-0996
Flat Rate Time(Hr):	0.9

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation. Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.


(KLE250C) Refer to the Service Manual (P/No.: 99924-1528-01) for detailed procedures.

(KLE300B/C) Refer to the Service Manual (P/No.: 99924-1526-01) for detailed procedures.

NOTE

- *For engine guard non-equipped models, install the engine guard kit (see Engine Guard Kit (P/No.:99994-0998) for Assembly instructions Manual).*
- *This kit does not operate if the relay kit is not installed, therefore install the relay kit (see Relay Kit (P/No.: 99994-1004) for Assembly Instructions Manual).*

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Fog Lamp	23016-0599	2	
2	Outer Guard	55020-1825	2	
3	Inner Guard	55020-1826	2	
4	Fog Lamp Switch	27010-0850	1	
5	Sub-harness	26031-2337	1	
6	Band	92072-1414	2	
7	Bracket	11057-0625	1	Right
8	Bracket	11057-0624	1	Left
9	Washer	92200-0766	4	
10	Washer	411AB0500	4	
11	Screw	92172-0864	3	
12	Collar	92152-2204	4	
13	Damper	92160-1167	4	
14	Fog Lamp Mounting Bolts	92151-1611	4	M6×25
15	Mark	56054-1695	2	
16	Bolt	92154-0917	8	M5×12
17	Bolt	92153-1526	4	M6×16

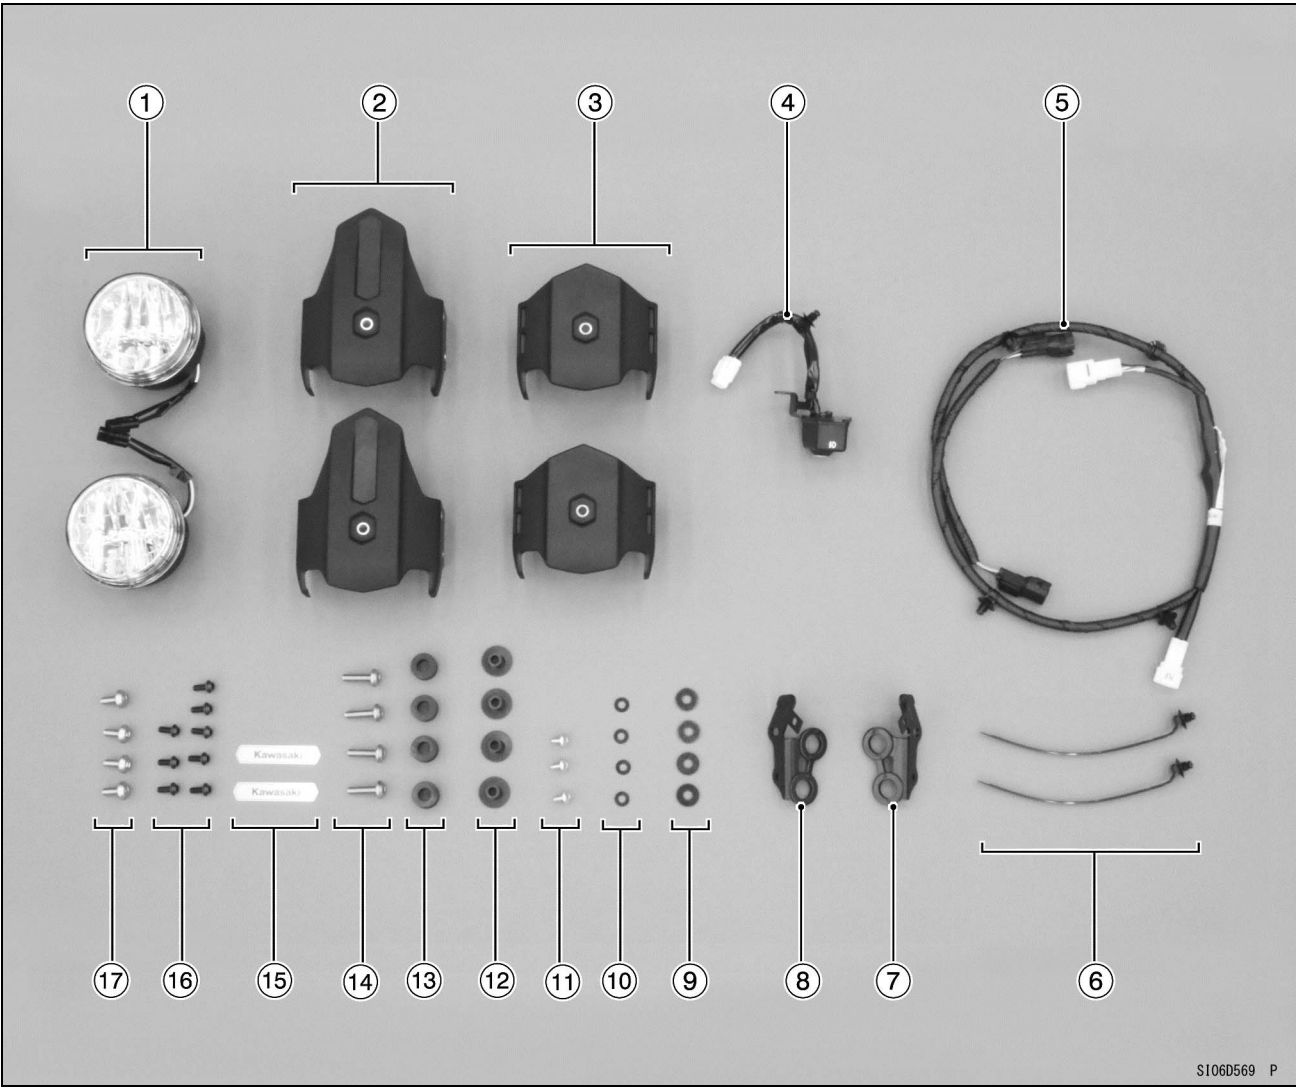

Installation Instructions


- Remove the following parts (Refer to the Service Manual).

Engine Guards (Equipped Models)
Side Covers
Middle Fairings
Windshield
Upper Fairing
Middle Inner Fairing
Headlight

- Assemble:


Fog Lamp [1]
Outer Guard [2]
Inner Guard [3]
Bolts [17]
Bolts [16]
Mark [15]

○ Fit the projection [A] of the outer guard [2] and groove [B] of the inner guard [3].

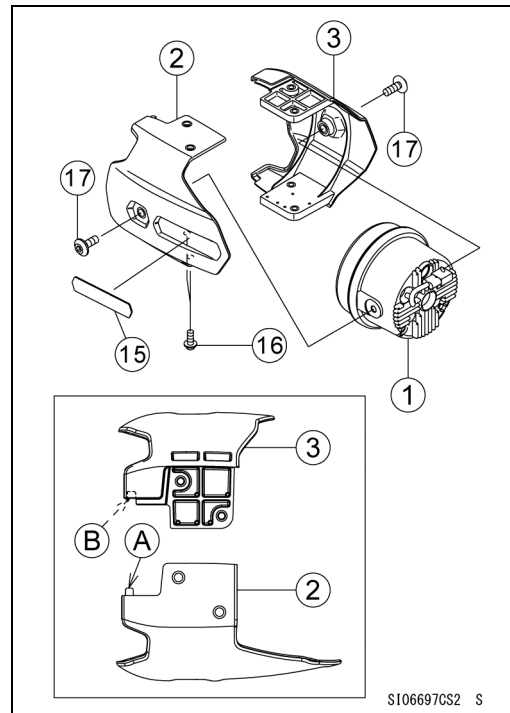


○ Install the fog lamp [1] as shown.

Mark [A]
Upward [B]

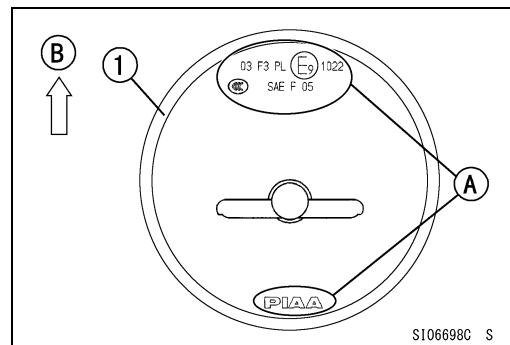

- Install the following parts to the fog lamp assembly.
 - Dampers [13]
 - Brackets [7, 8]
 - Washers [10]
 - Bolts [16]
- Tighten the front bolts first, and then tighten the rear bolts.

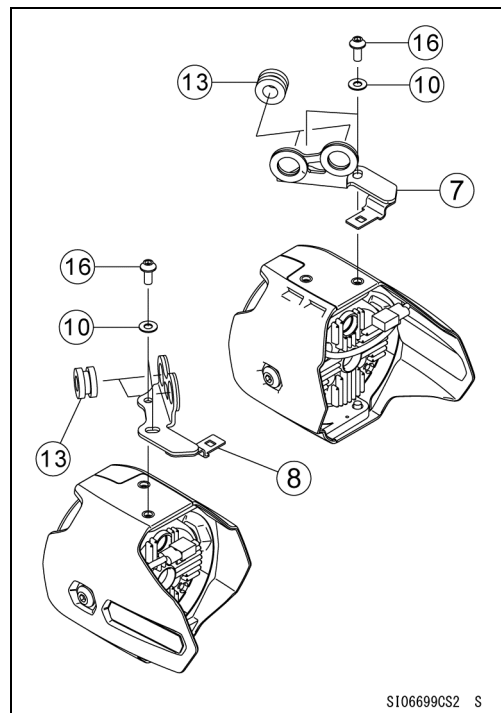


S106699CS2 S


- Remove:
Screws [A]
Cover [B]

NOTE

- *The removed parts are not necessary for this accessory.*

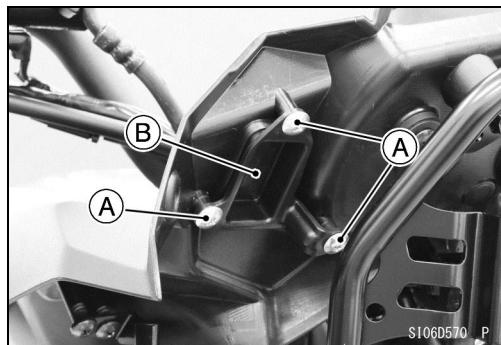


- Install the fog lamp switch [4]
- Tighten the screws [11]
- Install the band [A] of the fog lamp switch to the bracket as shown.

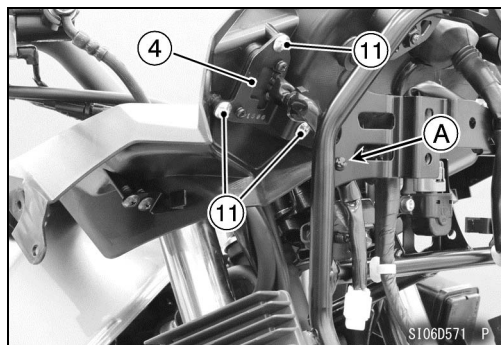


- Remove the cap [A].

NOTE

- *The removed cap is not necessary for this accessory.*

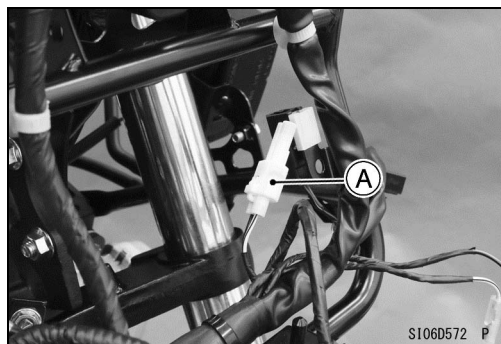

- Install the sub-harness [5].
- Connect the connectors [A]
- Install the band [B] of the sub-harness to the bracket as shown.

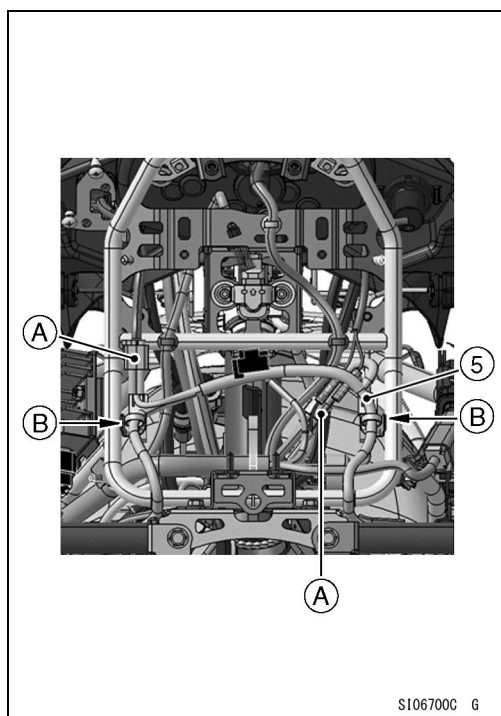


- Install the following parts (Refer to the Service Manual).

Headlight
Middle Inner Fairing
Upper Fairing
Windshield
Middle Fairings
Side Covers
Engine Guards


- Remove the rivets [A] on both sides.

NOTE


- *The removed parts are not necessary for this accessory.*

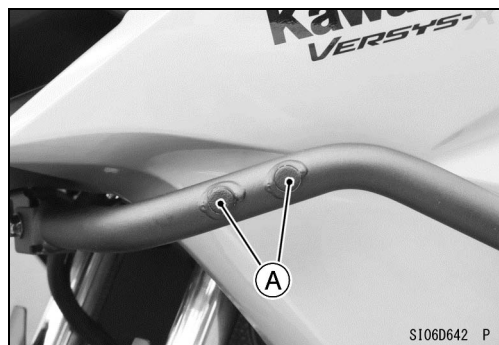


- Install the bands [6]
- Install the bands [A] of the sub-harness to the bracket as shown.
- Hold the sub-harness with the bands [6] as shown.

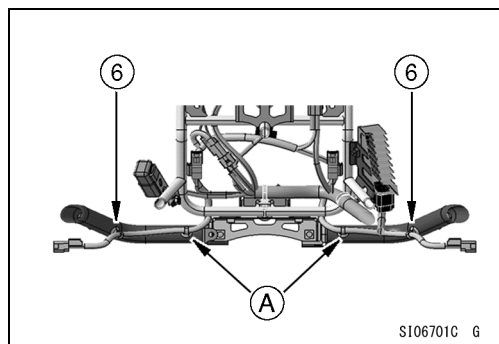


- Install:
Collar [12]
Fog Lamp Assembly
Washers [9]
 - Tighten the fog lamp mounting bolts [14].
- Torque – Fog Lamp Mounting Bolts: 9.8 N·m (1.0 kgf·m, 62 in·lb)**

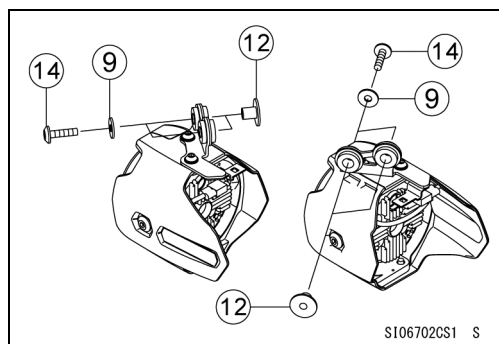

- Connect the connector [A].
- Install the connector to the bracket.

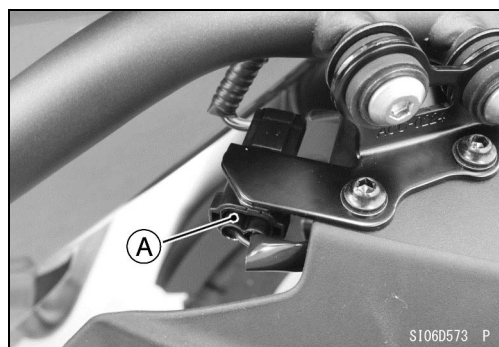

- The fog lamp beam aiming is adjustable by loosening the bolts [A].
- After adjusted the fog lamp beam aiming, tighten the bolts securely.

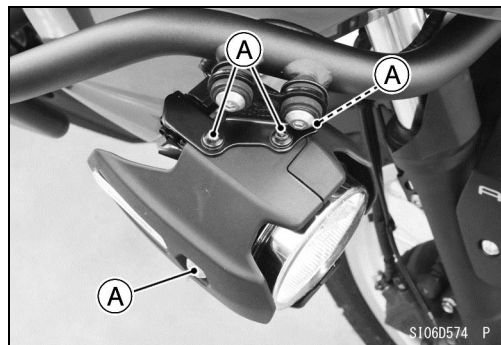

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.