

Assembly Instructions

Model:	ZR900C
Description:	Meter Cover
Part Number:	99994-1021
Flat Rate Time(Hr):	0.3

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.


Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

Refer to the Service Manual (P/No.: 99924-1537-01) for detailed procedures.


Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Meter Cover	14093-0629	1	
2	Trim	53044-0625	1	
3	Bracket	23062-0935	1	Right Side
4	Bracket	23062-0934	1	Left Side
5	Bolt	92153-1948	4	M6
6	Wellnut	92210-0001	4	
7	Bolt	92154-0919	4	M5

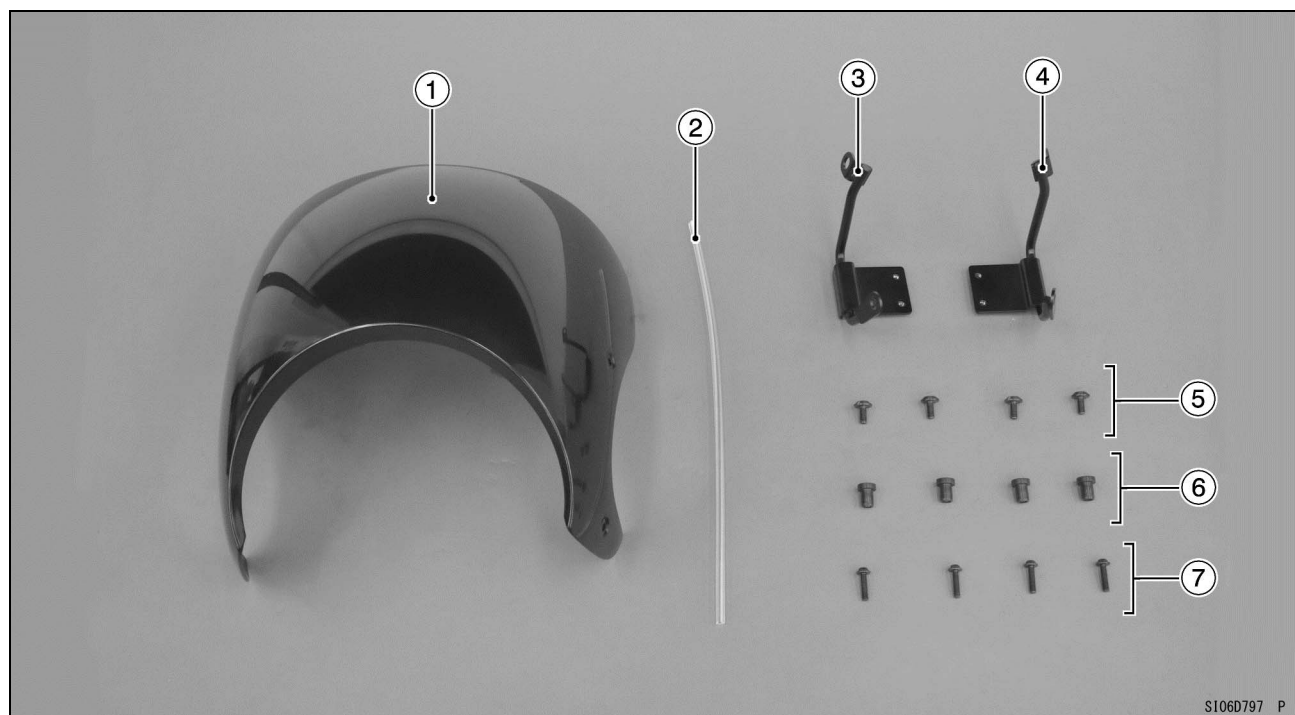


S106D797 P

Installation Instructions


- Remove:
Headlight Housing (Refer to Service Manual)
- Install the bracket [4] and tighten the bolts [5] (Left Side).
- Tighten the bolts while holding the bracket with a suitable bar as shown so that the bracket does not move.

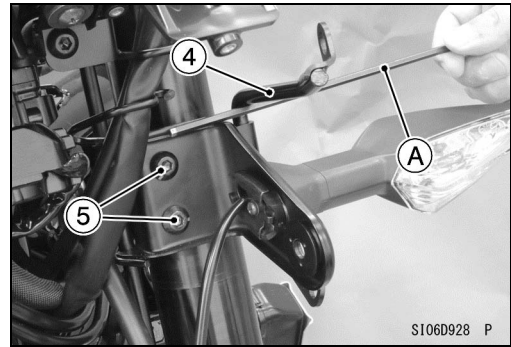


- Install the bracket [3] and tighten the bolts [5] (Right Side).
- Tighten the bolts while holding the bracket with a suitable bar as shown so that the bracket does not move.
- Install:
Headlight Housing (Refer to Service Manual)

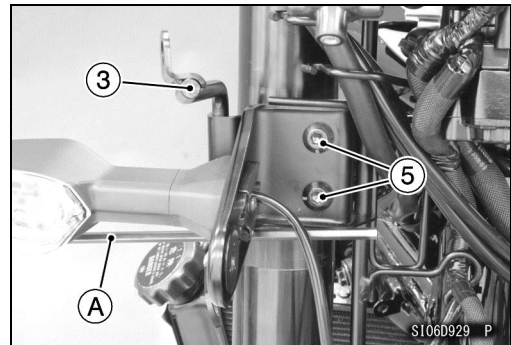


- Install the wellnuts [6] to the bracket [4] (Both Sides).

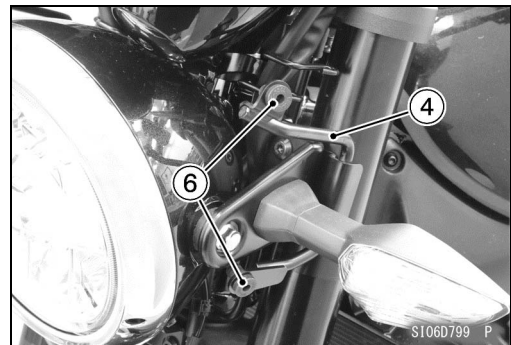

- Install the trim [2] to the meter cover [1].

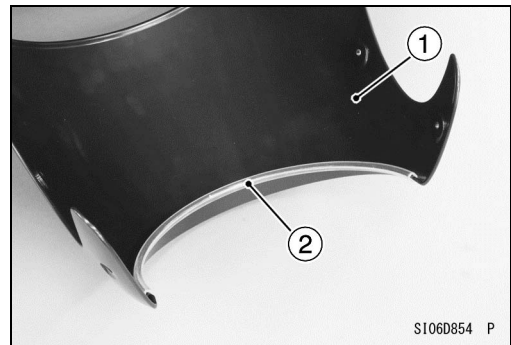

- Install the meter cover [1] and tighten the bolts [7] (Both Sides).

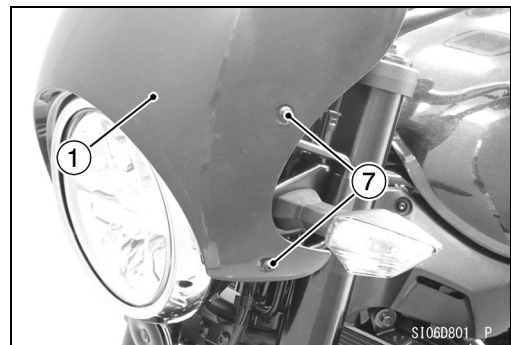

Basic Torque for General Fasteners

The tables below, relating tightening torque to thread diameter, lists the basic torque for the bolts, nuts and screws. Use these tables for the bolts, nuts and screws which are not specified the tightening torque particularly on the previous pages. All of the values are for use with dry solvent-cleaned threads.

For Bolts and Nuts

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	4.5	0.46	40 in·lb
6	8.0	0.82	71 in·lb
8	20	2.0	15
10	35	3.6	26
12	60	6.1	44

For Screws, Plastic Part Tightening Portions and Plastic Washer Tightening Portions

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
4	1.2	0.12	11 in·lb
5	3.0	0.31	27 in·lb
6	4.0	0.41	35 in·lb

For Self-Tapping Screws

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
All	1.2	0.12	11 in·lb

For Wellnuts

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
4	0.2	0.02	1.8 in·lb
5	0.5	0.05	4.4 in·lb
6	1.0	0.10	8.9 in·lb

Check tightness of all fasteners in regular interval. Retighten loose fasteners.