

# INSTALLATION INSTRUCTIONS PLOW MOUNT KIT

Part Number: 100960

Application: Polaris Sportsman XP, SP, X2 Touring

## GENERAL SAFETY PRECAUTIONS

Your safety, and the safety of others, is very important. To help you make informed decisions about safety, we have provided installation and operating instructions and other information on labels and in this guide. This information alerts you to potential hazards that could hurt you or others. It is not possible to warn you about all potential hazards associated with this product, you must use your own good judgment.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

This guide identifies potential hazards and has important safety messages that help you and others avoid personal injury or death. **WARNING** and **CAUTION** are signal words that identify the level of hazard. These signal words mean:

**AWARNING** signals a hazard that could cause serious injury or death, if you do not follow recommendations. **ACAUTION** signals a hazard that may cause minor to moderate injury, if you do not follow recommendations.

This guide uses **NOTICE** to call attention to important mechanical information, and Note: to emphasize general information worthy of special attention.

#### A WARNING

Impact and Moving Parts Entanglement Hazard

#### FAILURE TO OBSERVE THESE INSTRUCTIONS COULD LEAD TO SEVERE INJURY OR DEATH

- Always Read the Plow Operator's Manual, the Winch Operator's Manual and all warning labels before operating.
- Always use extreme caution when drilling on any vehicle. Make sure that all fuel lines, brake lines, electrical wires, and other objects are not punctured or damaged when/if drilling on the vehicle. Thoroughly inspect the area to be drilled (on both sides of material) prior to drilling, and relocate any objects that may be damaged. Failure to inspect the area to be drilled may result in vehicle damage, electrical shock, fire or personal injury.
- Always wear safety glasses when installing this kit. A drilling operation will cause flying metal chips. Flying chips can cause eye injury.
- Always use extreme caution when cutting and trimming during fitting.
- Always remove jewelry and wear eye protection.
- Never lean over battery while making connections.
- Never route electrical cables:
  - o Across any sharp edges.
  - o Through or near moving parts.
  - Near parts that become hot.
- Always insulate and protect all exposed wiring and electrical terminals.
- Always install terminal boots as directed in installation instructions.
- Always use appropriate and adequate care in lifting components into place.
- Always insure components will remain secure during installation and operation.
- Always tighten all nuts and bolts securely, per the installation instructions.
- Always operate the vehicle at a walking speed with the blade installed. Never exceed 5 mph (8 km/h), even with blade up.
- Always plow cautiously, impact with hidden or stationary object may cause the vehicle to stop suddenly or go out of control.
- Never operate the vehicle on slopes greater than 10 degrees with the plow installed.
- Never stand or ride on the plow.
- Always stay clear of moving parts and joints. Always keep others away when operating or adjusting plow.
- Always perform regular inspections and maintenance on the plow mechanism, fasteners, cable and related hardware.
- Always replace all worn or damaged parts before operating.
- Never operate this WARN product with damaged or missing parts.
- Always drive slowly over bumpy and rough terrain. Driving at speeds that cause the plow to bounce while in the up position can cause the winch to back-drive, causing the plow to work its way down. This may result in the plow impacting a stationary object and cause damage to the vehicle and operator injury or death.
- Always drive at speeds such that the plow does not bounce and be aware of the plow position while driving at all times.
- **Always** be aware that the purpose of the j-bolt is to break the connection between the plow and the winch, to prevent serious damage to the ATV if the plow is raised too high. The plow blade will drop suddenly if the j-bolt breaks, so always be sure there are no bystanders when you raise and lower the plow.
- **Never** raise the top of the plow above the headlights of the ATV, as it may damage the vehicle and plow.
- Always replace a deformed or broken j-bolt with the spare j-bolt included in the kit.

Read installation and operating instructions thoroughly.

WARN INDUSTRIES, INC. 12900 S.E. Capps Road, Clackamas, OR USA 97015-8903, 1-503-722-1200, FAX: 1-503-722-3000 Customer Service: 1-800-543-9276 Dealer Locator Service: 1-800-910-1122 International Fax: 1-503-722-3005

## A CAUTION

Moving Parts Entanglement Hazard

#### FAILURE TO OBSERVE THESE INSTRUCTIONS COULD LEAD TO MINOR OR MODERATE INJURY

- Always take time to fully read and understand the installation and Operations Guide included with this product.
- **Never** operate this product if you are under 16 years of age.
- **Never** operate this product when under the influence of drugs, alcohol or medications.

Read installation and operating instructions thoroughly.

# NOTICE

#### **Equipment Damage**

- Always refer to the Installation and Specification Guide, supplied in the winch kit, for all wiring schematics and specific details on how to wire this WARN product to your vehicle.
- **Always** put the end of the actuator cable through the slot in the Termination Bracket. Terminating the cable through any other hole in the bracket will cause the bracket to not function properly and will drastically reduce the life of the actuator cable.

Read installation and operating instructions thoroughly.

# TABLE OF CONTENTS

Tools Required	page 2
Torque Specifications	
Parts List	
Installation	
Maintenance/Care	. 3

# TOOLS REQUIRED

- Standard wrenches
- Standard sockets
- Hacksaw Blade with Handle (fine tooth)

## TORQUE SPECIFICATIONS

Please use the recommended torque specifications when assembling this product unless otherwise specified in the instructions.

FASTENER SIZE	FASTENER TORQUE	
	lb-ft	(N.m)
1/4"	8	(11)
5/16"	17	(23)
3/8"	30	(40)
7/16"	48	(66)
1/2"	74	(100)
9/16"	106	(144)
5/8"	148	(200)
3/4"	269	(364)
M4	(2)	3
M5	(4.5)	6
M6	(7.5)	10
M8	(18)	25
M10	(37)	50

		PARTS LIST	
ITEM	PART NUMBER	DESCRIPTION	QTY
A1	100957	PLOW WELDMENT	1
A2	79225	PLOW LH BRACKET	1
А3	79226	PLOW RH BRACKET	1
_			
B1	89084	M8 HEX HEAD BOLT	4
B2	71588	M8 FLANGE NUT	4
B3 B4	79712	3/8 SAFETY PIN FENDER WASHERS	2 2
B4 B5	63010 2002	5/16 LOCK NUTS	2
B6	1324	5/16 FLAT WASHERS	2
B7	7355	5/16 CARRIAGE BOLTS	2
J ,	7333	3/ 10 C/ WWW/ IGE BOE13	2
B3 (A3)	A1	B2 B2 B7 B7 B6 B5	B3  A2

# INSTALLATION INSTRUCTIONS

**BEFORE YOU BEGIN:** A WARN winch mount is required for plow mount installation.

1. Remove the grill and the lower front plastic.



Figure 1



Figure 2

2. Install WARN winch mount and winch, following winch and mount instructions.



Figure 3

# INSTALLATION INSTRUCTIONS

3. Insert the two carriage bolts (B7) through the backside of the winch mount as indicated in photo.



Figure 4

- 4. Slide plow mount into position, between the two tabs on the front lower frame.
- 5. Align the holes in the front of the plow mount over the carriage bolts previously installed and secure with washer (B6) and nut (B5). *Do not tighten at this time.*

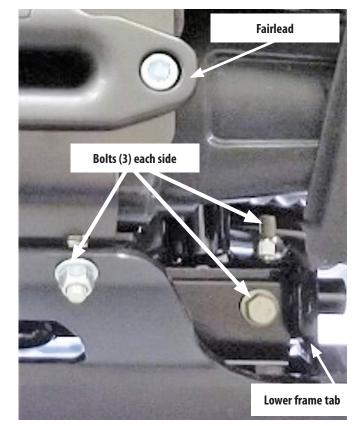


Figure 5

6. Mark lower outter corners of front plastic to cut.



Figure 6

7. Using a cutting tool of choice, remove the lower section of plastic.

NOTE: The modification of front plastic will vary depending on which Sportsman model you purchased.



Figure 7

8. Reinstall the top portion of plastic using the two screws previously removed in step 1. Your Installation is now complete.



Figure 8

### MAINTENANCE / CARE

- 1. Inspect all parts on the winch, winch mount, and related hardware prior to each use. Replace all hardware that appears rusted or deformed.
- 2. Inspect all nuts and bolts on the winch, winch mount,, and related hardware prior to each use. Tighten all nuts that appear to be loose. Stripped, fractured, or bent bolts or nuts need to be replaced.
- 3. Check all cables prior to use. Replace cables that look worn or frayed.
- 4. Check all moving or rotating parts. Remove debris that may inhibit the part from moving freely.

CARELESS INSTALLATION AND OPERATION CAN RESULT IN SERIOUS INJURY OR EQUIPMENT DAMAGE. READ AND UNDERSTAND ALL SAFETY PRECAUTIONS AND OPERATING INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS PRODUCT.

