

INSTRUCTION SHEET FOR TOOL NO.33428-78



Trans Main Drive Gear Bearing Installer Tool Use on 4-speed Big Twin - 1977-1986

Use to install main needle bearing to the proper depth Refer to H-D® Service Manual

- 1. Remove old bearing according to H-D® Service Manual.
- 2. When installing new H-D No.8905 or 8906 bearing, use a press fit lube, on bearing. Place trans case on an arbor press.
- 3. Support the case to prevent bending the studs. Place bearing with lettered side up squarely over the bearing bore. Set the bearing tool with small diameter into bearing I.D.
- 4. Press the bearing into bore until the tool bottoms against the steel sleeve insert. At this point the bearing is at the correct depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL.

SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.

THE LAST TOOLS YOU WILL EVER NEED TO BUY.

555 DAWSON DRIVE, CAMARILLO, CA 93012 PHONE 805-482-6913 • FAX 805-482-9224
VISIT US ON THE WEB AT WWW.JIMSUSA.COM

No.33428-IS



REV D 4-15

INSTRUCTION SHEET FOR TOOL NO.33428-78



TRANS MAIN DRIVE GEAR BEARING INSTALLER TOOL USE ON 4-SPEED BIG TWIN - 1977-1986

Use to install main needle bearing to the proper depth Refer to H-D® Service Manual

- 1. Remove old bearing according to H-D® Service Manual.
- 2. When installing new H-D No.8905 or 8906 bearing, use a press fit lube, on bearing. Place trans case on an arbor press.
- 3. Support the case to prevent bending the studs. Place bearing with lettered side up squarely over the bearing bore. Set the bearing tool with small diameter into bearing I.D.
- 4. Press the bearing into bore until the tool bottoms against the steel sleeve insert. At this point the bearing is at the correct depth.

CAUTION: WEAR SAFETY GLASSES. EXCESSIVE FORCE MAY DAMAGE PARTS AND TOOL.

SEE JIMS® CATALOG FOR OVER 100 OTHER TOP QUALITY PROFESSIONAL TOOLS.

THE LAST TOOLS YOU WILL EVER NEED TO BUY.