



KAOKO™ THROTTLE STABILIZER KITS:
GUZ133

*For Models **MOTO-GUZZI**
V85TT (2019-2020)*
With OEM hand guards—with or without OEM heated grips

RSA Registered Designs
No. A2007/00202 No. A2007/00205
No. A2007/00203 No. A2007/00206
No. A2007/00204 No. A2007/00207

Patents
"U.S. Pat. No. US D593,462 S"
"U.S. Pat. No. US D593,463 S"
"U.S. Pat. No. US D593,464 S"

Items Included in your kit
Kaoko bar-end weight • Friction Nut • 100 Thrust washer • 134 thrust washer
Male insert • Aluminum spacer • 2mm Allen Key • Fitting Instructions

1

A — OEM bolt
B — HEX Nut/Insert

2

A — Plastic Thrust Washer

3

A — Aluminium spacer
B — Male insert

4

A — Plastic thrust washer
B — Friction nut & grub screw
C — Kaoko bar-end weight
D — Male insert
E — Handguard bracket

DISCLAIMER: NO RESPONSIBILITY ACCEPTED FOR NON-ADHERENCE TO THESE INSTRUCTIONS

KAOKO™ Safety Warning:
The KAOKO™ Throttle Stabilizer is an aftermarket accessory. Any misunderstood, abused or incorrectly installed motorcycle accessory is a safety hazard that could cause injury or death. It's the rider's responsibility to understand the operation and purpose for which the KAOKO™ Throttle Stabilizer is designed, namely, for cruising, only when safe to do so. At all other times the control should be disengaged. The KAOKO™ Throttle Stabilizers are to be used only by experienced and responsible riders. See reverse of page for full indemnity.
Note: An adjustment to throttle assembly position may be necessary to suit KAOKO™ Throttle Stabilizers. The throttle assembly position on aftermarket bars, and some OEM bars, is adjustable. The assembly can marginally be re-positioned along the handle bars slightly loosening the throttle assembly clamp screws, and then sliding the throttle assembly along the handle bars (left or right). Once done, firmly tighten the clamp screws to OEM torque specifications. This adjustment is generally not necessary.

Fitting Instructions

- Step 1:** Remove the right hand side bar-end weight by loosening the OEM bolt as show in picture 1A. This will expose the hex nut as shown in picture 1B that needs to be removed to proceed.
- Step 2:** Place plastic thrust washer onto end of throttle as shown in picture 2.
Note: For models *with* heated grips—use washer 134.
Note: For models *without* heated grips—use washer 100.
Note: To enable improved functionality, it is recommended (not essential) to apply very light smear of Automotive grease or Petroleum jelly to the friction face of the thrust washer(See Figure 3 at the back of the page)
- Step 3:** Place the aluminum spacer against the stem of the Kaoko bar-end weight as shown in picture 3. **(For heated grips only!)**
- Step 4:** Insert the Kaoko bar-end weight into the handlebar and tighten by means of an 8mm allen key.
- Step 5:** Place the male insert into the end of the Kaoko bar-end weight as shown in picture 3.
- Step 6:** Secure the hand guard onto the end of the Kaoko bar-end weight as seen in picture 4. The male insert can be rotated to accommodate the handguard bracket.
- Step 7:** Secure the entire assembly using the OEM bolt as shown in picture 1.
- Step 8:** Carefully set rotational resistance of the friction nut by tightening/loosening the grub screw by small adjustments using the 2mm allen key provided in the Kaoko Kit. Take care not to over tighten risking damage to threads. The nut should have fairly firm rotational resistance. See under **Maintenance below.**

Operating Instructions

The Friction Nut has a **left hand thread**. In readiness for engagement, the Friction Nut must be adjusted so that it makes light contact against the thrust washer.
To Engage: While rolling on the throttle, the Friction Nut can be gripped between the small finger and palm of hand. This action tightens the nut and provides sufficient friction to set the throttle to the desired opening.
(The friction is such that the rider may still open and close the throttle. The throttle simply has a slight rotational stiffness.)
To Disengage: While rolling off the throttle, grip the Friction Nut between small finger and palm of hand.
VERY IMPORTANT!! The throttle should open and snap closed freely when correctly disengaged.
Note: The Grub Screw needs to be set to provide the necessary resistance on the thread of the friction nut (only small adjustments need to be made as to not damage the friction nut threads). This may be adjusted periodically to take up wear.
Maintenance: Remove kit annually. Unscrew Friction Nut and brush clean threads with a mild soap. Apply petroleum jelly to threads and assemble. Adjust grub screw to desired operating resistance. (O-Ring cushion: 19.6mm I.D. x 2.4mm section — if replacement is required)