
Assembly Instructions

Models:	ZX1000L/M
Description:	Single Seat Cover Kit
Part Number:	99994-0393-□□□ (□□□ is in the color codes.)

Before you begin, read through these instructions and check that all parts are present.
Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.
Kawasaki recommends that all genuine accessories should be fitted by an authorised Kawasaki dealer.

The following symbol indicates the information for proper installation and operation in this instruction.
NOTE: *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*

Parts List				
No.	Component Name	Part No.	Qty	Remarks
1	Single Seat Cover	53065-0019-□□□	1	□□□ is in the color codes.
2	Nut	92210-0277	3	6 mm (0.2 in.)
3	Bracket	11056-2436	1	
4	Damper	92075-1927	4	
5	Bolt	130BA0614	5	6 × 14 mm (0.2 × 0.55 in.)
6	Damper	92075-1446	1	
7	Bracket-Lock	32074-0017	1	
8	Cover	14092-0248	1	
9	Collar	92152-0250	2	

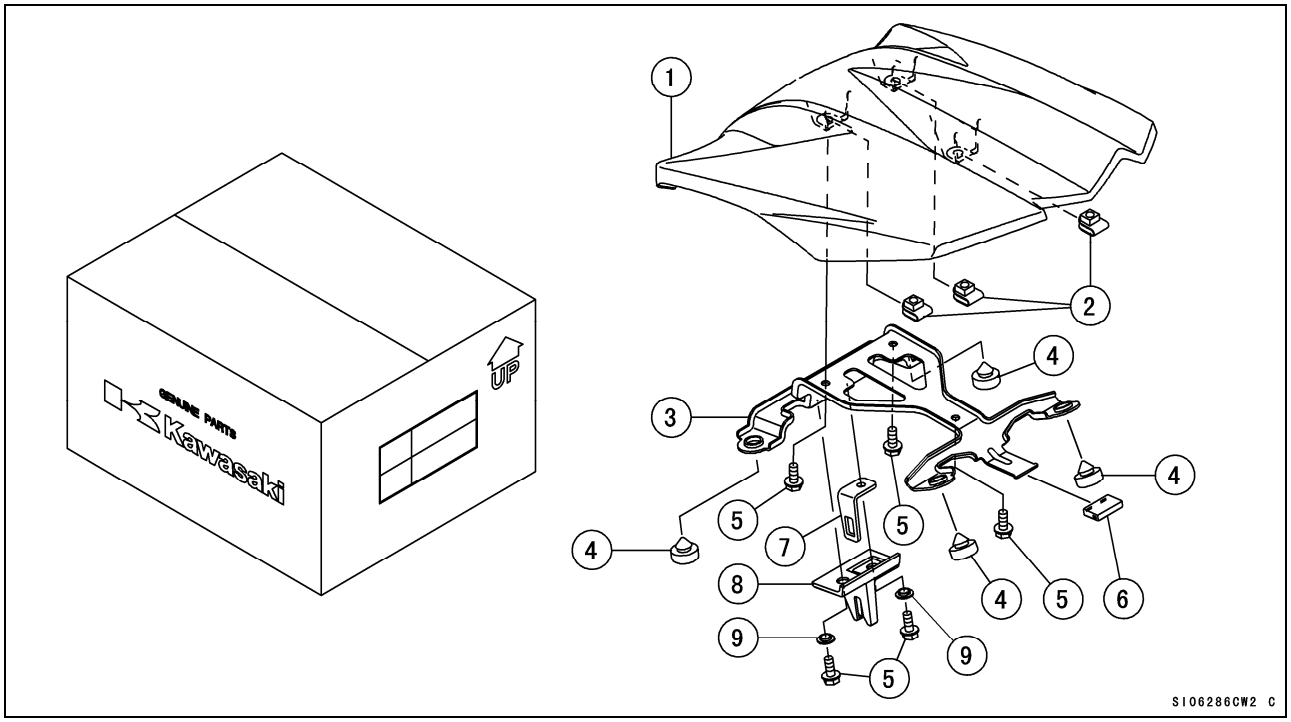

Refer to the service manual for detailed procedures.

Installation Instructions


Assembly Procedure

NOTE


○ *In order to protect the single seat cover from being damaged, do the work on a soft material such as cloth.*

- Put the single seat cover [1] upside down.
- Insert the nuts [2] on the single seat cover as shown in the figure.


○ The thread side of the nut faces single seat cover.

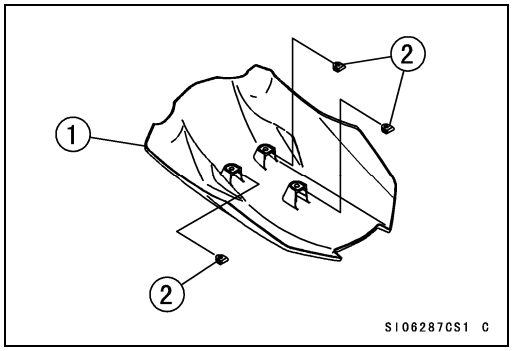


- Install the dampers [4] [6] on the bracket [3] correctly.
- Install the bracket-lock [7], cover [8] and collars [9] on the bracket with the bolts [5].

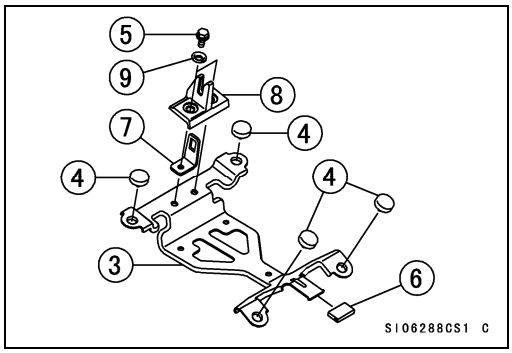


- Install the bracket assy [A] in the single seat cover [1] with the bolts [5].

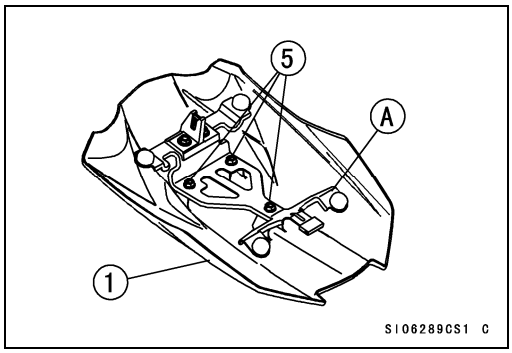

- Insert the ignition switch key [A] into the seat lock.
- Pull up the front part of the rear seat [B] while turning the key clockwise, and remove it forward.

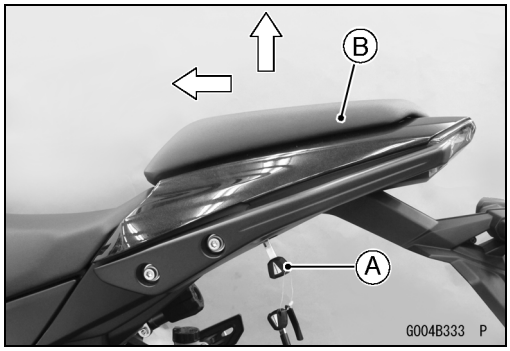

- Insert the hook portion [A] of the bracket assy under the rear frame [B].
- Insert the bracket-lock [7] into the latch hole [C].
- Push down the front part of the single seat cover until the lock clicks.

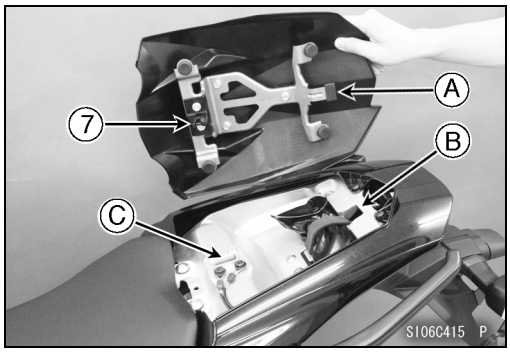

NOTE

- *Pull up the front end of the single seat cover to make sure it is securely locked.*
- *To remove the single seat cover, pull it forward horizontally.*

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Please check / adjust all screws in regular intervals.

© 2013 Kawasaki Heavy Industries, Ltd.
P/No. 99929-0855