


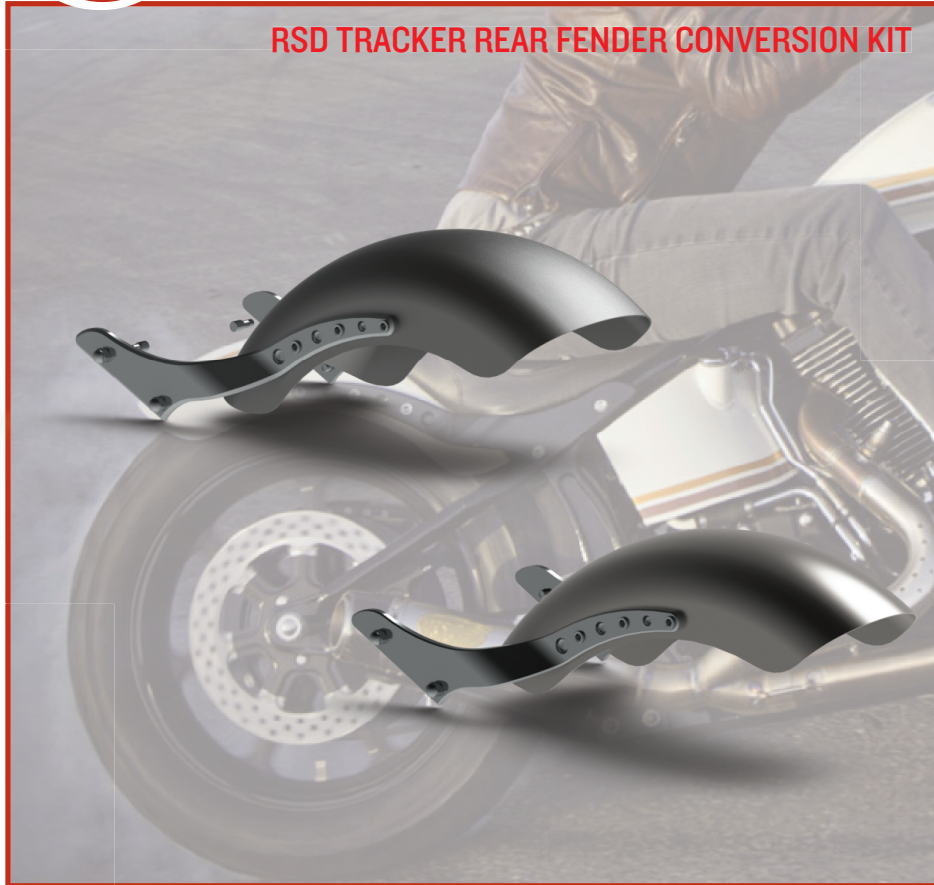


RSD TRACKER REAR FENDER CONVERSION KIT



RSD TRACKER REAR FENDER CONVERSION KIT INSTALLATION

1. Turn your motorcycle off, place securely on a lift or side stand.
2. Remove stock HD fender, strut covers, seat and tail light. **NOTE:** Do not cut any wiring.
1990 - 2007 SOFTTAIL: Frame struts must be cut off prior to installation, use RSD struts as a template.
 - Use a reciprocating saw / sawzall cut the struts off and clean up the cuts using a grinder.
 - Clean cut areas and paint the exposed area to prevent corrosion.
3. Install the RSD struts using the supplied studs. Do not tighten down until fender is installed. Use high strength thread locking compound. Repeat on other side.
NOTE: Additional stud hardware is included for alternative applications
 - Reducer studs: Softails 1990-2006 - Straight studs Softails 2006-present

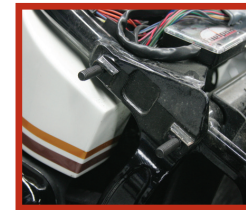

4. Install the RSD fender using six button head bolts and washers. Apply high strength thread locker and torque to 25 ft-lbs.
NOTE: Fender holes are oversized to allow for additional fender adjustment.
5. Tighten the four acorn nuts on the struts. Torque to 20 ft-lbs.



6. Install your RSD solo seat or RSD Vintage Seat kit and hit the road.



PRODUCT DESCRIPTION

1990 - 2007 SOFTAIL

200mm FENDER KIT

0215-2002

150mm FENDER KIT

0215-2012

200mm FENDER STRUTS ONLY

0215-2001

150mm FENDER STRUTS ONLY

0215-2010

200mm FENDER ONLY

0174-0053

150mm FENDER ONLY

0174-0056

2008 - 2013 SOFTAIL

200mm FENDER KIT

0215-2004

150mm FENDER KIT

0215-2011

200mm FENDER STRUTS ONLY

0215-2003

150mm FENDER STRUTS ONLY

0215-2009

200mm FENDER ONLY

0174-0053

150mm FENDER ONLY

0174-0056

For questions pertaining to the installation of this product, please contact the Performance Machine technical department at 1-800-479-4037. This product is manufactured in the USA by Performance Machine LLC.