



INSTALLATION

CHROME LOWER FORK COVERS for VICTORY

7123

THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Lower Fork Cover
- 1 Left Lower Fork Cover
- 1 Right Fork Deflector
- 1 Left Fork Deflector
- 1 Hardware Kit containing:
 - 2 Centering Bungs
 - 2 O-Rings
 - 2 M6 X 1.0 X 8MM Set Screws
 - 4 M5 Flat Washers
 - 4 M5 X 0.8 X 16MM Button Socket Cap Screws
- 1 Installation Instructions

NOTICE

This copy of installation instructions contains important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

TOOLS SUGGESTED

Set of Metric hex wrenches

NOTE:

In the following instructions, left and right may be referred to as "clutch-side" (left) and "brake-side" (right) for clarity.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.





kuryakyn.com

BIKE PREP:


- STEP 2** Carefully remove the amber fork reflectors from both forks. They will not be reused. Slide both of the OEM fork deflectors up (1), then gently pull them off the forks (2). PIC 1 Set them aside; they will not be reused.

ASSEMBLE THE MOUNTING HARDWARE:

- STEP 3** Carefully slide one of the included O-rings over one of the Centering Bungs. PIC 2 Ensure the O-ring locates in the groove in the Bung. Repeat for the other Bung.
- STEP 4** Lube the O-ring with a shot of glass cleaner, then insert the Centering Bungs into the recessed screw holes in the bottom of the forks as shown in PIC 3. Ensure the O-rings stay in the grooves and push the Bungs in until they contact the bottom of the forks.

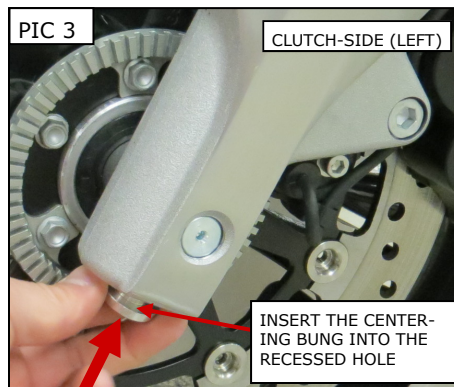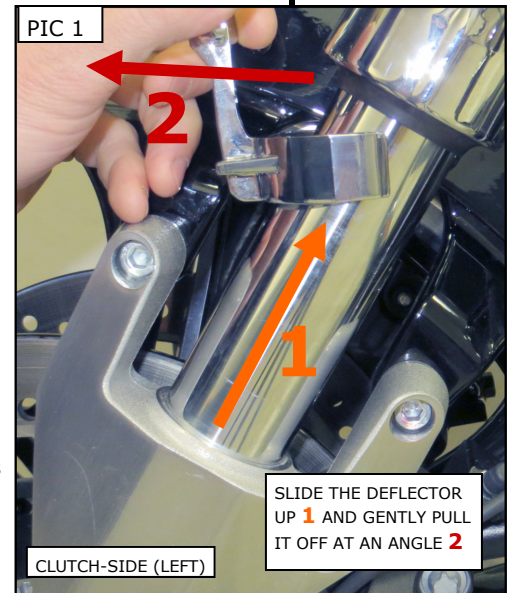

- STEP 5** Put one of the included Flat Washers over one of the M5 screws. PIC 4 Repeat for the other screws. Set the screws within arms reach of the work area.
- STEP 6** Insert one of the included Set Screws into the bottom of both of the Lower Fork Covers. Thread the Set Screw into the cover until it is just below the surface of the weldnut. PIC 5

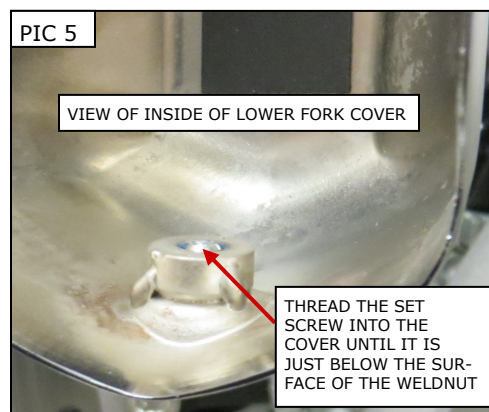

-cont.-

INSTALL THE FORK COVERS:

Küryakyn®

STEP 7 Determine the clutch-side (left) and brake-side (right) Fork Deflectors and Lower Fork Covers. PIC 6

STEP 8 Clip the clutch-side Fork Deflector over the lower fork tube (1). Spin it clockwise until the screw holes are facing the outside (2), then slide the Deflector down (3) as shown in PIC 7.

STEP 9 Position the clutch-side (left) Lower Fork Cover over the lower portion of the fork. PIC 8

STEP 10 Secure the Lower Fork Cover to the Fork Deflector with two of the screws from **STEP 5**. Leave the screws snug for now.

STEP 11 Turn the Set Screw (in the bottom of the Fork Cover) clockwise until it contacts the Centering Bung. While turning the Set Screw, push in on the bottom of the cover until you feel the Set Screw "center" in the Bung. Leave the Set Screw snug for now.

NOTE:



Ensure that the ABS sensor wires are free and clear of the clutch-side Fork Cover. Loosen the two top screws and gently "twist" the Fork Cover to achieve proper clearance between the fender and fork cover. Re-tighten the screws.

STEP 12 Ensure that there is clearance between any moving and stationary parts, then tighten the two screws from **STEP 10**. PIC 8

STEP 13 Tighten the Set Screw from **STEP 11**.

STEP 14 Repeat **STEPS 8 through 13** for the brake-side (right).

STEP 15 Ensure that all fasteners are tight and that the Covers and Deflectors will not interfere with the proper operation of the motorcycle **BEFORE** riding. Roll the bike and compress the front suspension to confirm clearance of all moving parts.

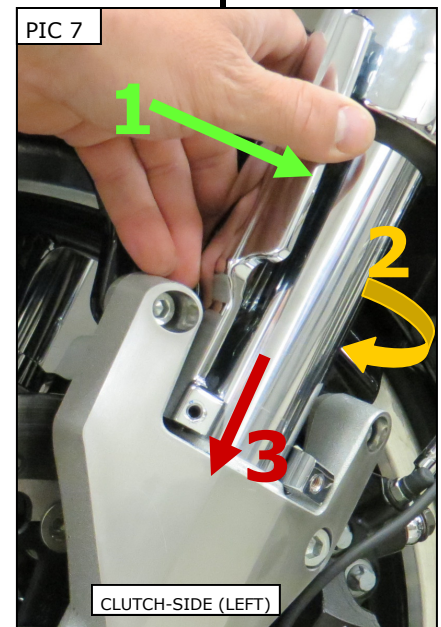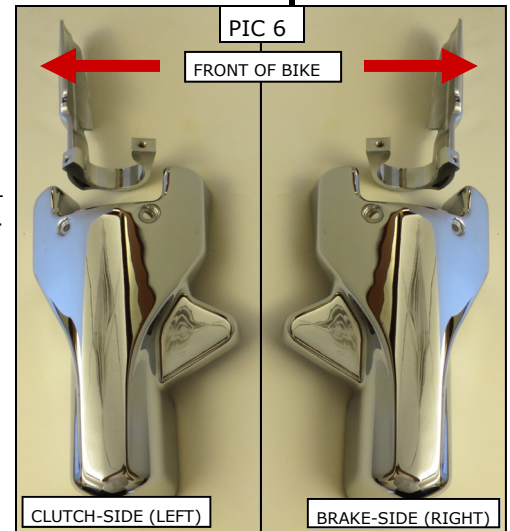

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance is required on all fasteners.

**PAGE
3**

Ride On!

CHROME LOWER FORK COVERS for VICTORY

INSTALLATION