

# BMW R NINE T 2014-15

## ONE PIECE MOUNTING SUGGESTIONS



**HARDWARE:** 6mm x1 x 40mm socket head cap screw  
6mm zinc washer  
13mm plastic spacer


**TOOLS:** Tools needed: T-30 Torx wrench  
5mm Allen wrench

### REMOVAL OF STOCK SEAT:

1. Remove the Torx bolt and washer from under the fender below the passenger seat using a T-30 Torx bit.
2. Lift passenger seat up and back to disengage from the fender.
3. Release latch at the rear of the stock solo, and lift back and up to remove from the frame.
4. Remove the two Torx bolts and washers holding the handstrap to the frame and set aside. This hardware will be used to mount your RSD seat.
5. Remove the handstrap, and replace the Torx bolts into the seat mounting bracket and into the frame. Tighten securely.

### INSTALLATION OF RSD SEAT:

1. Engage the front brackets of the RSD seat under the frame mounts, and then pivot the seat down toward the frame.
2. Position the plastic spacer between the seat and the fender. Place the supplied chrome washer onto 6mm x 40mm Allen bolt, and push it up under and through the fender, through the plastic spacer, and thread it into the seat mount. Secure with a 5mm Allen wrench.

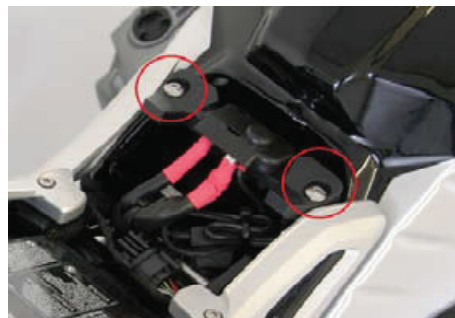

*If the front of the seat is not tight in the front mount or if the rear bolt will not line up, the motorcycle's front mounting bracket can be adjusted by loosening the two Torx screws with a T-30 bit and repositioning the bracket. Re-tighten the Torx screws securely before mounting.*