


MOUNTING INSTRUCTIONS

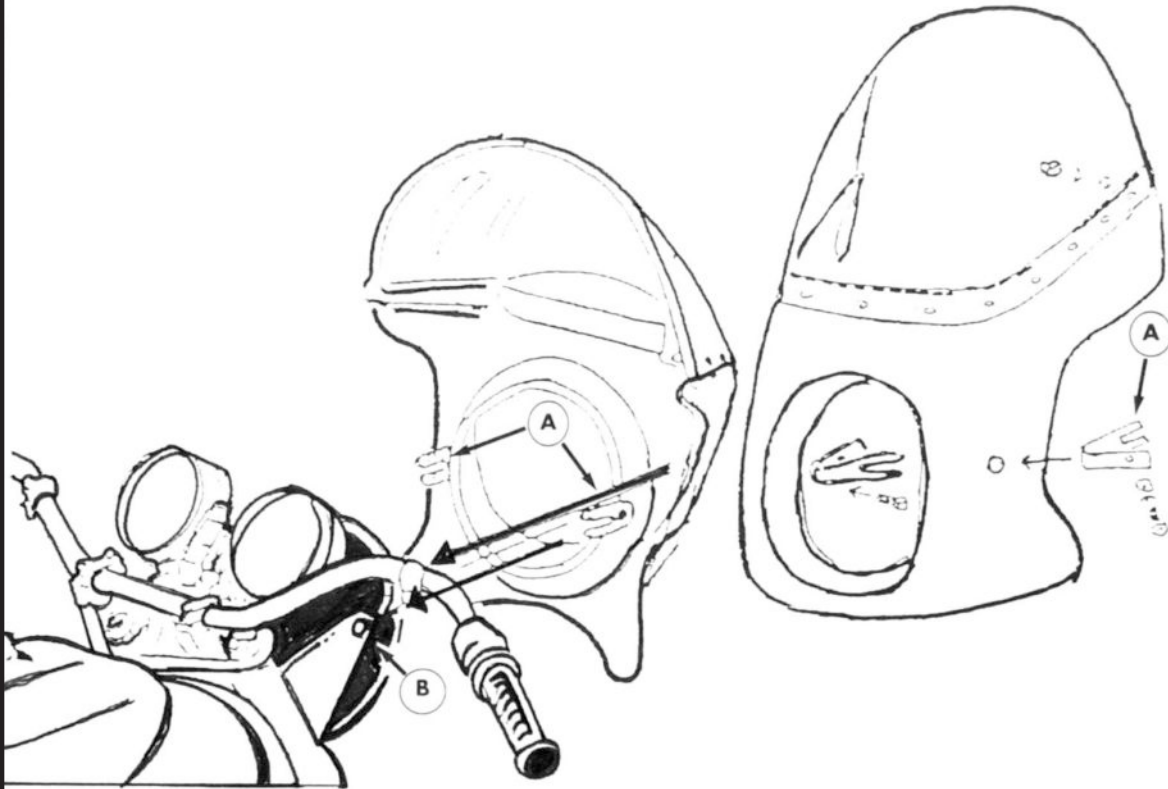

Attaching Screen To Fairing:

1. Place screen on fairing body, then attach with screw, washer and nut. **DO NOT TIGHTEN.** After all points are attached, start to tighten all mounting screws until flush, **DO NOT OVER TIGHTEN.**

Attaching Fairing to Motorcycle:

1. Attach Headlight brackets to fairing (A)
2. Loosen Headlight Bolts. (B)
3. Slip fairing Headlight brackets into headlight side bolts
4. Tighten all mounting points until fairing is flush at all points, and adjust as necessary.
5. Now tighten all nuts and screws.
6. Ride motorcycle for a short ride, and recheck all nuts and screws to make sure they are **SECURE**