




2000 Ducati 900SS / 750SS US Models Only

Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 1 Velcro® Strip
- Alcohol Swab





The ignition MUST be turned OFF before installation!


You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com




PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


Dynojet Research 2191 Mendenhall Drive North Las Vegas, NV 89031 (800) 992-4993 www.powercommander.com

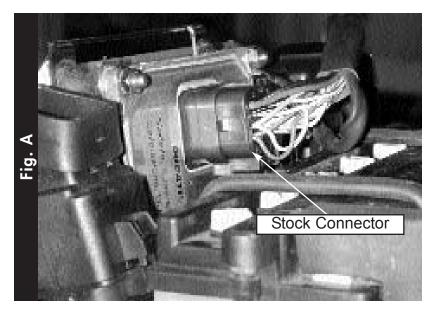

- 1 Remove the seat.
- 2 Lift fuel tank.
- Unplug connector from ECU (Fig. A).

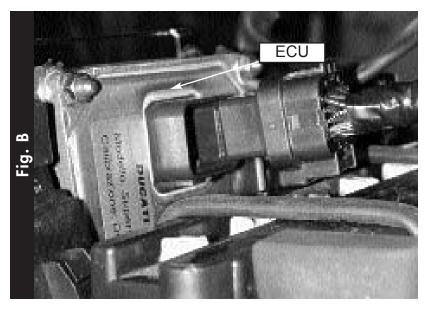

4 Plug male connector from PCIII into ECU (Fig. B).

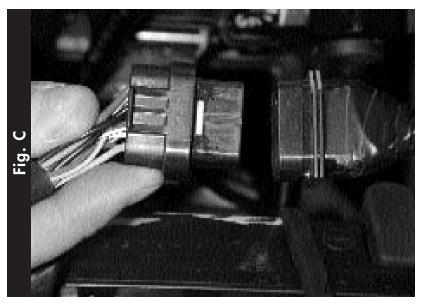

- 5 Plug female connector from PCIII into male connector from original harness (Fig. C).
- 6 Run PCIII cable under fuel tank and along frame rail to the area under the seat.



Mount PCIII unit to rear most area under seat using provided self adhesive velcro (Fig. D).