

Light Mount Honda Varadero XL1000V 2003-

LAH.01.818.10000

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5	3.5 ft-lbs (5 Nm)
M6	7 ft-lbs (9.6 Nm)
M8	13 ft-lbs (18 Nm)


All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Twisted Throttle LLC 1080 Kingstown Rd, Building 1 Peace Dale, RI 02879 phone: 401.284.4200 fax: 401.223.6955 www.twistedthrottle.com *Components are numbered in order of assembly.





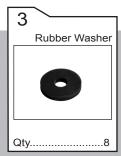

Step One: Remove the windscreen. Mount the left light bracket using one of the countersunk screws (2) in the bottom hole of the light bracket. Be sure to place the rubber washer (3) under the bracket. Repeat this step for the right side.



Step Two: Place the rubber washer under the remaining top holes in the light brackets. Place the four lens head screws (4) in the nylon inserts in the windscreen. Before tightening the four screws make sure you place two rubber washers under the windscreen hole that does not overlap the light brackets.

Note: You can still use both windscreen heights; you simply have to switch the countersunk screw to either the top or bottom hole in the light brackets to mount the windscreen in the lower or upper positions respectively.

