

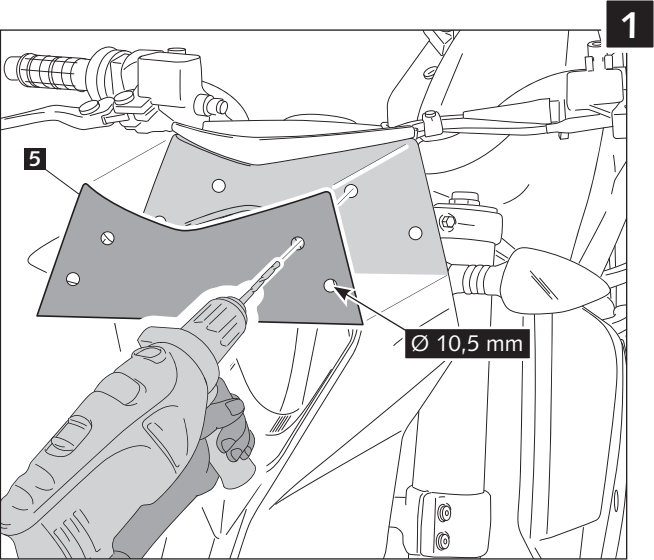


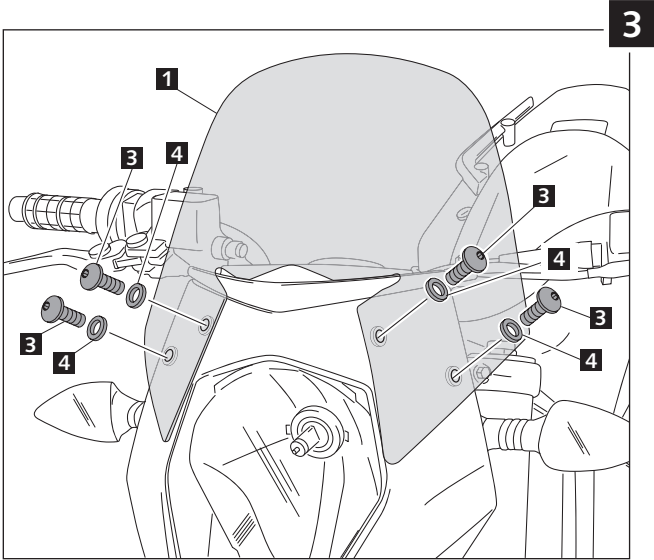

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS

CARENABRÍS ADAPTABLE A - WINDSHIELD ADAPTABLE TO
KTM 690 SUPERMOTO 07'-11'

Ref.: 5013

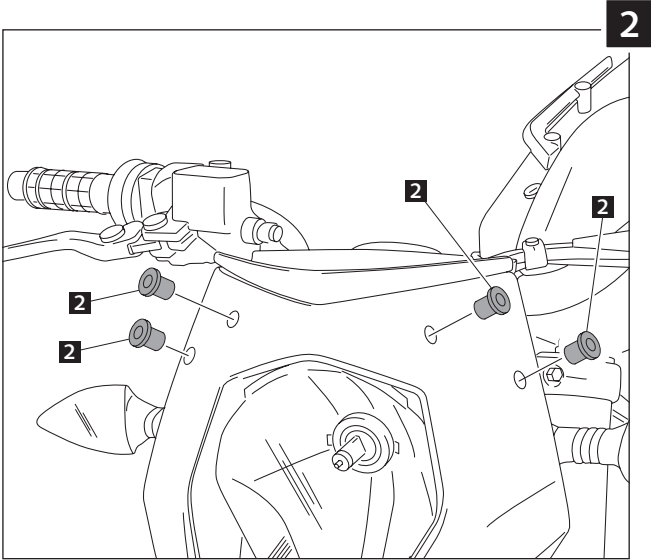

ID.		DESCRIPCIÓN	DESCRIPTION	QTY.
1		Pantalla	Screen	1
2		Tuerca M5 silemblock	M5 nut well nut	4
3		Tornillo allen M5x16 ISO 7380	M5x16 ISO 7380 allen screw	4
4		Arandela nylon $\varnothing 5 \times \varnothing 11 \times 1$	$\varnothing 5 \times \varnothing 11 \times 1$ nylon washer	4
5		Plantilla	Template	1