



TWISTED THROTTLE.COM
Bolt-On Touring Accessories that fit YOUR motorcycle!

Slipstream Tail Bag

BC.HTA.84.807.10000.B

Mounting Instructions

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts, and nuts.

Twisted Throttle LLC
 1080 Kingstown Rd, Building 1
 Peace Dale, RI 02879

phone: 401.284.4200
 fax: 401.223.6955
 www.twistedthrottle.com

1
 Slipstream



Qty.....1

2
 Water Proof Liner



Qty.....1

3
 Soft Ties



Qty.....4

4
 Bungee Straps



Qty.....4

5
 Backpack Straps




Qty.....2

Important

Luggage on the vehicle affects handling. Examine the correct tightness of the all attachment points. Make sure none of the attaching straps come in contact with the exhaust system (min distance 5cm).

Mounting with the soft tie straps

To install the soft tie straps loop the strap around a secure fixing point on your bike. Feed the cut end through the loop end and pull tightly. Feed the strap up to the cam buckle on the outside of the bag and pull until tight. Roll the excess strap up and tuck under the elastic band below the cam buckle.

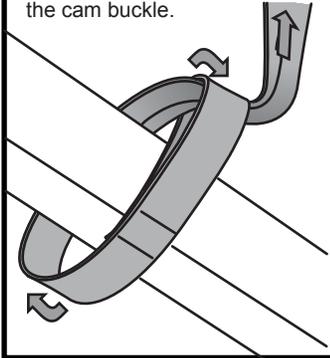

Mounting with the bungee straps

The bungee straps are ideal for quick attachment and removal from your bike. You can customize the length of the straps. To remove the plastic hooks slide the collar back and pull the hook off. Cut the bungee to length press the end into the plastic hook and slide the collar back over the hook. Make sure to test the strength of the connection before mounting the bag to your bike.



**TWISTED
THROTTLE**.COM

Bolt-On Touring Accessories that fit YOUR motorcycle!