

6947

BAHN SADDLEBAG LATCHES — CHROME

INFORMATION AND SUPPORT

INFO@BAHNPRODUCTS.COM

866 294 2827

⚠ WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Right Bahn Saddlebag Latch — Chrome
- 1 Left Bahn Saddlebag Latch — Chrome
- 1 Installation Instructions

YOU WILL ALSO NEED:

Torx drivers, set of combination wrenches

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

STEP 1

Read and understand all **STEPS** in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn **IGN OFF**. Put the bike on its center stand (if equipped) or secure it in a motorcycle wheel chock. Allow the engine and exhaust system to cool.

NOTICE

Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 2

Open the saddlebag lid, and remove the two Torx head screws that secure the tether strap to the lid shown in **PIC 1**. Set these screws aside, they will be re-used.

STEP 3

Note the orientation of the lock and remove the screws that secure it to the latch assembly, remove the lock and screws, set them aside; they will be re-installed later. (see **PIC 2 on PAGE 2**)



6947

BAHN SADDLEBAG LATCHES — CHROME

INFORMATION AND SUPPORT

INFO@BAHNPRODUCTS.COM

866 294 2827

STEP 4 Remove the nut shown in **PIC. 2**, it will not be used again.


STEP 5 Close the lid and hold onto the faceplate while removing the two Torx screws shown in **PIC 3**. The screws will be used again.

STEP 6 Place the Bahn Saddlebag Latch on the latch assembly, align the holes; insert two of the Torx screws through the holes of the latch; do not fully tighten yet.


STEP 7 Open the lid and install a screw in the front hole (shown in **PIC 2**) do not fully tighten the screw at this point.

STEP 8 Re-install the lock, making sure to install it in the correct orientation. Secure with the two screws that were removed in **STEP 3**.

PIC 2

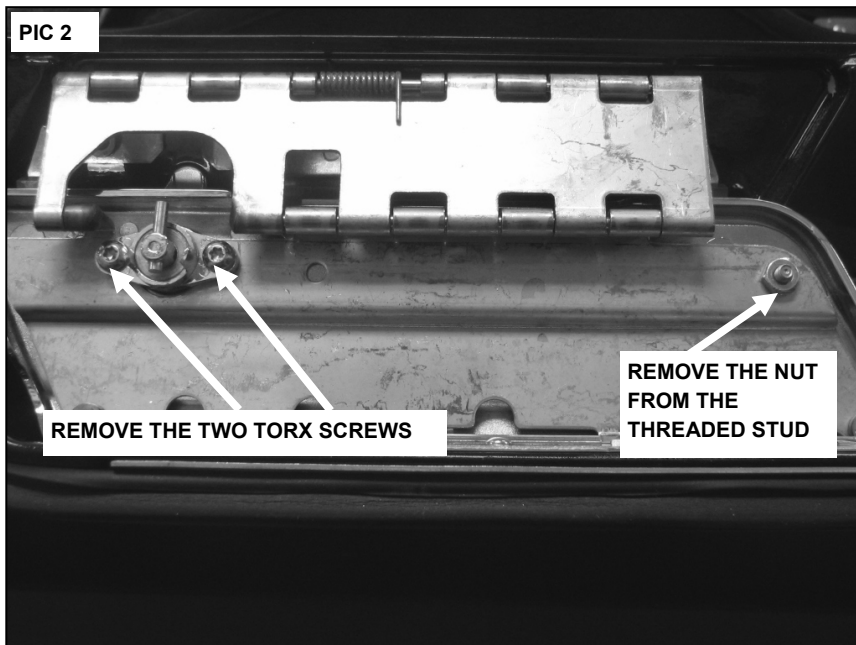

PIC 3

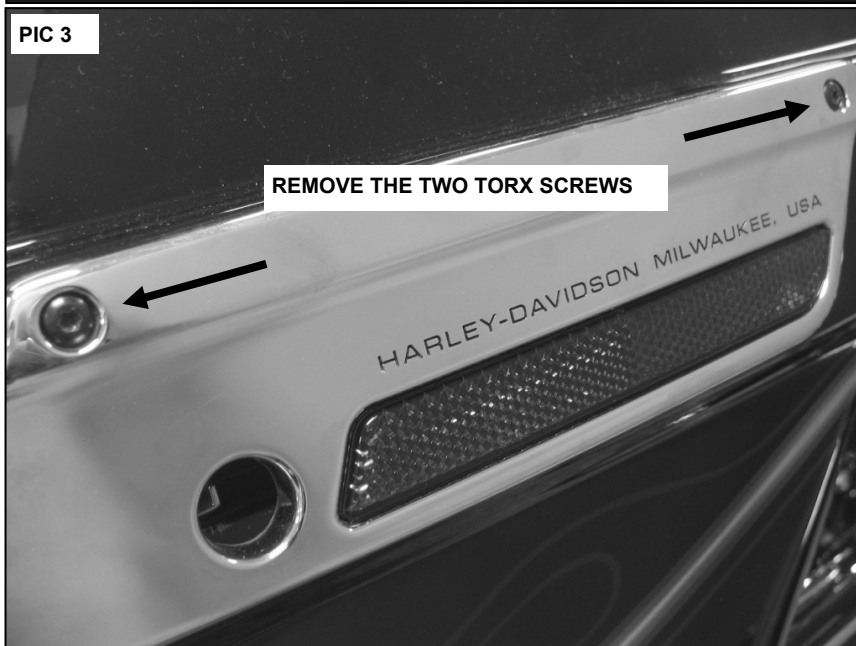



6947	BAHN SADDLEBAG LATCHES — CHROME	
INFORMATION AND SUPPORT	INFO@BAHNPRODUCTS.COM	866 294 2827

STEP 9 Secure the tether strap to the lid, using the two screws that were removed in **STEP 2**.

STEP 10 Fully tighten the screws from **STEP 6, 7 & 8**.

STEP 11 Check to make sure that the lid, latch and lock all function properly.

NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials & workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

1. Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
2. The product must be properly installed, maintained & operated under normal conditions.
3. Kuryakyn shall not be liable for any consequential & incidental damages, including labor & paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn & a customer.
4. Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
5. Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'s contained in components of Kuryakyn products will be warranted for defects in materials & workmanship for 3 years from the date of purchase where as all other components shall be warranted for one (1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
6. Exhaust systems are warranted for manufacturing defects only. There is no warranty on exhaust pipes & mufflers with regard to any discoloration. Discoloration or "blue-ing" is caused by tuning characteristics, exhaust timing, carburetor jetting, overheating, etc. & is not caused by defective manufacturing.
7. Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer & where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.
8. Merchandise purchased directly from internet auction sites or any other third party seller is considered sold as is & shall not carry a Kuryakyn warranty. All warranty claims must be directed to the original seller. If unsure please contact the seller to verify they are an authorized Kuryakyn retailer.