



www.GRAVESPORT.com

Toll Free: 800-867-6480

Fax: 818-902-3821

7629 Densmore Avenue
Van Nuys, Ca. 91406

EXY-14FZ09-FSx

Full Stainless Exhaust System 2014 YAMAHA FZ-09

PARTS LIST

Head Pipes	3	Hanger Bracket	1	8mm Lock Nuts	3
Tail Pipe	1	Carbon Hanger Strap	1	8mm Washer	1
Silencer	1	Lambda Bolt & Washer	2	8 x 25mm Hanger Bolt	1
				Springs	7


New OEM exhaust gaskets (NOT INCLUDED**) are recommended whenever installing or re-installing an exhaust system.*

<<<<INSTALLATION OF THIS PRODUCT SHOULD BE PERFORMED BY A QUALIFIED TECHNICIAN >>>>
<<<<<PLEASE READ INSTRUCTIONS CAREFULLY BEFORE BEGINNING INSTALLATION >>>>>


1. Remove the stock exhaust (refer to the Yamaha FZ-09 service manual). Keep the 2 bolts, 1 outside washer, and one of the black hat washers that were used for mounting the OEM catalytic converter, as well as the nuts securing the OEM head pipes, for use when installing the new exhaust system.
2. Remove the O2 sensor from the stock exhaust. Keep for re-installation.
3. Assemble the head pipes into the collector by matching the corresponding numbers on the head pipe to the collector. Install springs to secure.
4. Install the O2 sensor onto the Graves collector.
PHOTO 1



5. Using the two bolts and the black hat washer from the OEM catalytic converter, install the supplied hanger bracket behind the right rearset. **PHOTO 2**

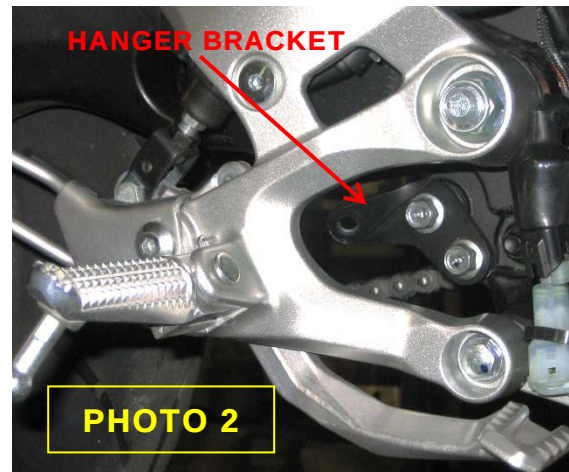

- a. Install by placing the hanger bracket in front, OEM bolts, black hat washer in top hole, supplied washer on bottom bolt and secure with the supplied lock nuts. Use an open end wrench to hold the lock nut and torque the bolts to 24.4 Nm / 18 ft lbs **PHOTO 3**

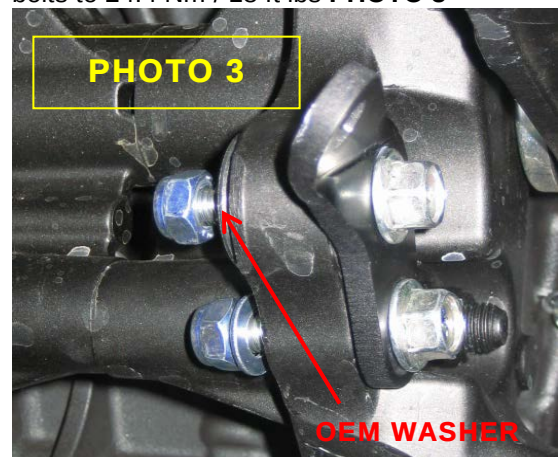


6. Install the head pipes using new gaskets. Support the system with one hand and secure all the flanges with the OEM nuts. Leave the nuts finger tight for now. **PHOTO 4**



7. Slide the carbon fiber hanger strap onto the silencer so the short side of the strap is opposite the side with the Graves sticker. **PHOTO 5**



8. Slide the silencer onto the collector until it stops. Install the spring.
9. Align the carbon hanger strap behind the hanger bracket. Slide the supplied bolt through the hanger brackets and strap holes, place the washer on the bolt and secure using the last supplied lock nut. Use an open end wrench to hold the lock nut and torque the bolt to 24.4 Nm / 18 ft lbs **PHOTO 6**

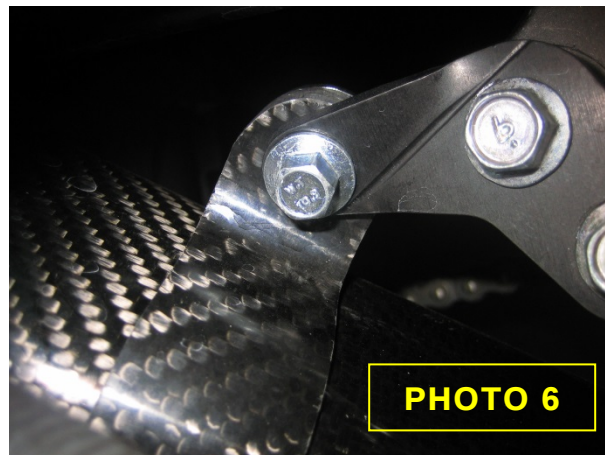

10. Torque the head pipe nuts to 20 Nm / 14 ft lbs and install springs.
11. Check the alignment of the system and all the clearances. Be sure to wipe all dirt and fingerprints from the exhaust system before starting the motorcycle.

Also available for the Yamaha FZ-09:

FSY-14FZ09-K
FZ-09 Frame Slider Kit



FEY-14FZ09-K
FZ-09 Fender Eliminator



Find these and all the new FZ-09 accessories at:

www.GRAVESPORT.com