



**INSTALLATION INSTRUCTIONS**

FUELPAC FPC (PART #66013, 66015, 66017, 66019, 66021)

**CARB EO #K-006-3**

COVERS USE ON 2014-2016 HARLEY-DAVIDSON TOURING MODELS (EXCEPT TRIKES)

# CARB EO K-006-3\*

Covers the following combination of parts when used on 2014-2016 Harley-Davidson Touring models (excluding Trikes)

HEADER	SLIP-ON MUFFLER	AIR CLEANER	ECU TUNER
16894 Power Duals	16703 Eliminator 400	71029 VO2 Naked Air Intake	66015 FPC (Eliminator 400)
16894 Power Duals	16553 OS450 Destroyer	71029 VO2 Naked Air Intake	66021 FPC (OS450)
16894 Power Duals	16455 Hi-Output	71029 VO2 Naked Air Intake	66019 FPC (Hi-Output)
16894 Power Duals	16773 Monster Round	71029 VO2 Naked Air Intake	66017 FPC (Monster Round)
16894 Power Duals	16763 Twin Slash Round	71029 VO2 Naked Air Intake	66013 FPC (Twin Slash Round)
46894 Power Duals Black	46703 Eliminator 400 Black	71029 VO2 Naked Air Intake	66015 FPC (Eliminator 400)
46894 Power Duals Black	46553 OS450 Destroyer Black	71029 VO2 Naked Air Intake	66021 FPC (OS450)
46894 Power Duals Black	46759 Hi-Output Black	71029 VO2 Naked Air Intake	66019 FPC (Hi-Output)
46894 Power Duals Black	46773 Monster Round Black	71029 VO2 Naked Air Intake	66017 FPC (Monster Round)

\* Please note that EO K-006-3 only covers the parts listed above when they are used in one of these nine enumerated kit combinations. These parts are not covered by this EO when used individually or in combination with other parts of the same type that are not listed above.

## **GENERAL WARNINGS:**

DO NOT USE WHILE ENGINE IS RUNNING

DO NOT LEAVE UNIT PLUGGED INTO MOTORCYCLE  
ONCE THE FLASHING PROCESS IS COMPLETE, REMOVE &  
STORE FOR FUTURE USE


DO NOT REMOVE WHILE FLASHING IS IN PROGRESS  
FIRST TIME FLASH MAY TAKE 2 MIN.

## **NOTICE:**


IN ORDER TO RETURN THE BIKE TO STOCK CALIBRATION, THE  
PROCESS DESCRIBED IN THIS PAMPHLET MUST BE REPEATED.

**Connect & Go Design**  
**Recalibrates ECM by Flash Tuning**  
**Increases Throttle Response**  
**Increases Power**

- 1 Locate connector on your motorcycle by identifying the 6-PIN HD-LAN connector and plug-in your FPC device

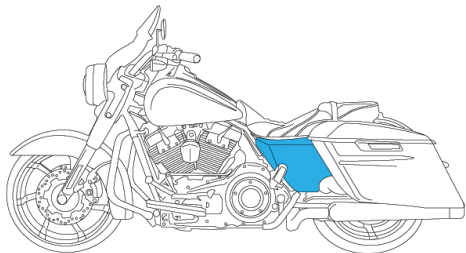

*Connector location is under the left hand side cover.*

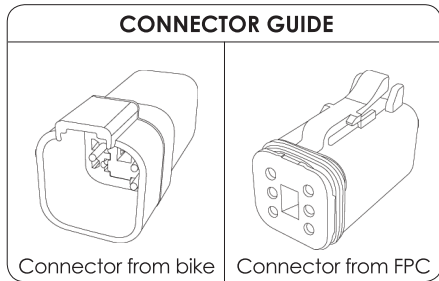

- 2** Turn ignition & handlebar run switch to the “on” position (Do not start engine)














- 3** Using the LED activity guide in this pamphlet, verify the unit is ready to flash. Press the hazard button until green & yellow LEDs begin to flash, then release (About 10 sec). FPC will automatically marry with your motorcycle.



- 4** Once LEDs stop blinking the process is complete. The status of the FPC will be shown on LEDs. (See chart below for status description)

### LED ACTIVITY GUIDE

 UNMARRIED	 MARRIED TO DIFFERENT VIN # (STOCK MAP)
 MARRIED TO BIKE (STOCK MAP)	 CURRENTLY FLASHING BIKE
 MARRIED TO BIKE (VANCE & HINES MAP)	 UNSUPPORTED MOTORCYCLE
 MARRIED TO DIFFERENT VIN # (VANCE & HINES MAP)	 ERROR

-  Indicates a solid, illuminated LED
-  Indicates an unilluminated LED
-  Indicates a blinking LED

**NOTE: ONCE FLASHING IS COMPLETE, REMOVE UNIT & STORE IN A SAFE PLACE FOR FUTURE USE. DO NOT LEAVE THE UNIT ATTACHED TO MOTORCYCLE.**