





KTM 790 Duke
Tail Tidy

Installation Instructions


Kit Contents PRN014017


- Ⓐ 1 x Reflector Kit
- Ⓑ 1 x Loom Connector
- Ⓒ 2 x Rubber Grommets
- Ⓓ 2 x 4mm Dowel Pins
- Ⓔ 2 x M5 x 16mm Capheads
- Ⓕ 3 x Male Bullet Connectors
- Ⓖ 4 x M5 x 16mm Capheads


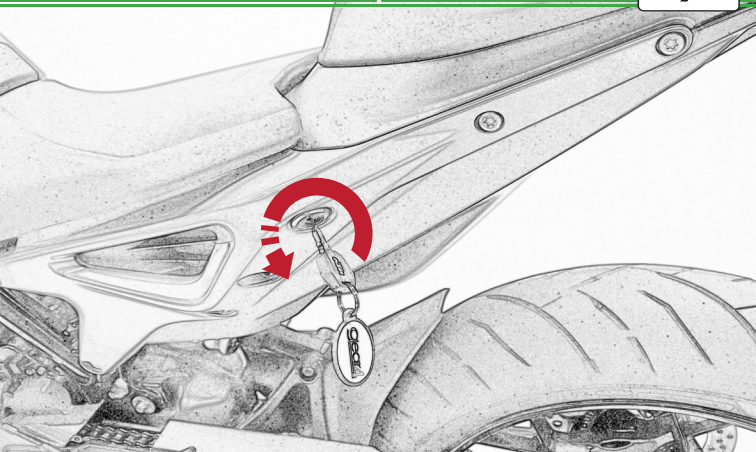


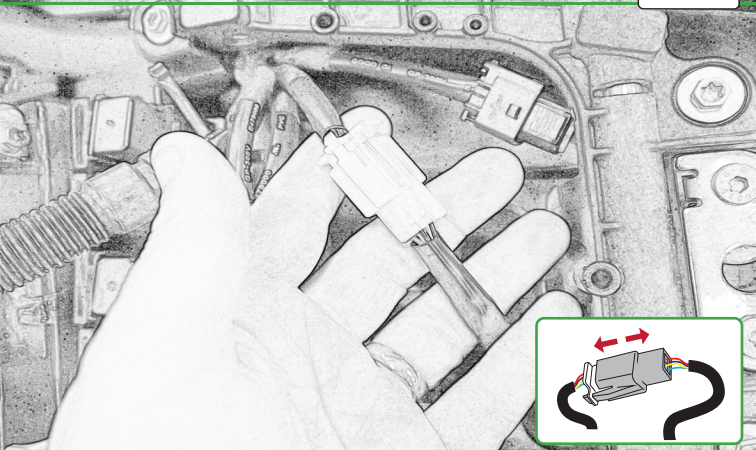




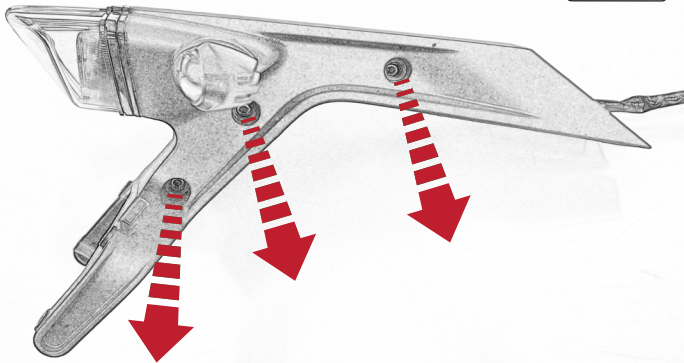


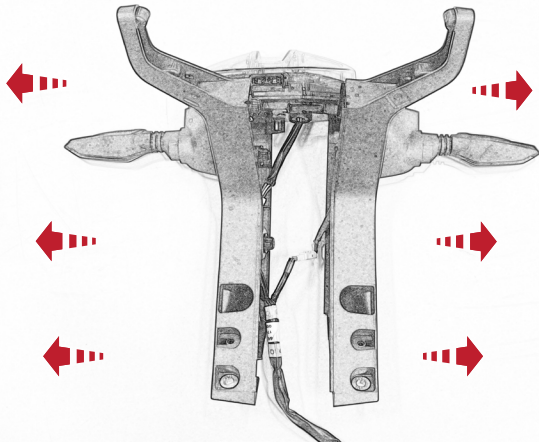

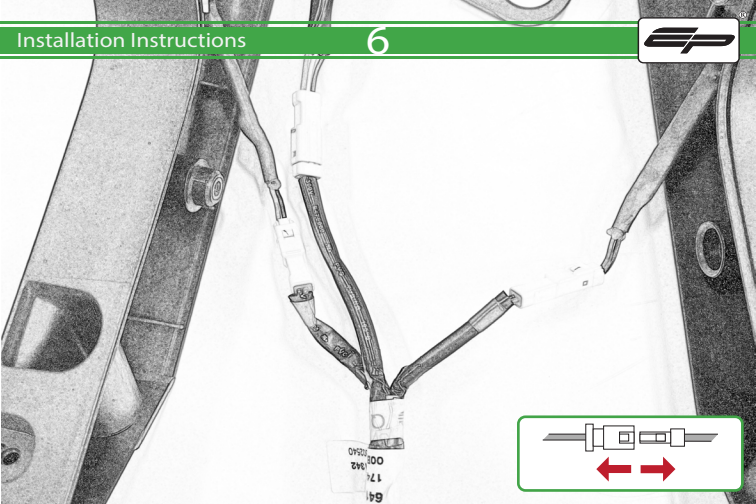


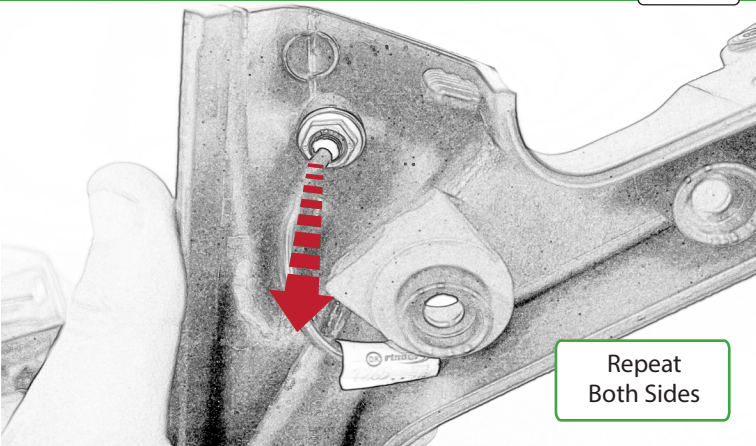


Repeat
Both Sides

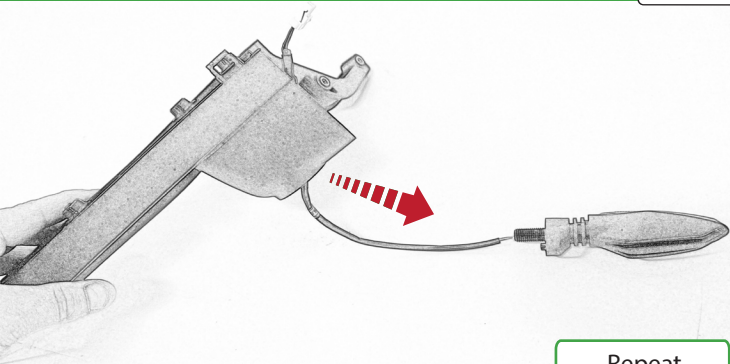


Repeat
Both Sides

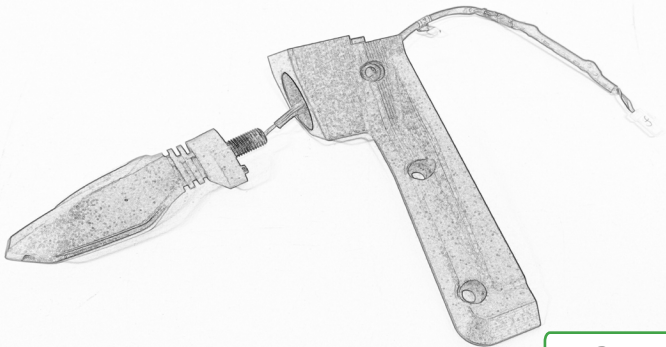


Repeat
Both Sides

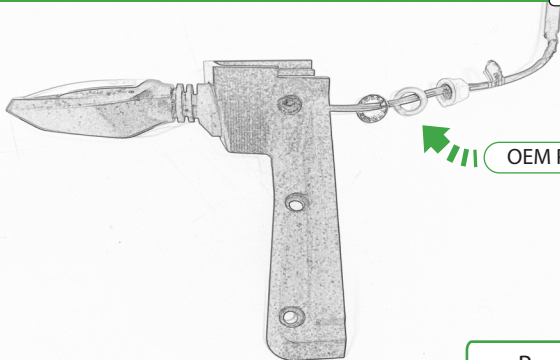



Repeat
Both Sides

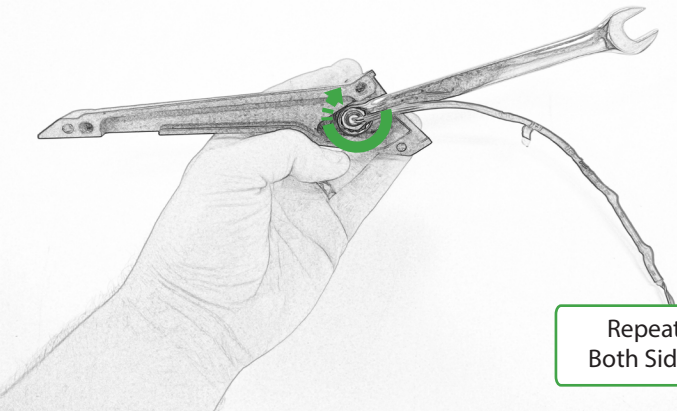


Repeat
Both Sides

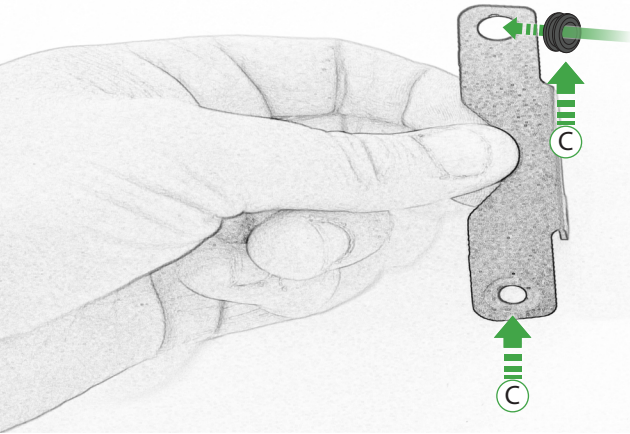

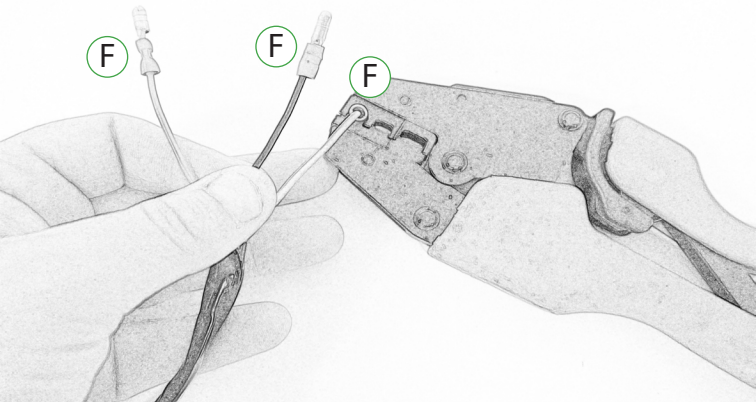


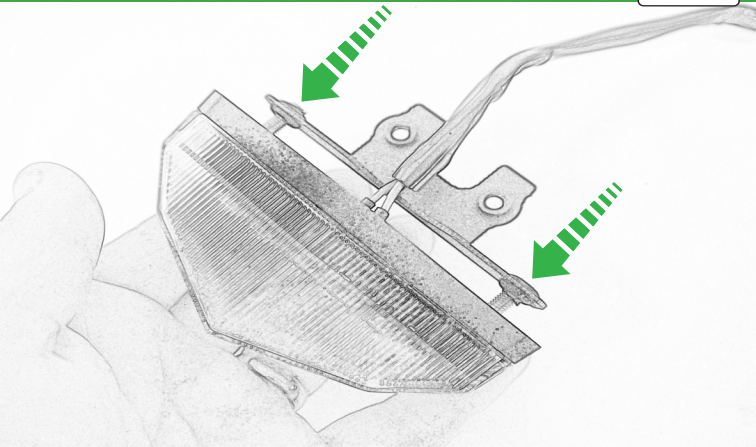


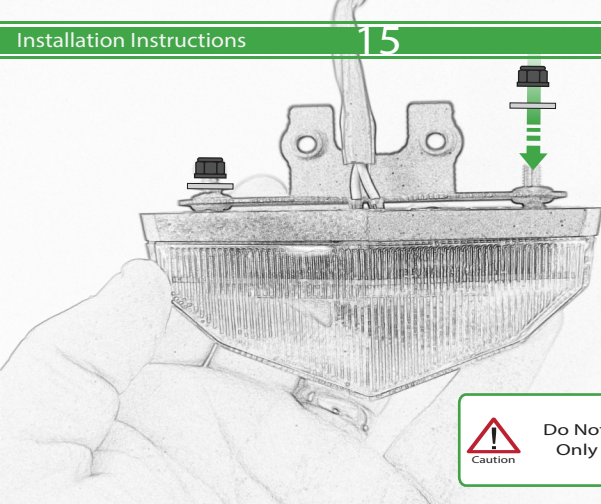



Caution

**Do Not Fully Tighten
Only Rotate 6 Full
Turns**

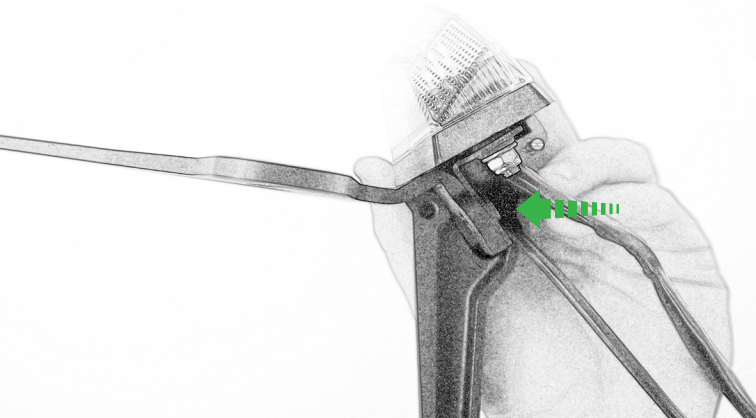


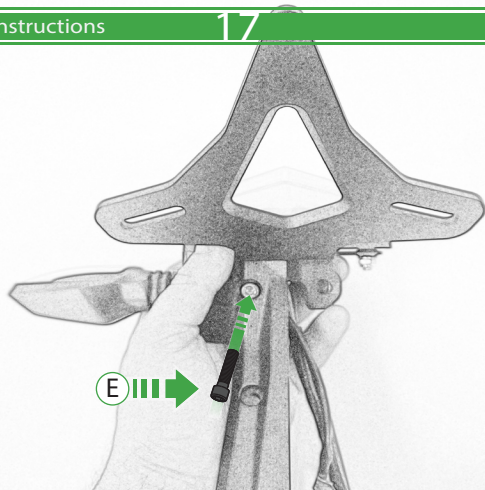

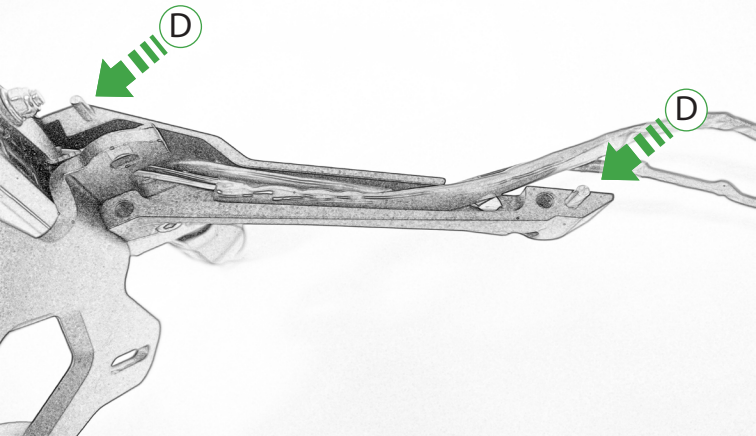


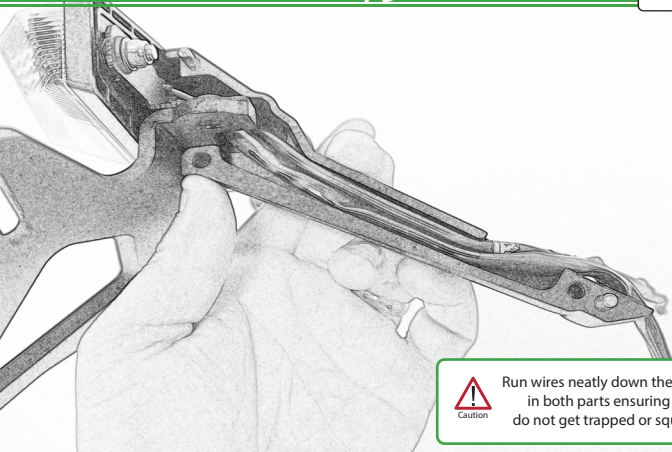



Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

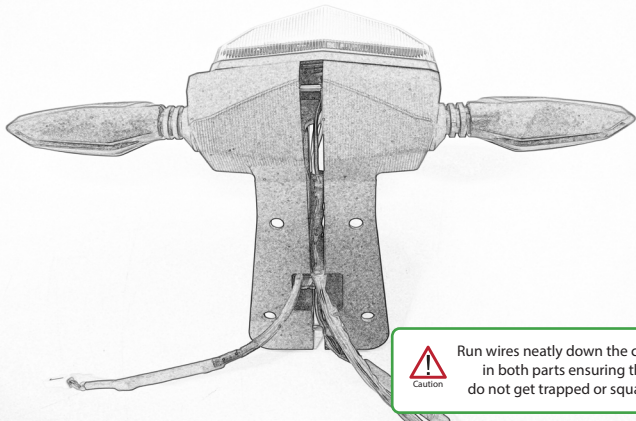



Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed


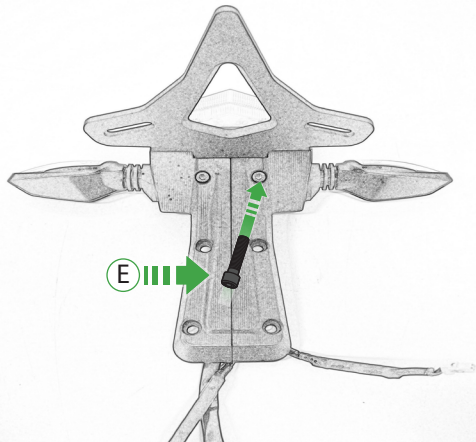



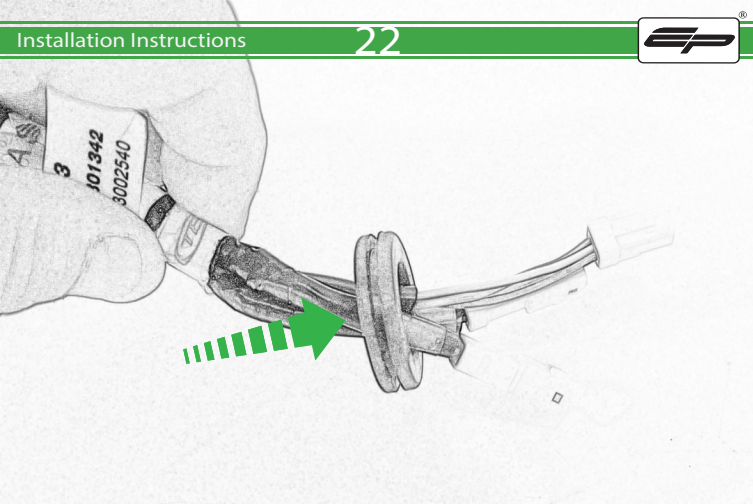


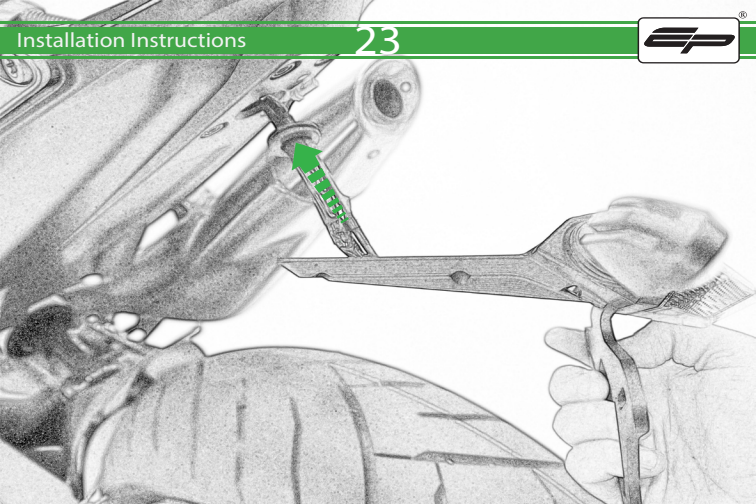

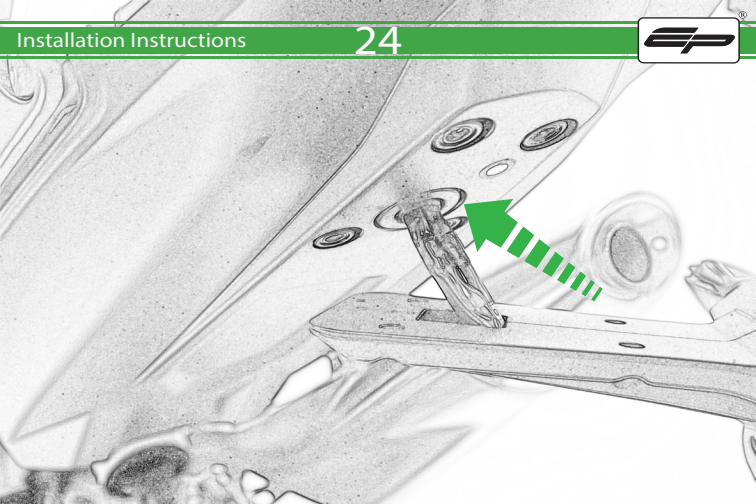


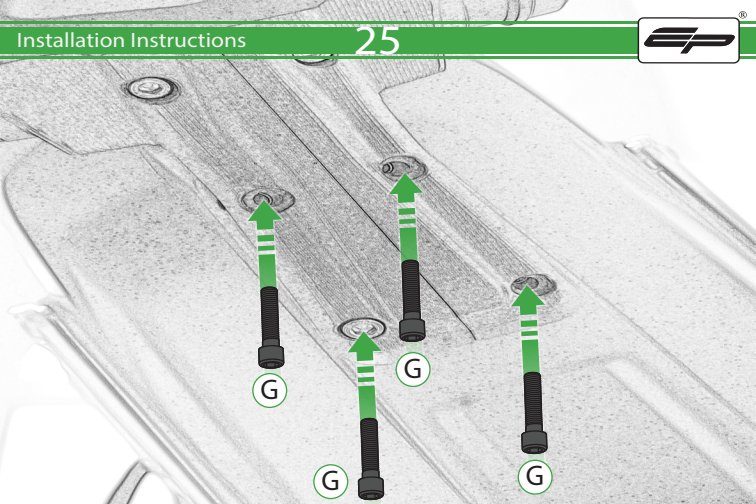

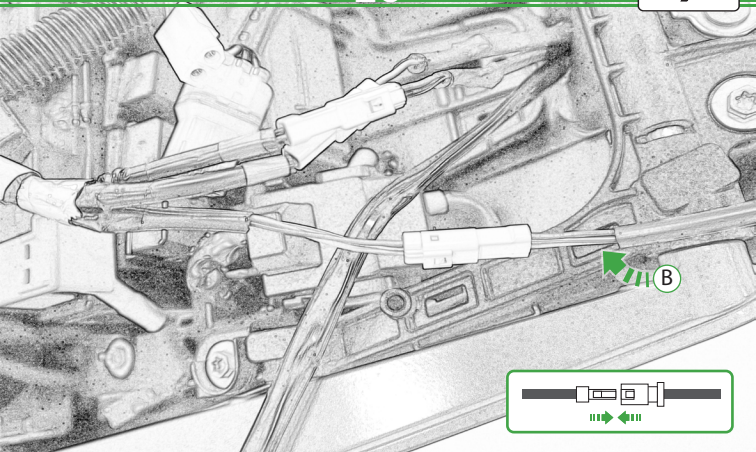

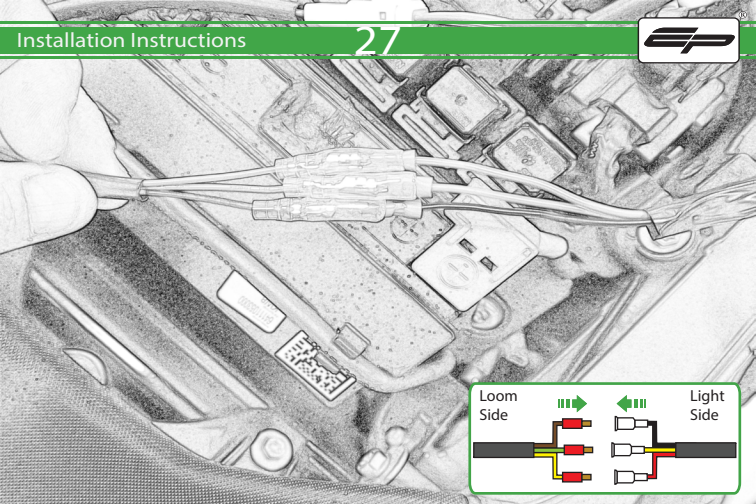



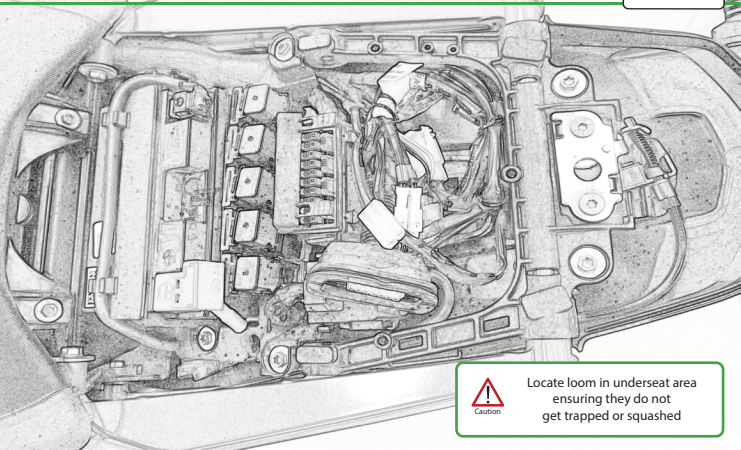

Locate loom in underseat area
ensuring they do not
get trapped or squashed




ESSENTIAL CHECKS




After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

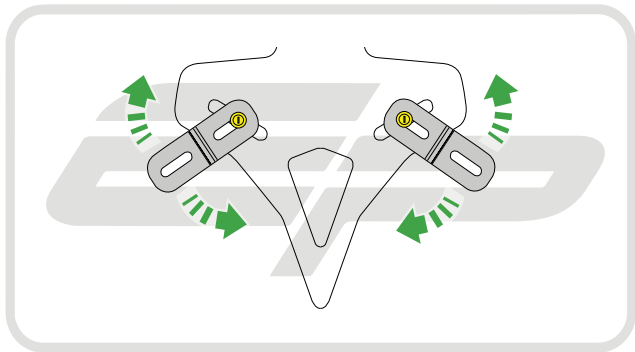

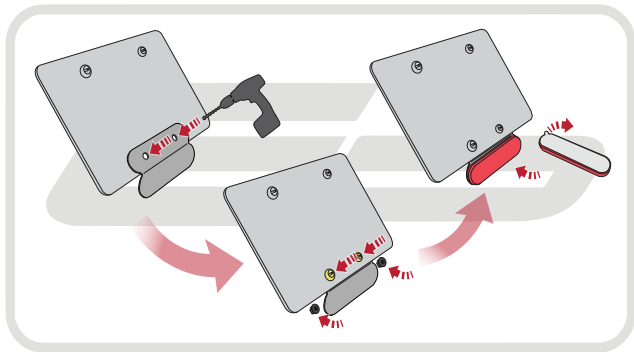



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com