




Ducati Multistrada 1260
Engine Guard


Installation Instructions





Kit Contents PRN013979


- (A) 1 x Exhaust Bracket
- (B) 1 x Header Bracket
- (C) 1 x Inner Grill
- (D) 2 x Cable Ties
- (E) 2 x Grommets
- (F) 2 x Top Hat Spacer
- (G) 3 x M6 Black Washer
- (H) 4 x M4 Flange Nuts
- (I) 5 x M6 x 12mm Black Button Head Bolts

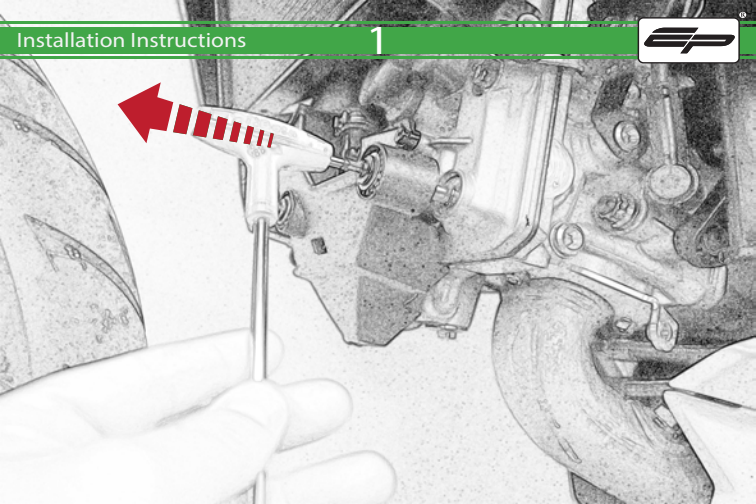

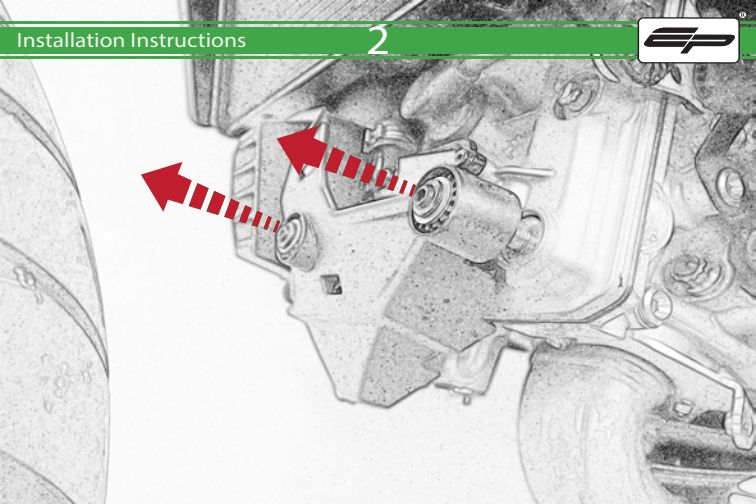





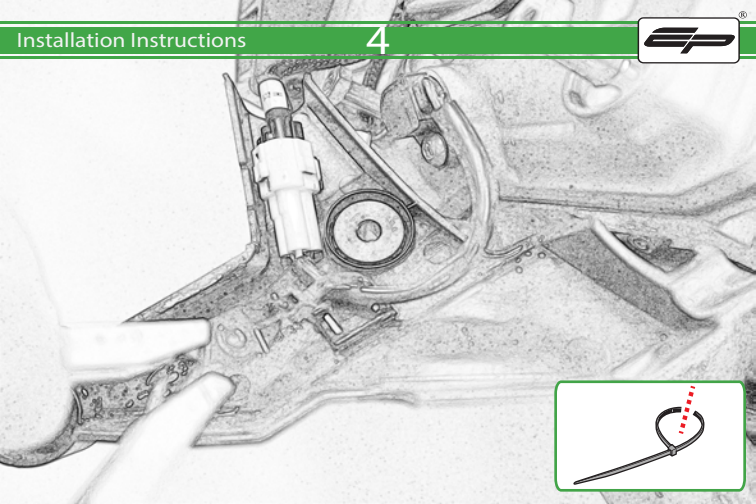


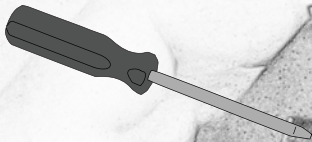


Remove Clip Using
A Screwdriver

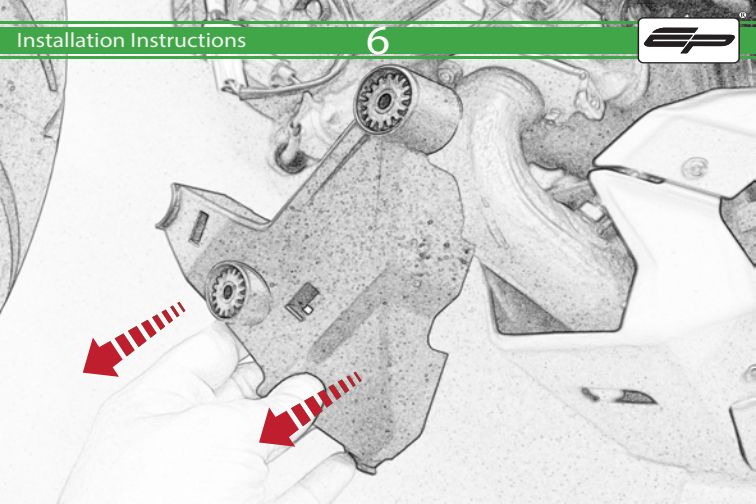


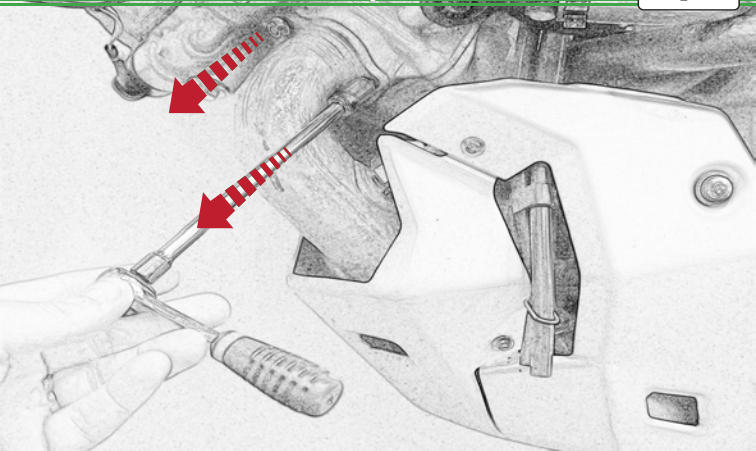


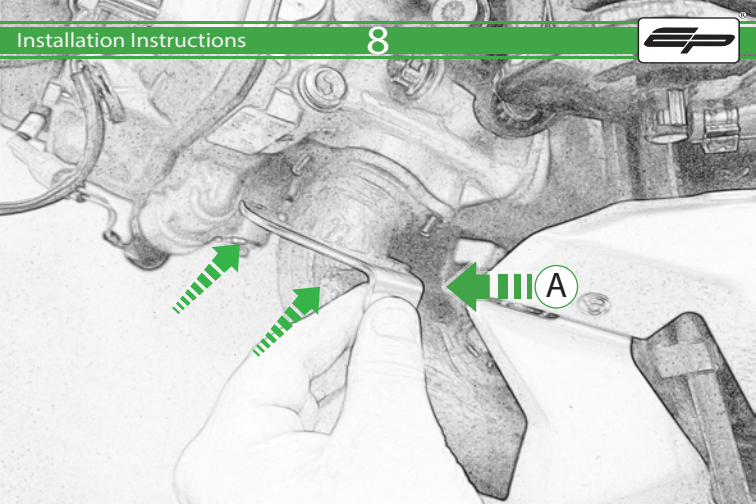



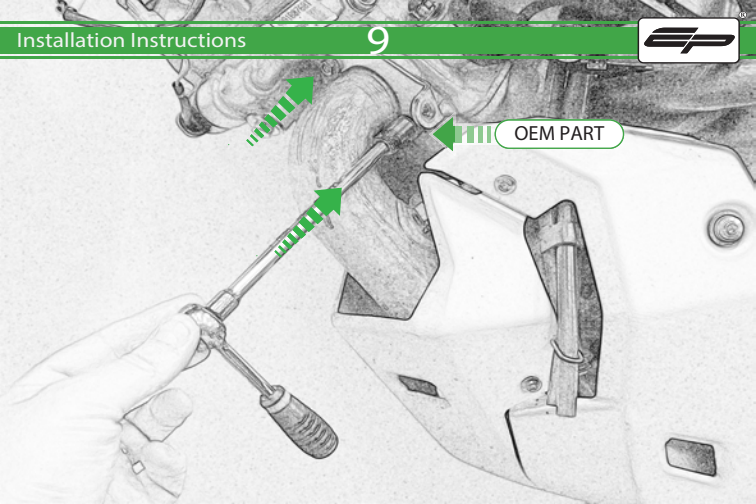



OEM PART

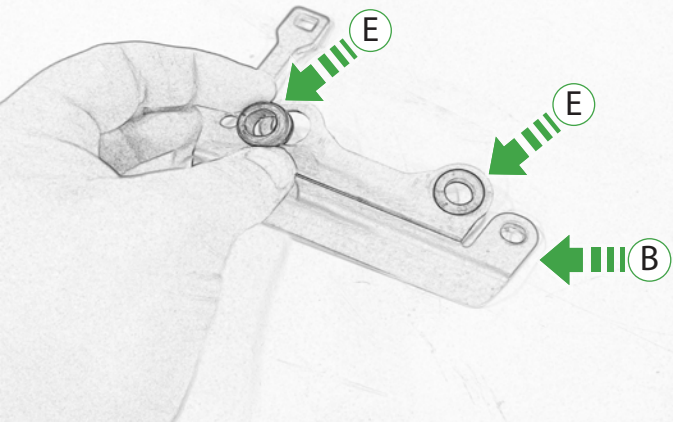

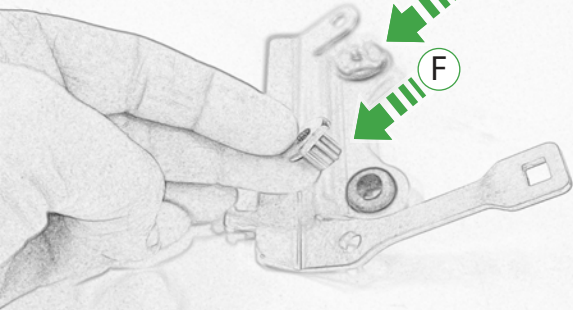

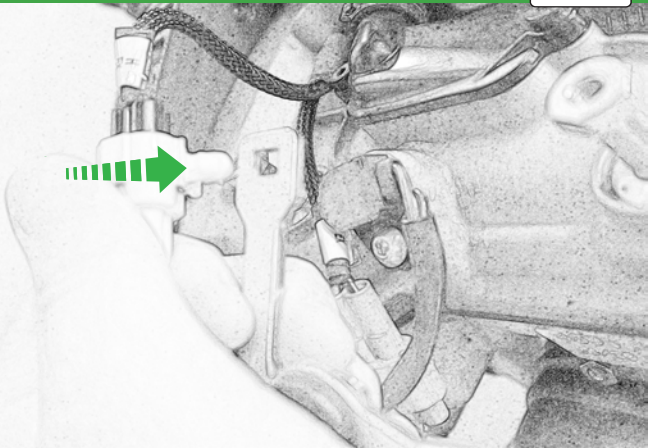


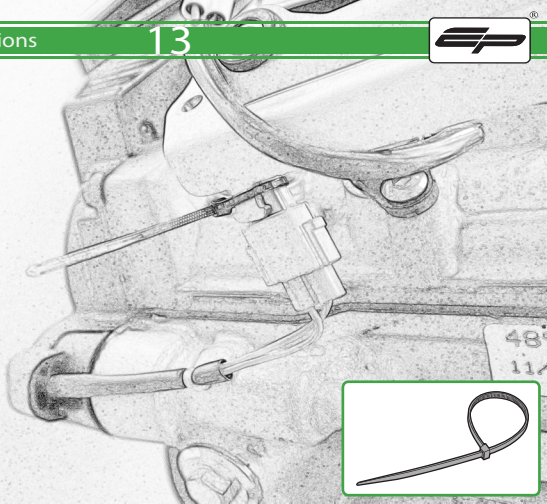


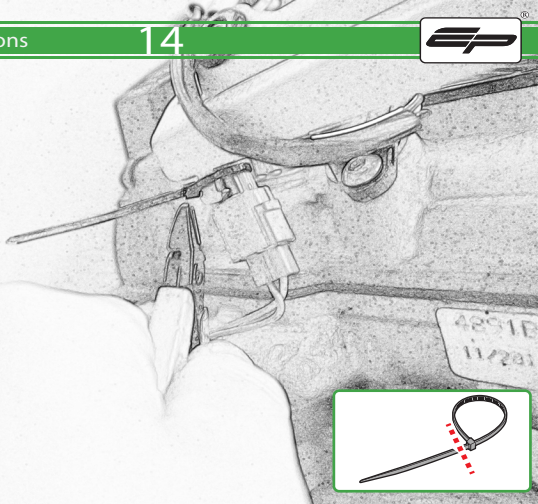


4851B
11/201




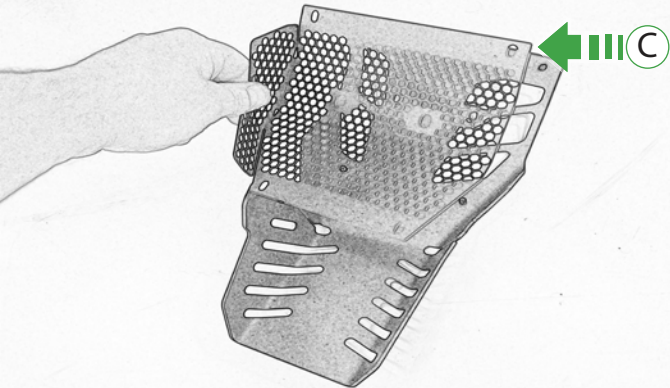


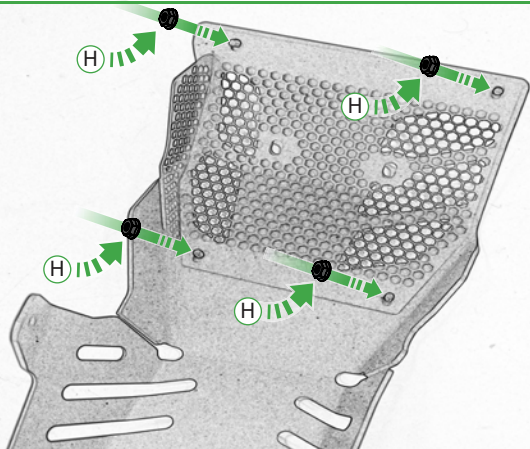


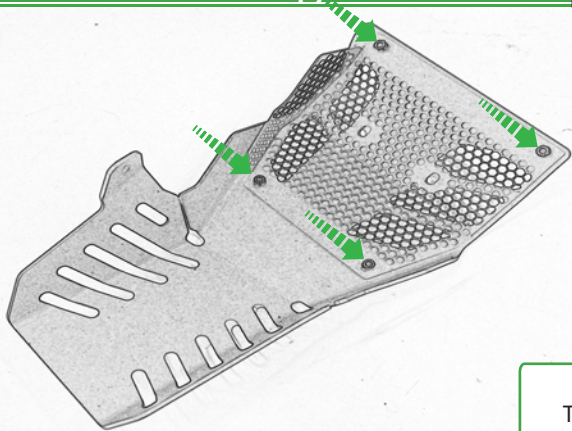


Fully
Tighten

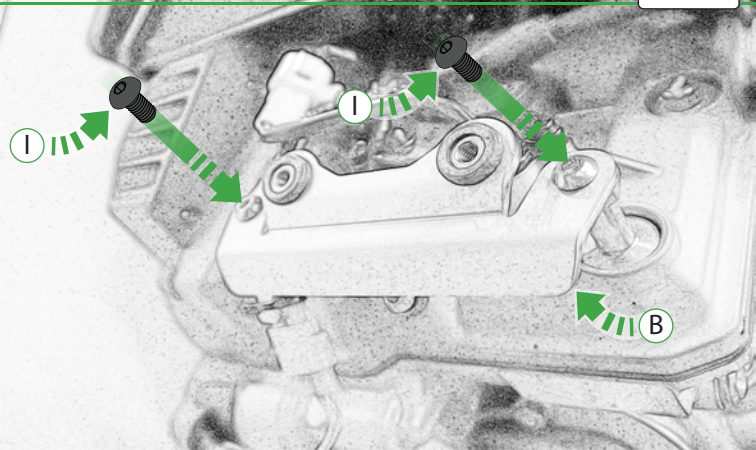

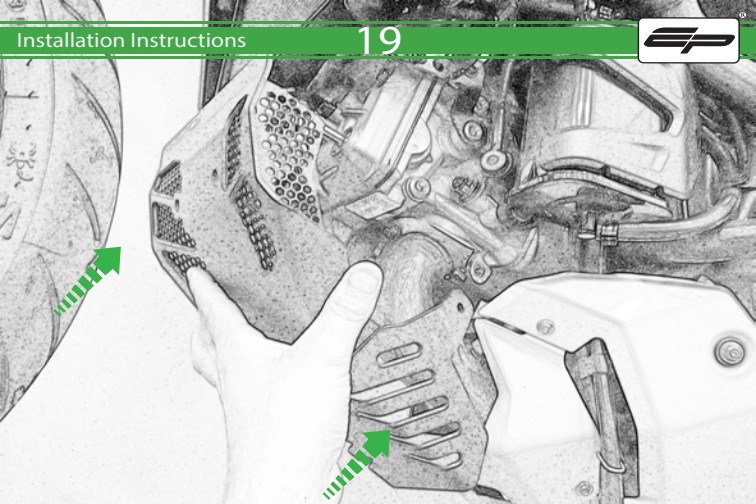

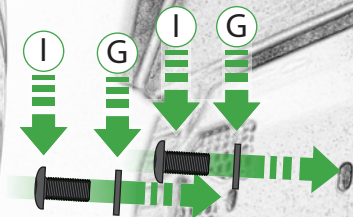


Do Not
Fully Tighten

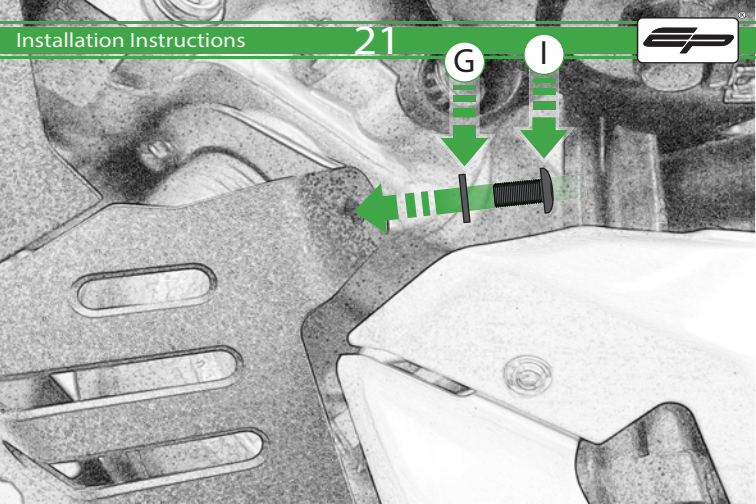

G

I

←

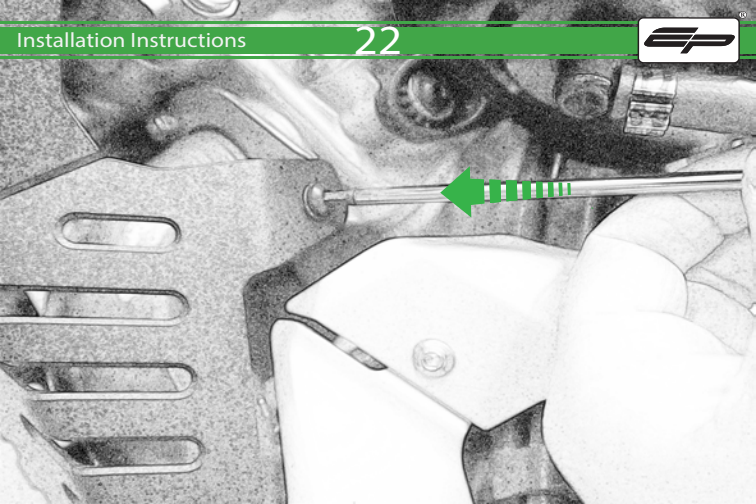



Adjust Guard
And Fully Tighten



Adjust Guard
And Fully Tighten

ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com