

Kawasaki

Assembly Instructions

Model:	KLE650E/F
Description:	Bag Fitting Kit
Part Number:	99994-0537


Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbol indicates the information for proper installation and operation in this instruction.

NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Damper	92161-1551	1	Right
2	Damper	92161-1550	1	Left
3	Guard	55020-1824	1	Right, Rear
4	Guard	55020-1823	1	Left, Rear
5	Guard	55020-0982	1	Right, Front
6	Guard	55020-0981	1	Left, Front
7	Tape	39188-0561	2	
8	Damper	92161-1795	2	

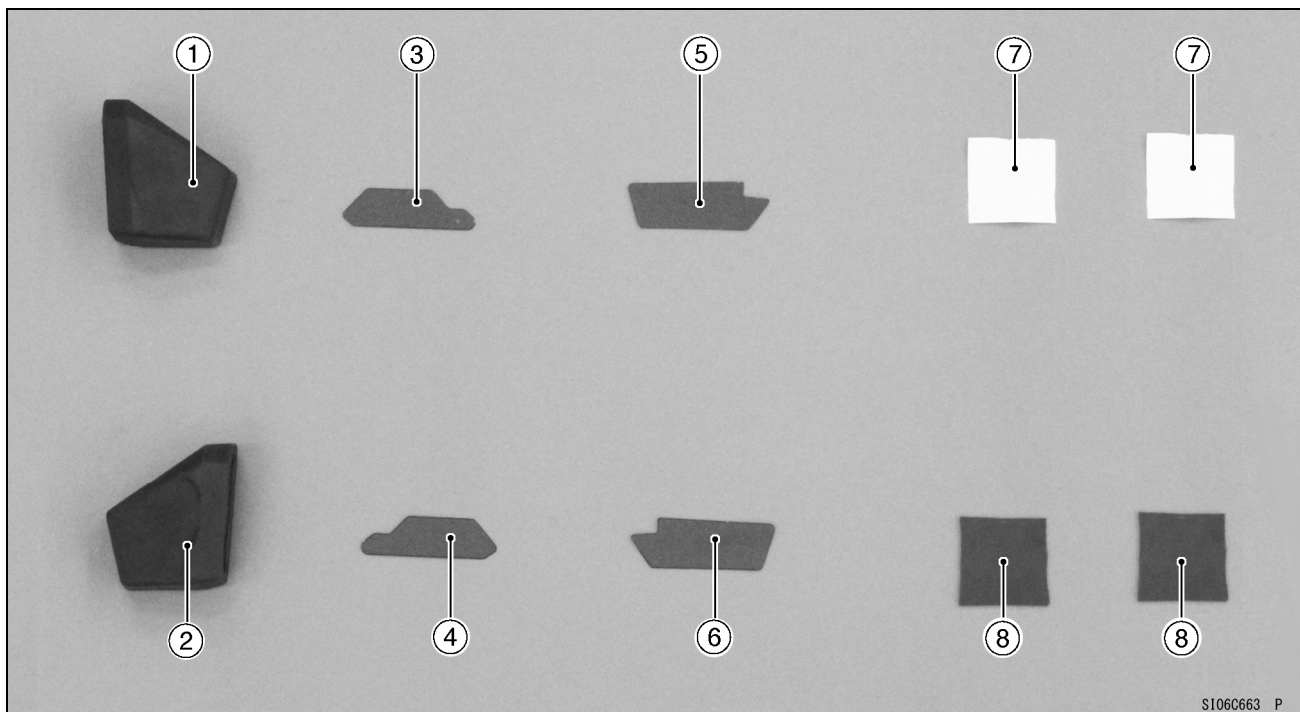


S1060663 P


Installation Instructions

Assembly Procedure

- Install the damper [1] so that the “R” mark side [A] faces inward.

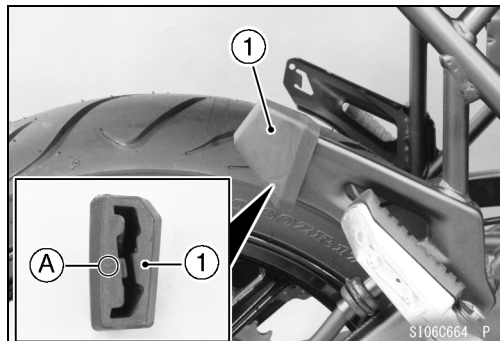

- Install the guards [3] [5].

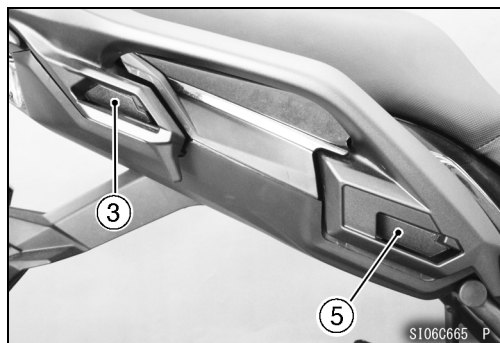

- Peel the red film of the tape [7], and install the tape to the pannier case as shown.

About 83 mm (3.3 in.) [A]

- Peel the film of the tape and install the damper [8] on the tape.

NOTE

- The left side bag fitting kit installation is the same as for right side.

