

Kawasaki

Assembly Instructions

Part Number	Description	Model	Approx. Assembly Time
99994-0736	KQR™ Café Deflector, Black, with Edge Trim	Vulcan S EN650A/B/C/D	15 Minutes
99994-0737	KQR™ Café Deflector, Chrome, with Edge Trim		
99994-0738	KQR™ Café Deflector, Black		


Improper installation of this accessory could result in an accident causing serious bodily injury or death. To prevent an accident, be sure that this accessory is properly and securely installed on your vehicle. If you cannot properly install this accessory yourself, have a professional installer, such as an authorized Kawasaki dealer, install it for you.

Prior to each use, check to be sure the accessory is securely attached to the motorcycle and periodically inspect the accessory for any required adjustment, wear, and damage.

Parts List:

Ref. #	Description	Qty
A01	Café deflector (*with two lock keys)	1
A02	Edge Trim (not included for 99994-0738)	1


Parts Diagram:

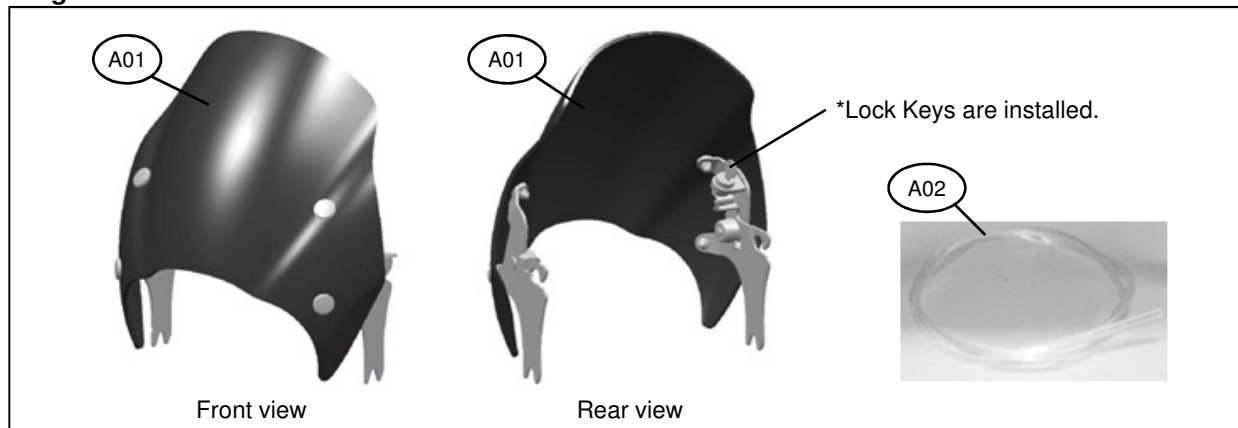


NOTE: This Installation requires prior installation of KQR™ Windshield Bracket Front Fork (99994-0546).

Installation Instructions:


1. Park the vehicle on level ground and turn off the ignition switch.
2. Unlock the latch on the Right Bracket and remove the key.

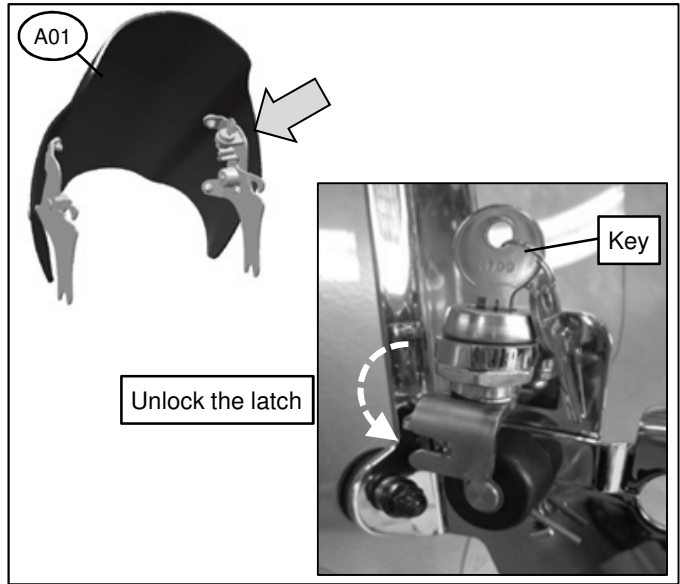

3. Remove the clip from the throttle cables and re-install it at a higher position just above the front fork tube as shown.

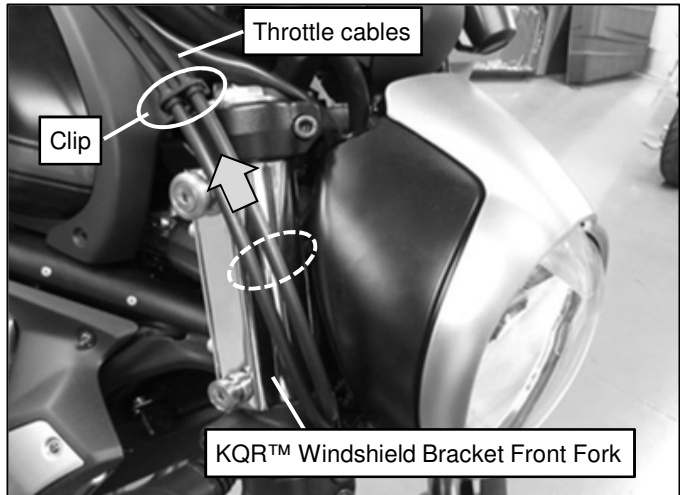


4. Hold the Cafe Defelctor assembly in both hands with front side toward you and position the lower fork of each Deflector Bracket onto the lower spools of the Windshield Bracket Front Fork (99994-0546) previously installed, then move the upper part of the Cafe Defelctor back until the upper latches contact the upper spools.

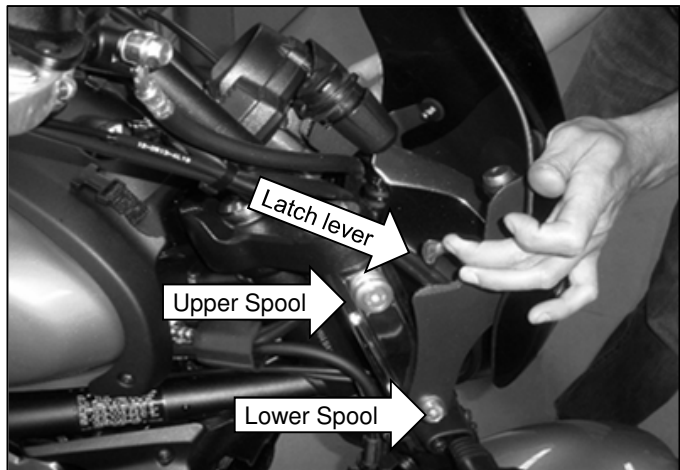

5. Lift up on the spring-loaded Left Latch Lever and Right Latch Lever simultaneously until they clear the upper spools, then press firmly rearward until the latches fully engage the spools on both sides.


NOTE: Ensure that the throttle cables are positioned to the inside of the Right Bracket as shown.

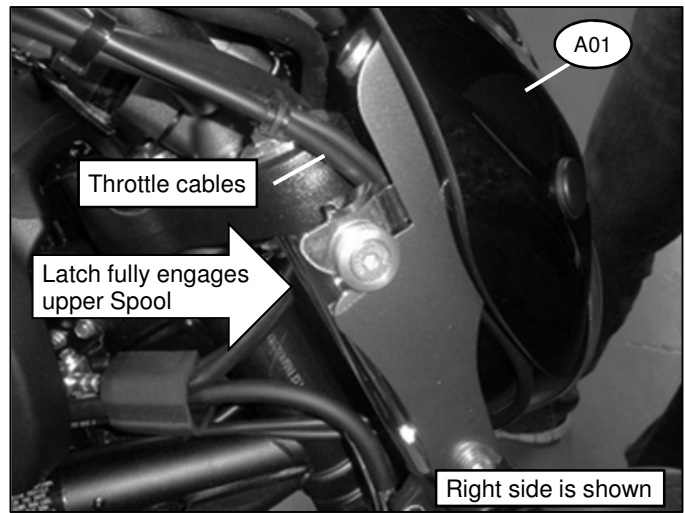

6. To remove windshield, lift up on the spring-loaded Left Latch Lever and Right Latch Lever simultaneously until they clear the upper spools, then pull firmly forward until the latches fully clear the spools and lift the Deflector clear of the lower spools.

7. If desired, use the key to lock the latch on the Right Bracket.

NOTE: Locking is only required if theft deterrence is needed.

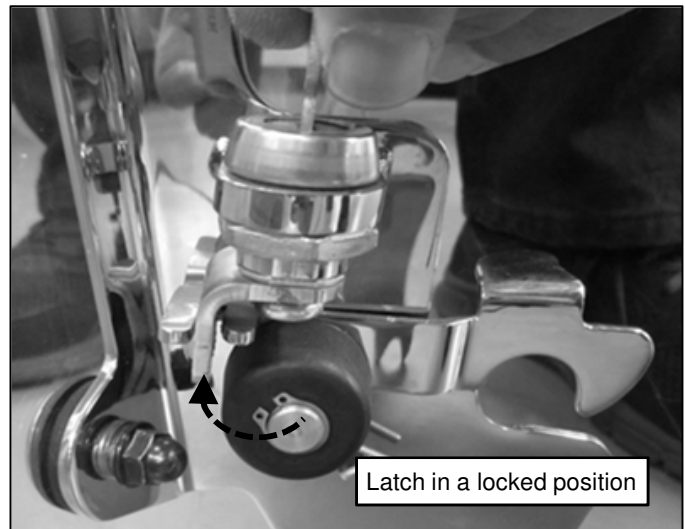

Part number: 99994-0736 and 99994-0737

8. Install the Edge Trim (A02) by centering it on the top edge of the windshield and pressing firmly to seat the trim, working with your thumb down each side.

Please check / adjust all fasteners in regular intervals.
Check for proper attachment before each ride.