



Complete Muffler Installation Instructions

Thank you for choosing FMF as your performance aftermarket exhaust. We have spent countless hours of R&D and testing to ensure you receive the highest quality product on the market today.

All FMF products are developed using the most current technology available for design and manufacturing. Every exhaust is made 100% at the Flying Machine Factory in Southern California. We use only the highest quality American materials for function and durability.

Since 1973, FMF has been bringing you the very best in bolt on performance. Our products are specifically engineered to broaden your existing powerband and give you an all around power increase with substantial weight savings. Bolt on FMF and **FEEL THE POWER!**

Check out our website at www.fmfracing.com for more information.

Attention

This product is designed for closed course use only unless otherwise stated and not intended to meet emission regulations for use on public lands, roads or access routes – consult with local jurisdictions.

Please read all instructions thoroughly before installation. Failure to follow all installation instructions will void any warranty implied or otherwise. FMF Racing is not responsible for problems due to improper installation and/or improper use.

Before you begin installing this product, we recommend wearing safety glasses and mechanics gloves. You must know how to remove and replace your stock exhaust in order to install this FMF product otherwise have it installed by a professional mechanic. Keep all stock parts from your existing system as some components may be necessary to install your new FMF exhaust depending on the application.

Parts Supplied

(1) muffler:	041557, 041558, 041563, 041564
(1) 8x30mm bolt	920167
(2) 6x25mm bolts	920670
(2) 6mm nuts	920140
(1) muffler support bracket	941624
(1) side panel	941944

Tools Required

8, 10, 12mm wrenches
contact cleaner
high temp silicone
WD-40

Removal

1. Make sure engine is completely cool prior to installation and the vehicle is in a stable position.
2. Remove left and right side plastic panels to access the mufflers.
3. Beginning with the right hand muffler, loosen the band clamp connecting the muffler to the header.
4. Remove the front mounting bolt attaching the muffler to the subframe.
5. While holding the muffler, remove the rear mounting bolt; save for later use.
6. Gently slide the muffler rearward to release it from the header. Use WD-40 in the muffler/header junction to help ease removal.
7. Repeat steps #3 to #6 for the left hand muffler.
8. Loosen and remove the nuts attaching the header to the exhaust port; save for later use.
9. Gently remove the header from the vehicle.

Pre - Installation

10. Attach the supplied muffler support bracket to the inside of the rear muffler mount using the supplied 6mm nuts and bolts. When positioned correctly, the support should be on the inside of both muffler mounts and on the outside of the midpipe mount (see Fig. 1). Leave nuts and bolts finger tight.
11. Inspect the exhaust port gasket as it will be reused if it is in good condition (minimal cracks, no tears) otherwise replace with a new gasket.
12. Using contact cleaner, clean the exhaust port where the header connects. Allow to dry then apply a light bead of high temp silicone for an improved seal.

Installation

13. Align the FMF header with the exhaust port and mount to the engine using the stock nuts removed in step #8. Leave nuts finger tight.
14. Apply a light bead of high temp silicone to the header where the muffler connects for an improved seal.

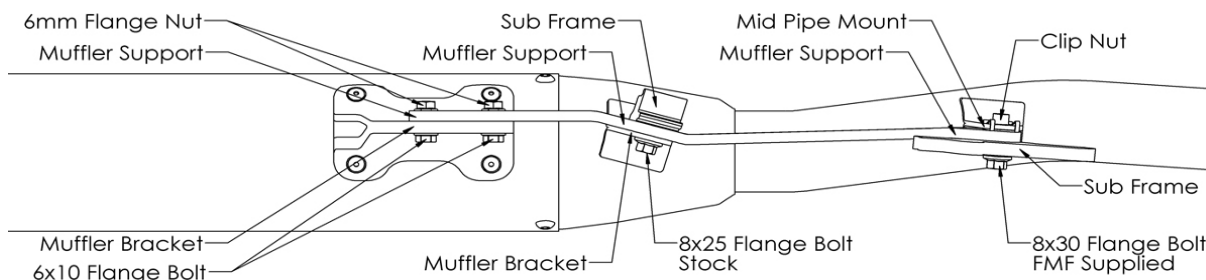


Fig. 1

Installation cont.

15. Slide the muffler onto the header. Wipe away any excess silicone. When positioned correctly, the muffler support should be on the inside of both muffler mounts and between the midpipe mount and subframe (see Fig. 1).
16. Mount the muffler midpipe to the subframe by inserting the supplied 8x30 bolt through the subframe and muffler support, then thread into the mount on the muffler midpipe. Do not fully tighten at the time.
17. Insert the stock bolt removed in step #5 through the front muffler mount and muffler support, then thread into the subframe. Do not fully tighten at this time.
18. Make sure the header and muffler are in a neutral position and not binding. Slowly tighten all mounting fasteners to manufacturer's specifications starting at the header flange and finishing at the rearmost muffler mount.
19. **Inspect the complete exhaust to make sure there is no contact with the frame, shock spring, engine, body panels or any cables, hoses or wiring. The exhaust system should only be in contact with the exhaust port and mounting points. Confirm all controls operate in accordance with manufacturer's specifications. Note: Installation of other accessories (such as fuel tanks, radiator guards) can compromise the pipe clearances. Be sure after installation that there is adequate clearance for such things as coolant hoses and brackets.**
20. Install the supplied side panel on the left side of the vehicle.
21. Reinstall all other body parts and panels to manufacturer's specifications.

Post - Installation

22. We recommend using high temp silicone for an improved seal. Please follow instructions for the silicone and allow sufficient time to cure before starting the engine.
23. All FMF exhaust products are designed to use stock fuel settings unless otherwise noted. Our fuel setting recommendations are to be used as a guide only and were derived from operation at sea level at 70 degree ambient air temperature. There are too many variables to provide precise fuel setting specifications; mainly altitude and temperature. If you are not capable of adjusting the fuel settings yourself, please find a mechanic in your area. Refer to our website for additional fuel setting information.
24. Start the engine and bring to operating temperature. Check for exhaust leaks.
25. Allow the engine to cool completely and torque all mounting hardware to manufacturer's specifications.

Maintenance

To clean your FMF muffler, allow to cool and use mild soap and water. Do not spray water onto a hot exhaust. Mild soap and water is recommended on the muffler canister to reduce streaking and uneven discoloration. Dry completely with a soft cloth.

We recommend repacking your FMF muffler after every 20-30 hours of normal use with proper fuel settings (more frequently for less than optimal fuel settings). This will maintain peak performance and keep that race tone. Water will ruin packing. Cover the exhaust outlet when washing your vehicle. Repack your muffler if water enters the chamber and saturates the packing. We offer various repack kits to choose from. If the muffler has a spark arrestor screen, we recommend cleaning it gently with a wire brush after every 30 hours of use.

To repack the muffler, remove the allen screws from the front of the muffler. Do not remove the rear end cap. Grasping the midpipe, work the front end cap out of the canister. Use care not to damage or distort the shape of the canister or end cap. You may need a rubber or plastic mallet to lightly tap the front end cap out of the canister. Unwrap the packing from the core and discard. Clean the core with a wire brush then wrap with new packing and secure with a strip of 1/2" masking tape near each end of the core. Do not pack too tightly as this will hamper performance and increase sound level. Before reinstalling the inner core assembly, apply a thin bead of high temp silicone on the front endcap where it makes contact with the canister. Slide the inner core assembly into the canister making sure the perforated core is fully seated into the rear end cap. Wipe off any excess silicone. Reinstall the allen screws and tighten 1/4 turn after the screw contacts the canister. Allow sufficient time for the silicone to cure before starting the engine.

DISCLAIMER: All products manufactured and/or distributed by FMF Racing are a) intended for use on stock vehicles specific to the U.S. market; b) for closed course use only unless otherwise stated and c) not intended to meet emission regulations for use on public lands, roads or access routes – consult with local jurisdictions. FMF Racing makes no claims as to the products applicability, effectiveness or fitment on modified machines. FMF Racing is the sole determiner of abuse, misuse, installation errors and modifications. We assume no liability for any errors in listings, specifications, part numbers, prices or model applications. We reserve the right to change specifications, product descriptions, product quality, pricing and application at any time without notice and without further obligation. Buyer assumes all risk for any and all damage caused to themselves, a third party and/or property by virtue of failure of these products. By installing and/or using an FMF product, you hereby accept and understand these stated terms and conditions and have followed all instructional steps.

LIMITED WARRANTY: All merchandise manufactured by FMF Racing has a warranty against manufacturing defects for a period of one (1) year from the date of invoice. Warranty is limited to the repair or replacement of defective products. There is no warranty for normal wear and tear, any type of crash damage or for product failure due to improper muffler or packing maintenance. FMF Racing reserves the right to repair, replace or issue an FMF credit for defective product at its discretion. Credits are valid for a period of one (1) year from issuance. No credit will be issued for labor or other costs incurred beyond the value of the original product. Product returned as a warranty after having been used, if found to be defective, is not valued at the full purchase price. A depreciated value will be estimated for used product. Product accepted as a warranty claim and repaired or replaced will be returned via UPS-ground freight no charge. Warranty excludes product that has been modified or where the product was improperly installed, abnormally used or misused. This limited warranty is in lieu of all other warranties or warranties implied or expressed. This includes, without limitation, any warranties or merchantability and fitment for a particular purpose. We make no warranty as to products distributed by FMF Racing, expressed or implied. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties. A return authorization number must be issued by FMF Racing before product is returned. Returns must be sent back to FMF Racing freight prepaid. Proof of purchase, such as a copy of the original invoice, must accompany all warranty claims. Warranties will be honored to the direct purchaser only.