



INSTALLATION INSTRUCTIONS

Accessory

SIDE TANK PAD
P/N 08R81-MKS-E00

Application

CRF1100A/D

Publication No.


MII 17351

Issue Date

February 2020

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

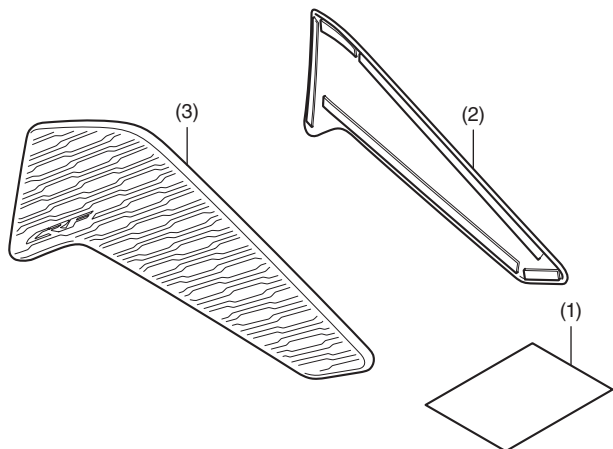

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Right tank pad	1
(3)	Left tank pad	1

SUPPLIES REQUIRED

Ruler

Masking tape

Isopropyl alcohol

Shop towel

INSTALLATION

▲ CAUTION


- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.

NOTE:



- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

- Clean the surface of the area shown using isopropyl alcohol.


<Left side>

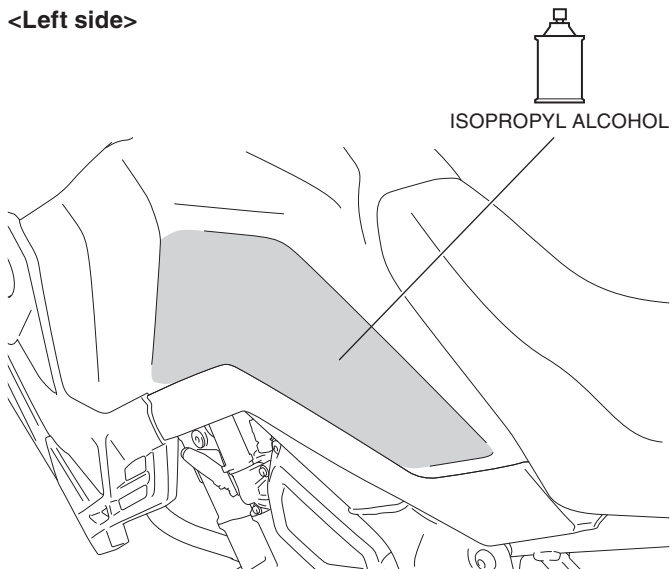


- Arrange the left tank pad as shown and mark with masking tape.

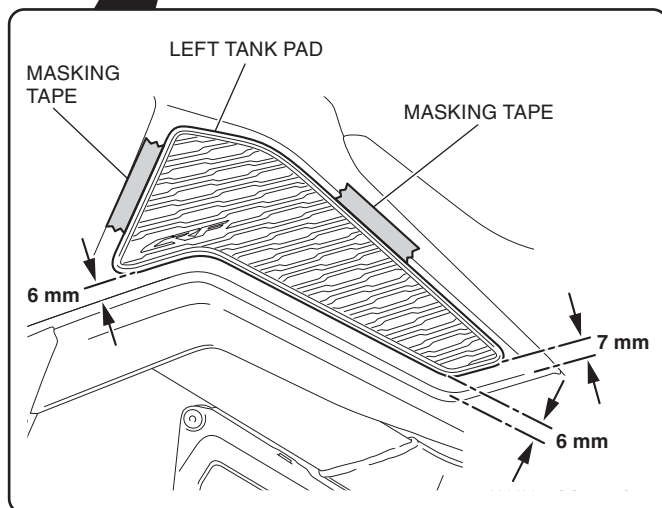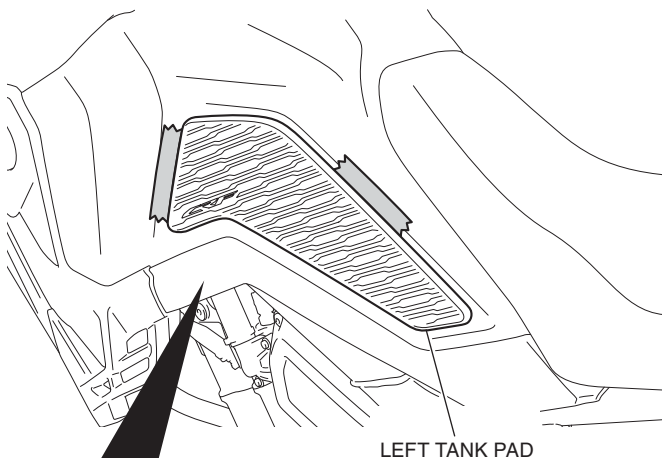


3. Peel off the adhesive backing on the left tank pad as shown.

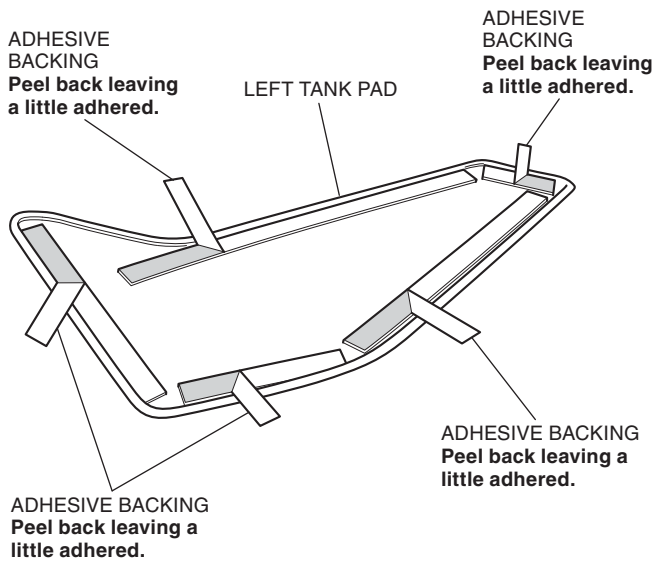

4. Attach the left tank pad as shown.

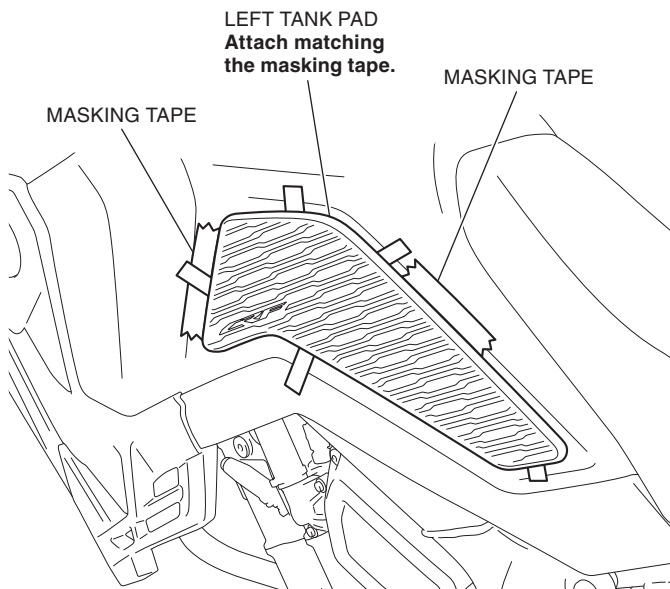

5. Remove the adhesive backing as shown.

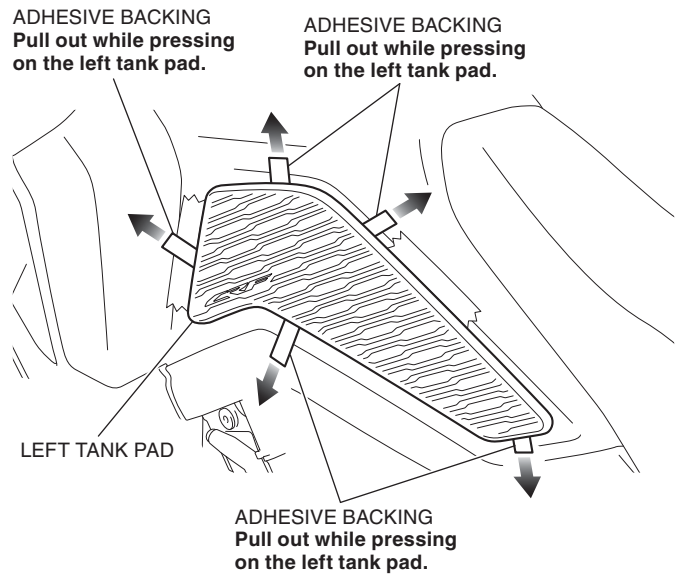

6. Remove the masking tape and apply adequate pressure to the attached left tank pad.
7. Install the right tank pad in the same manner as the left side.