



INSTALLATION INSTRUCTIONS


Accessory
**HAND GUARD
EXTENSIONS**
P/N 08P72-MKS-E00ZD

Application
CRF1100A/D

Publication No.
MII 17351
Issue Date
February 2020

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

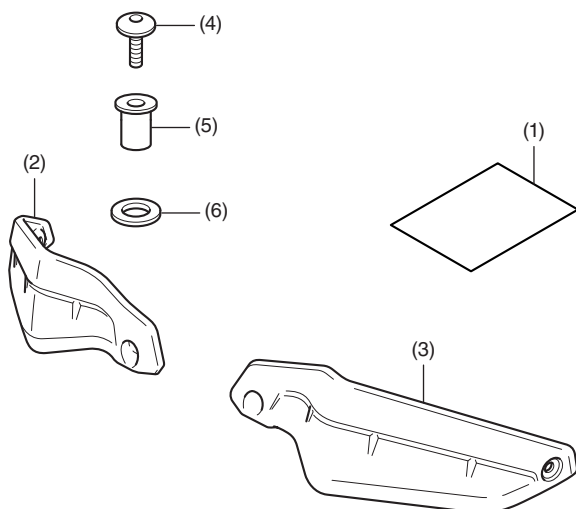

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Right hand guard B	1
(3)	Left hand guard B	1
(4)	5 mm screw	2
(5)	Well nut	2
(6)	Washer	2

TOOLS REQUIRED

Hex wrench (5 mm)

Torque wrench

TORQUE CHART


Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N·m	kgf·m	lbf·ft
5 mm screw	0.4	0.04	0.3


INSTALLATION

1. Remove the screw as shown.


<Left side>

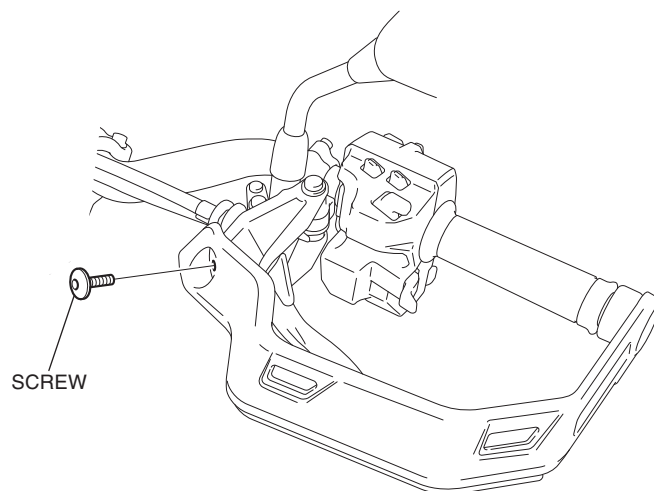

2. Install the well nut as shown.

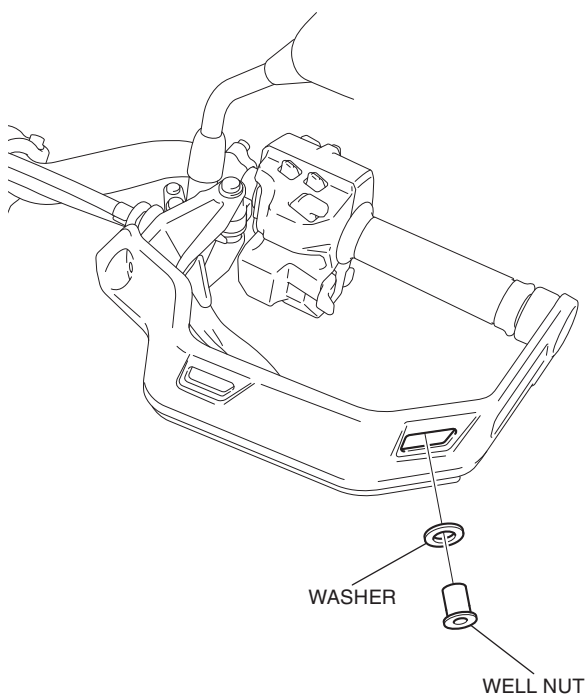

3. Install the left hand guard B as shown.

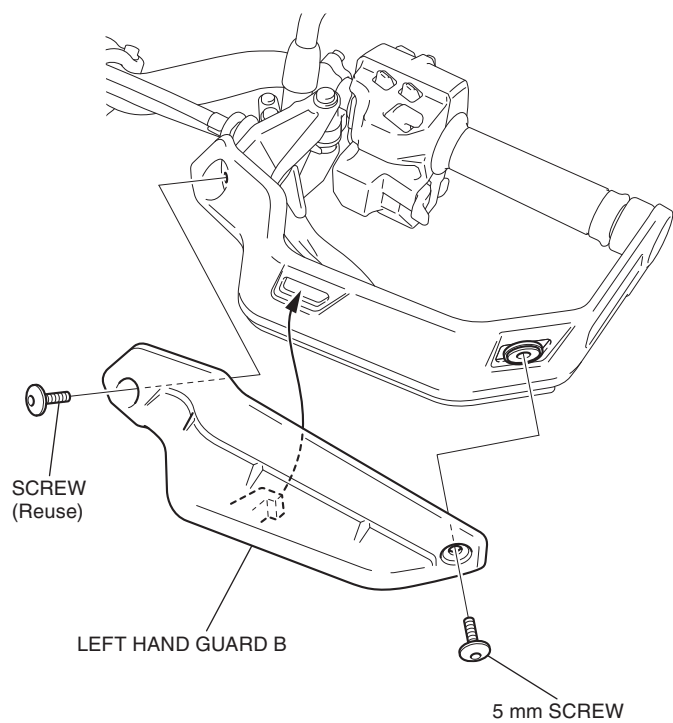

4. Install the right hand guard B in the same manner as the left side.