

# **INSTALLATION INSTRUCTIONS**

Accessory

LIGHT BAR P/N 08P70-MKS-E20 Application

CRF1100A4/D4

Publication No.


MII 17351

Issue Date


February 2020

Honda Dealer: Please give a copy of these instructions to your customer.

# **PARTS LIST**

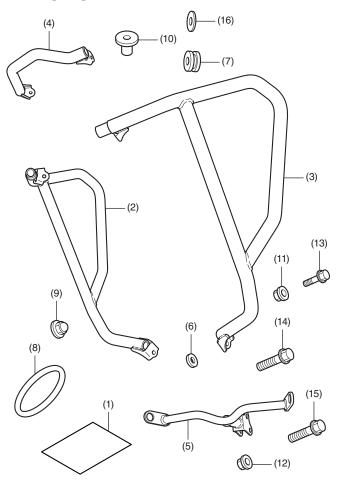

No.	Description	Qty
(1)	Installation Instructions URL	1
(2)	Right front side pipe	1
(3)	Left front side pipe	1
(4)	Front side center pipe	1
(5)	Front side pipe center stay	1
(6)	Spacer (large)	2
(7)	Grommet	2
(8)	Gasket	2
(9)	8 mm flange cap nut	2
(10)	Collar	2
(11)	6 mm flange nut	2
(12)	8 mm flange nut	1
(13)	6 mm SH flange bolt	2
(14)	8 mm SH flange bolt	2
(15)	8 mm flange bolt (short)	2
(16)	Washer	2

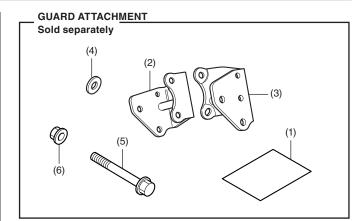

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Right guard bracket	1
(3)	Left guard bracket	1
(4)	Spacer (small)	2
(5)	8 mm flange bolt (long)	2
(6)	8 mm flange nut	2

# **TOOLS AND SUPPLY REQUIRED**

Socket (8, 10 and 12 mm)

Ratchet

Box-end wrench (10 and 12 mm)

Shop towel

Torque wrench

# **TORQUE CHART**

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.

Item	N∙m	kgf-m	lbf∙ft
6 mm flange nut	12	1.2	9
8 mm flange cap nut	27	2.8	20
8 mm flange nut	32	3.3	24

# **INSTALLATION**


# **▲ CAUTION**

• To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.


#### NOTE:


- Refer to this manual and the Engine guard Installation Instructions when the motorcycle is equipped with the Engine guard.
- Disconnect the negative (-) cable from the battery before installing this accessory.
- The memory of the clock will be erased when you disconnect the battery. Reset the clock after reconnecting the battery.
- Reinstall the removed parts on the motorcycle and make sure that the wires and harnesses are not pinched.
- Although the illustration is of CRF1100D4, use the same procedures for the CRF1100A4 model.
- Remove the tool box and disconnect the negative (-) cable of the battery.

#### <Left side>

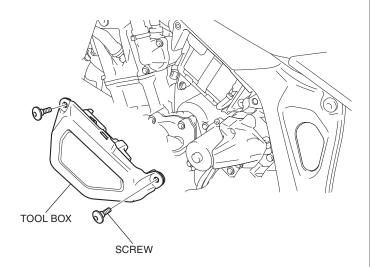


2. Remove the bosses of the left middle cowl as shown. <Left side>

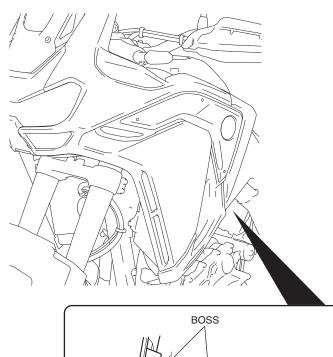


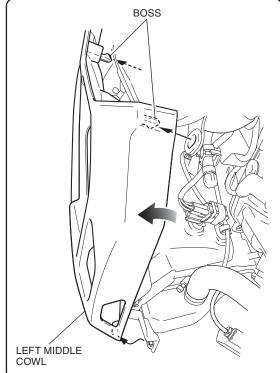

3. Remove the drain tube as shown.

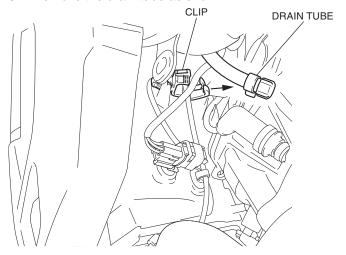


4. Remove the harness as shown.

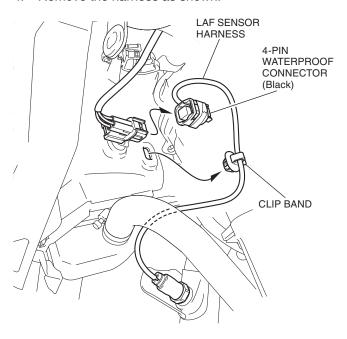


5. Remove the bosses of the right middle cowl, drain tube and LAF sensor harness in the same manner as the left side.


6. Remove the parts as shown.

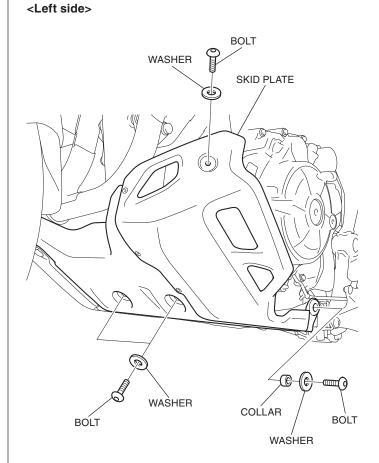


7. Remove the skid plate as shown. < Right side>

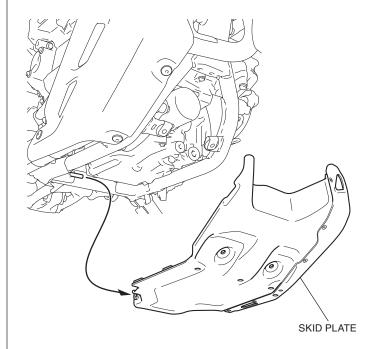


#### 8. Remove the nuts as shown.

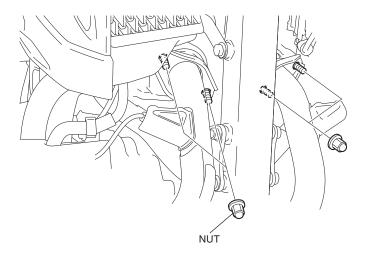


# Remove the parts as shown.Right side>

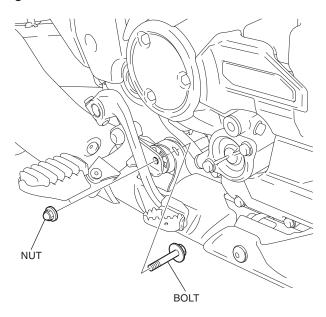


10. Protect the swing arm with a shop towel or similar.

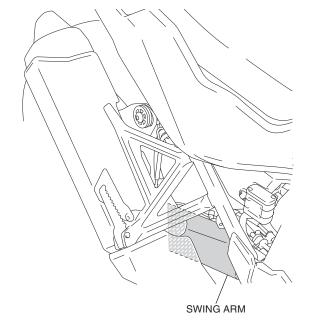


- 11. Remove the bolt, and then lower the muffler as shown.
  - Make sure that one person secures the lowered muffler, while the other installs the front side pipe.

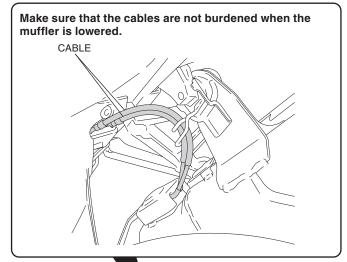

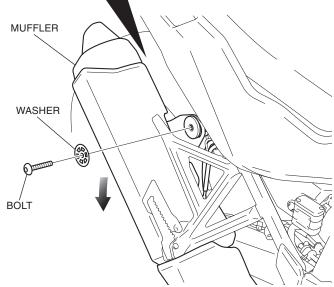


12. Remove the parts as shown.

#### <Left side>

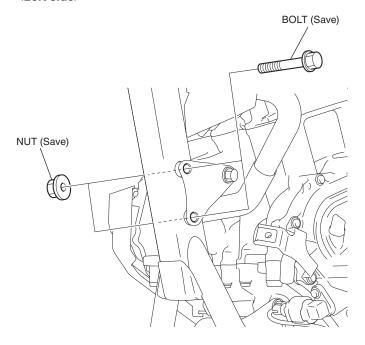


13. Insert the bolts as shown.

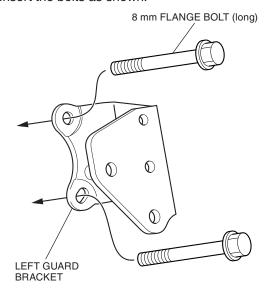


14. Install the left guard bracket as shown.

#### <Left side>

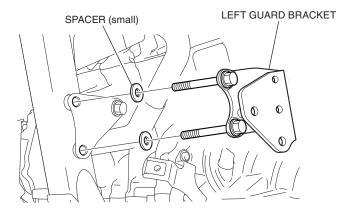


15. Install the right guard bracket as shown.


#### <Right side>

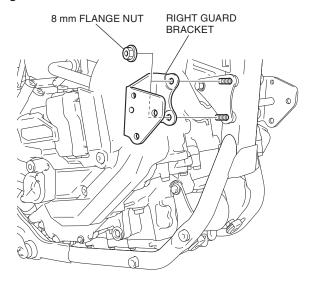


- 16. Install the muffler in the reverse order of removal.
  - · Always replace with a new gasket.
- 17. Install the right and left middle cowl, drain tube and LAF sensor harness in the reverse order of removal.
- 18. Remove the parts as shown.

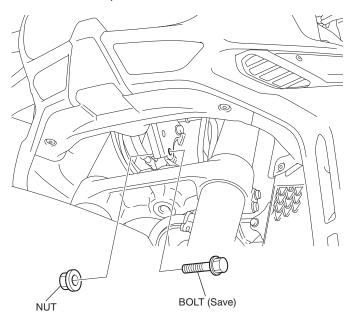


19. Install the grommets as shown.

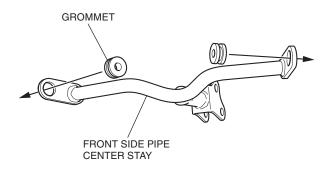


20. Install the collars to the front side pipe center stay as shown.

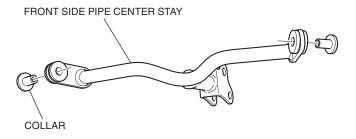

21. Install the front side center pipe as shown.

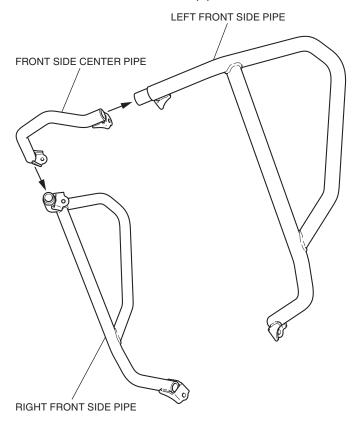


22. Loosely install the front side center stay as shown.

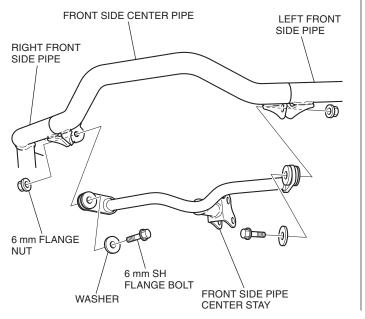


- 23. Remove the parts as shown.
  - Perform this step for the motorcycle equipped with the Engine Guard.
  - · Repeat on the right side.


#### <Left side>

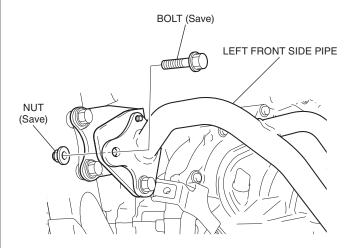


- 24. Loosely install the assembled front side pipe as shown.
  - · Repeat on the right side.

#### <Left side>

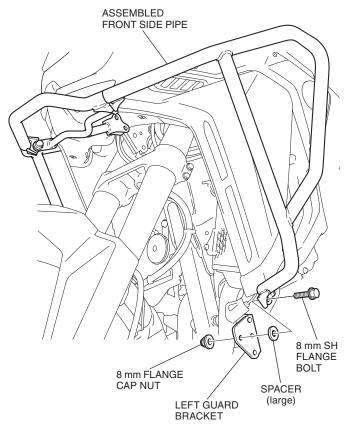


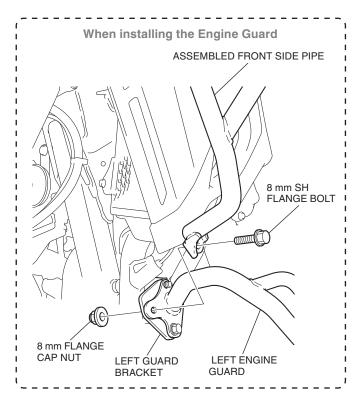

25. Raise and install the assembled front side pipe as shown.

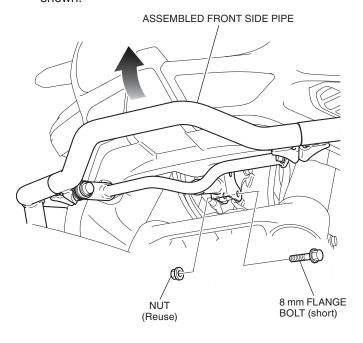

26. Install the parts as shown.

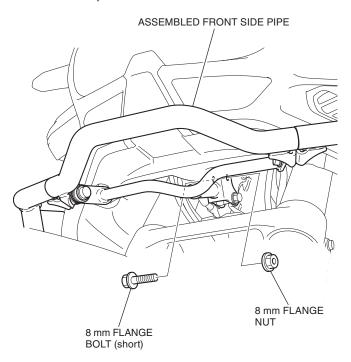

- 27. Tighten all loosely installed parts securely.
- 28. Install the motorcycle's parts in the reverse order of removal.
  - Confirm that any wire harness is not caught or too tight.