




Installation Instructions

60-0760RB Clutch Cover Protector

1) Attach the skid plate to the Woodcraft cover by bolting it from the inside using the 5mm flat head bolts. The 60-2500 rubber pad should also be adhered to the back side of the cover.

**IMPORTANT – USE
THREADLOCKING COMPOUND ON
THE THREE SKID PLATE MOUNTING
BOLTS.** Coat the threads completely and
allow the threadlocking compound to fully
set before use.

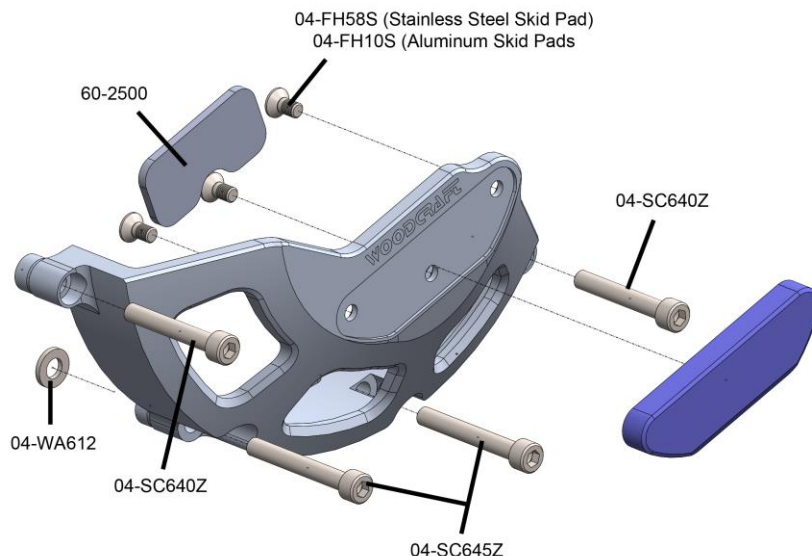

2) Install the Woodcraft cover with a using the included mounting hardware in the 4 locations shown at the right. The 6mm washer goes between the cover and the engine at the 2nd bolt location, counting from the left side. Torque for the main 6mm mounting bolts is about 7 ft-lbs.

3) Start the motorcycle and inspect for any leaks before riding.



WARNING

Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.