



## Sport Front Bumper/Skid Plate Instructions (P187P360) (P187P363)

\*\*\*NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on [proarmor.com](http://proarmor.com).\*\*\*




Remove grille from vehicle.



Place PEM plate under frame as shown, hand tighten center M8 bolt.



Place provided chassis bracket as shown on top of frame and hand tighten outer 2 M8 bolts.

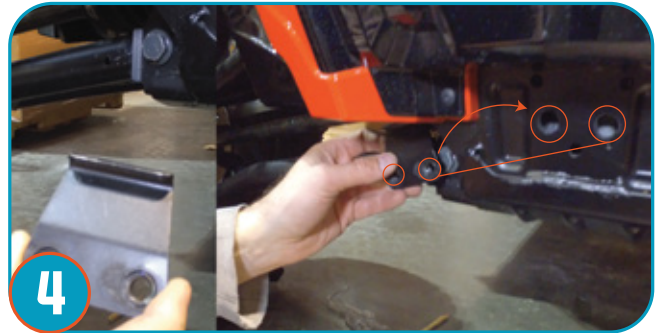

Place hook bracket behind frame and hook onto ledge.




Position bumper on vehicle. Hook the top mounting plate over plastic.



Place provided spacer between lower mounting plate of the bumper and the frame & hand tighten 2 M10 bolts.



Hand tighten 2 M8 bolts to chassis bracket installed in step 3.

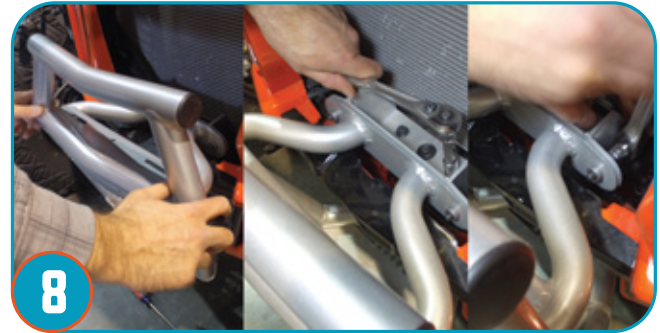

Position bumper, Torque down all screws (4-Top/2 Bottom bolts)



## Sport Front Bumper/Skid Plate Instructions (P187P360) (P187P363)



Install skid plate using 4 M6 Bolts. Tighten so plate is secure.



Replace grille removed in step 1. Confirm all bolts, upper and lower have been properly tightened.



### **⚠ WARNING**

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
  - **Always** wear and use proper safety equipment when using any Pro Armor product.
  - Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
  - **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.



## Sport Front Bumper/Skid Plate Instructions (P187P360) (P187P363)

\*\*\*NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on [proarmor.com](http://proarmor.com).\*\*\*



1

Remove grille from vehicle.



2

Position bumper on vehicle. Hook the top mounting plate over plastic.



3

Place PEM plate behind frame & hand tighten 2 M10 bolts. (XP & XP Turbo)



4

Hand tighten 2 M8 bolts with washers to frame.



5

Position bumper, Torque down all screws (4-Top/2 Bottom bolts)



6

Install skid plate using 4 M6 Bolts. Tighten so plate is secure.



7

Replace grille removed in step 1. Confirm all bolts, upper and lower have been properly tightened.

**⚠ WARNING**

**Improper Use of Off-Highway Vehicles Can Cause Severe Injury or Death**

**Be Prepared**

- Fasten seat belts.
- Wear an approved helmet and protective gear.
- (Reserved for message about other occupant restraint devices.)
- Each rider must be able to sit with back against seat, feet flat on floor (and foot rests), and hands on steering wheel or handhold(s), where equipped. Stay completely inside the vehicle.

**Be Sure Riders Pay Attention and Plan Ahead**

If you think or feel the vehicle may tip or roll, reduce your risk to injury:

- Keep a firm grip on the steering wheel or handholds and brace yourself.
- Do not put any part of your body outside of the vehicle for any reason.