


Ducati Hypermotard Mono 698 Belly Pan Installation Instructions

- 1- Referencing the exploded view, install belly pan using the supplied hardware.

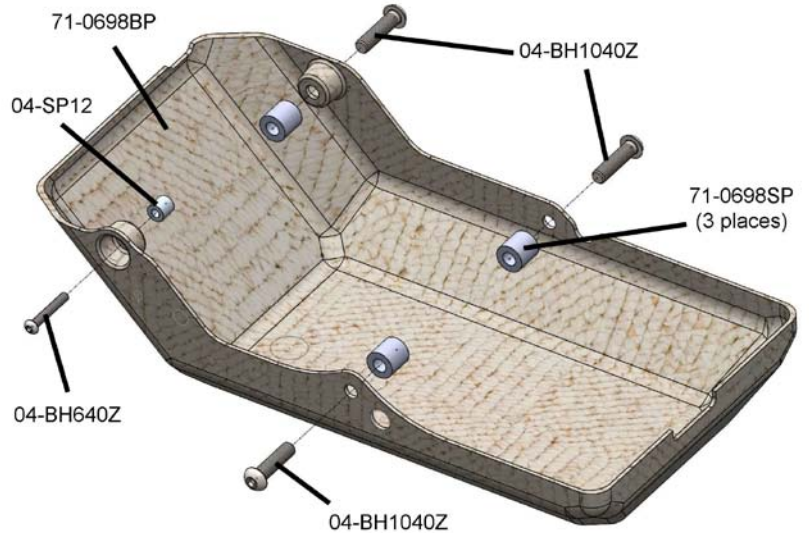

- 2- On the LHS forward most location, remove the OEM engine case bolt (photo to right) and replace with the supplied 04-BH640Z bolt and 04-SP12 spacer.



- 3- **IMPORTANT** -Secure all bolts with BLUE LOCTITE during final assembly.

IMPORTANT

Installation and use of this product will change the response of the motorcycle to rider control inputs. Failure of the rider to adapt to these changes may result in a loss of control, and serious injury or death. Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.