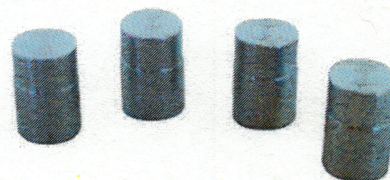



**AB007: Smog Block Off Plugs**  
**Yamaha R1 (1998-03)****PARTS LIST**

- Smog Plug

4

&lt;&lt;&lt;&lt;&lt;&lt; IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN &gt;&gt;&gt;&gt;&gt;&gt;

- 1) Remove left and right lower and middle fairings.
- 2) Remove the fuel tank.
- 3) Lift up the airbox and remove the hose coming up from the Air Injection System (AIS) pump. Place a vacuum cap over the hole and secure with either a zip tie or safety wire.
- 4) Remove the upper bolts holding the radiator in place and slide the radiator off its mounts.
- 5) Disconnect the electrical plug going to the AIS pump.
- 6) Loosen the hose clamps on the end of the metal AIS pipes.
- 7) Unbolt and remove the AIS pump and hoses from the support bracket.
- 8) Unbolt and remove the AIS support bracket.
- 9) Unbolt and remove the spigots above the exhaust ports.
- 10) Gently tap the smog plugs into place. **Be sure they are fully seated.**
- 11) Reinstall airbox
- 12) Reinstall fuel tank
- 13) Start the bike and test for leaks coming from the AIS ports. **Be very careful not to touch the exhaust system or engine as they may be very hot.**
- 14) Reinstall radiator
- 15) Reinstall fairings

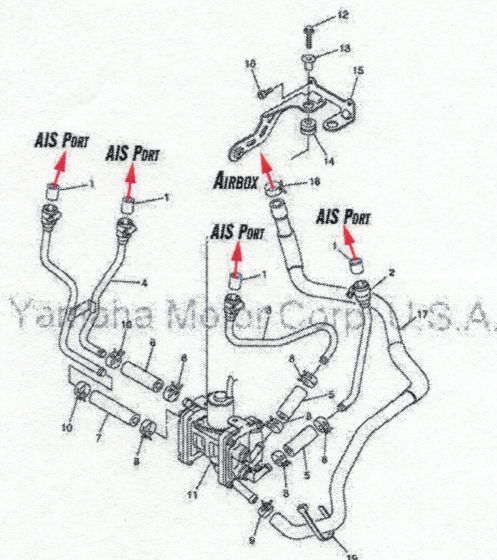

SPW1300-21 15

The purchaser releases Graves Motorsports, Inc from all liabilities pertaining to the installation and use of purchased parts. Purchaser recognizes that any alteration and/or modifications to the vehicle may increase the risk of injury or accident. **This product is intended for Closed Course Competition Use Only** and may render the vehicle illegal for use on public roads.