

WOODGRAFT


Technologies, Inc.

2 Piece Frame Slider Installation Instructions

50-0750 Kit

2010+ BMW S1000RR

- 1) Remove your OEM motor mount bolts. The sliders use the most forward engine mounts shown below in the photographs.
- 2) With your bodywork in place, fit the bolt and aluminum base on the right side of the bike by hand so that you can trace a circle to mark where you need to trim for the slider. You will need to trim the bodywork on the right side, while the left does not require modification.
- 3) Attach the slider bases to the motorcycle using the 10mm bolts provided, threading them in place of your OEM motor mount bolt. Torque the bolt to OEM recommended specifications (consult service manual).
- 4) Slide the plastic slider over the top of the base and secure in place using the 8mm countersunk bolt provided. The bolt passes first through the non-threaded hole and then screws into the threaded hole on the far side of the base. The plastic is undersized on the far side of the slider to act as a locknut for the bolt.
- 5) You will need a two inch clear circle centered on the motor mount bolt. Take a dremel tool with a drum sanding bit and trim a notch in the right side body panel to clear the slider. Reattach the body panel and fine tune the notch if necessary.

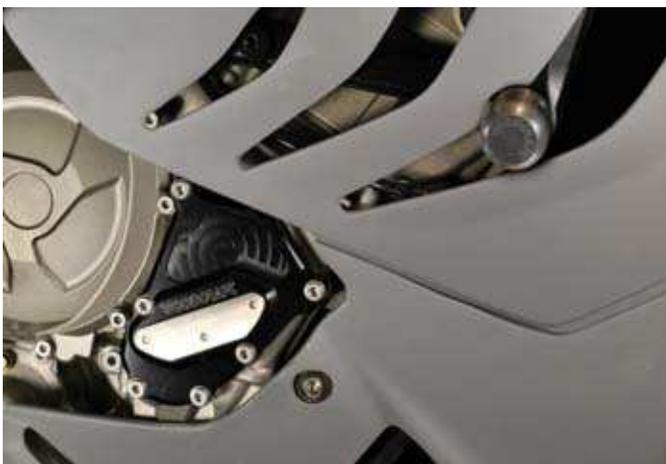

Important: The longer base goes on the left side, with the longer bolt