


Instructions

These bar end sliders are intended for use on Woodcraft clipon handlebars.

- 1) Remove the plastic bar end on the Woodcraft bar. This can generally be done with a set of pliers and a little bit of effort.
- 2) Take the base assembly and put it together by hand. The nut should be slightly tight against the rubber, enough to create friction but not enough to expand it.
- 3) Installation can be made easier by coating the rubber with a quick shot of contact cleaner. Simply push the assembly in quickly before the liquid evaporates.
- 4) Tighten the main 6mm FH bolt to expand the rubber and lock the assembly in place. **CAUTION - DO NOT OVER TIGHTEN THIS BOLT OR IT WILL BE VERY DIFFICULT TO REMOVE THE PIECE IN THE FUTURE.**
- 5) Slide the puck over the base and tighten with the 6mm BH bolt.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	14-0299	Slider	1
2	04-BH625 S/S	6x25mm BHCS	1
3	14-0200	Base	1
4	14-0099	Rubber Sleeve	1
5	04-FL6	6mm nut	1
6	04-FH650Z	6x50mm FHCS	1

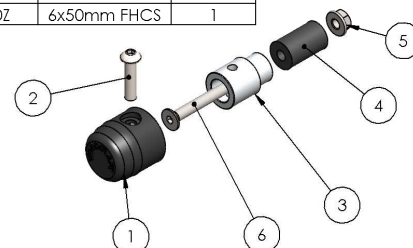


WARNING - VERY IMPORTANT Be sure that the throttle returns freely after being fully opened throughout the entire range of steering. The throttle tube and grip **MUST NOT** contact the bar end slider. **FAILURE TO HEED THESE WARNINGS MAY CAUSE LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH. DO NOT OPERATE THE MOTORCYCLE IF THERE ARE ANY INTERFERENCE ISSUES WITH EITHER THE MOTORCYCLE PARTS OR YOUR BODY, OR WITH A THROTTLE THAT DOES NOT RETURN FREELY.**

These bar end sliders are intended for use on Woodcraft clipon handlebars.

Bar End Slider Instructions

- 6) Remove the plastic bar end on the Woodcraft bar. This can generally be done with a set of pliers and a little bit of effort.
- 7) Take the base assembly and put it together by hand. The nut should be slightly tight against the rubber, enough to create friction but not enough to expand it.
- 8) Installation can be made easier by coating the rubber with a quick shot of contact cleaner. Simply push the assembly in quickly before the liquid evaporates to make it slide in more easily.
- 9) Tighten the main 6mm FH bolt to expand the rubber and lock the assembly in place. **CAUTION - Do not over tighten this bolt or it will be very difficult to remove the piece in the future.**
- 10) Slide the puck over the base and tighten with the 6mm BH bolt.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	14-0299	Slider	1
2	04-BH625 S/S	6x25mm BHCS	1
3	14-0200	Base	1
4	14-0099	Rubber Sleeve	1
5	04-FL6	6mm nut	1
6	04-FH650Z	6x50mm FHCS	1

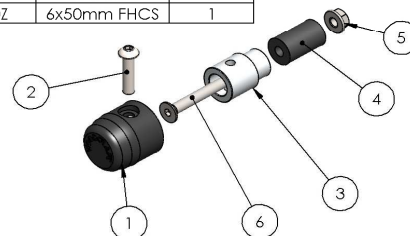

WARNING - VERY IMPORTANT Be sure that the throttle returns freely after being fully opened throughout the entire range of steering. The throttle tube and grip **MUST NOT** contact the bar end slider. **FAILURE TO HEED THESE WARNINGS MAY CAUSE LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH. DO NOT OPERATE THE MOTORCYCLE IF THERE ARE ANY INTERFERENCE ISSUES WITH EITHER THE MOTORCYCLE PARTS OR YOUR BODY, OR WITH A THROTTLE THAT DOES NOT RETURN FREELY.**