


If you have the Hypermotard 950, there is a spacer that is required to be placed between the frame clamp and the main support bracket on the right side. The 5mm spacer is used together with the 5mm longer bolts in the kit.

The addition of this spacer and longer bolts is the only change needed to make the 50-0652 frame slider kit work on the Hypermotard 950 models.

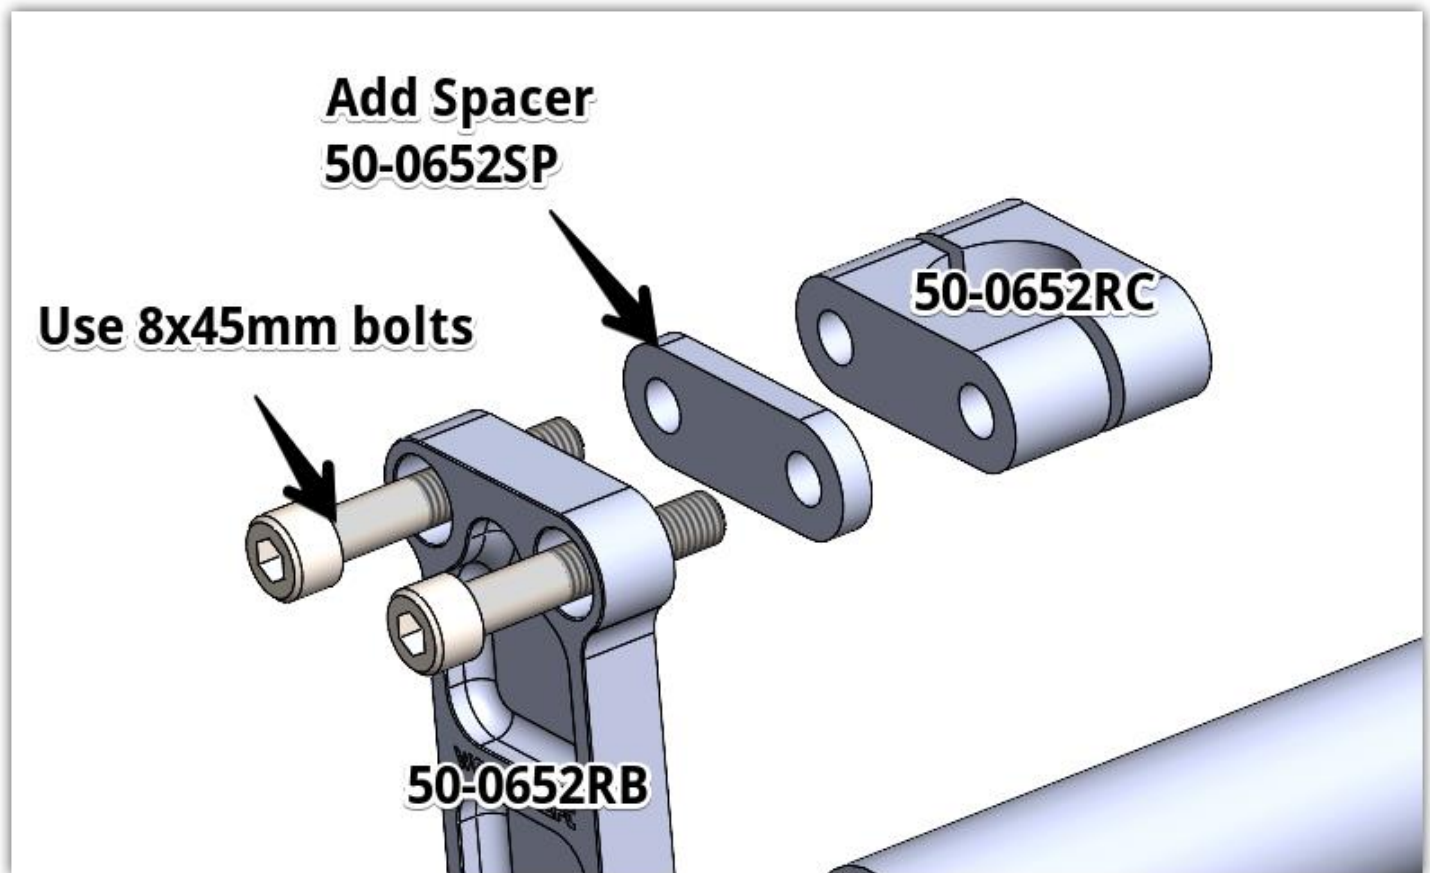

105 Baldwinville Rd. Winchendon, MA 01475 978-297-2977

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.

