



FRONT FAIRING ACCESSORY POWER HARNESS


- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.

To right and left turn signal harness

Included Items:

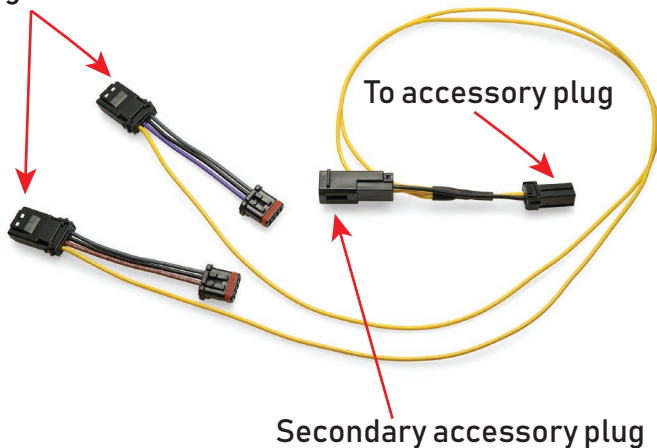

Installation Instructions:

1. Park on a level surface and shut off motorcycle. Ensure the engine has time to cool before installation. Protect surfaces to prevent accidental damage.
2. Remove outer fairing per your owner's manual.
3. Plug the accessory harness into the motorcycle's accessory plug first in line. If you already have something plugged into the accessory plug, disconnect and plug this harness in first, then plug into secondary accessory plug. Fig. 1
4. Plug the left and right signal harness first in line into the proper sides. The right side will have a brown wire and the left side will have a purple wire. Then plug in turn signals and any other accessories. Fig. 2 Secure all wiring with cable ties to avoid any pinching of wires.
5. Re-install the outer fairing.

