



### Installation Instructions

#### 60-0334CLP Cover Protector


- 1) Remove the three OEM bolts from the bottom of the clutch cover.
- 2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

**IMPORTANT - USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS.** Coat the threads completely and allow the threadlocking compound to fully set before use.

- 3) Install the Woodcraft cover with the included Woodcraft mounting hardware.  
2003/04 Model - Place the two spacers between the Woodcraft and OEM covers at points 2 & 3.  
2005/06 Model - Sandwich the OEM bracket between the Woodcraft and OEM covers at points 2 & 3.

Torque for the mounting bolts is about 8 ft-lbs.

- 5) Start the motorcycle and inspect for any leaks before riding.

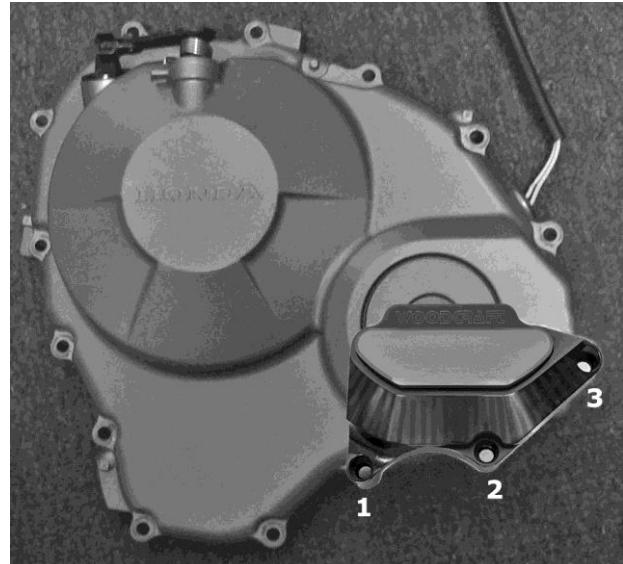

### WARNING

Installation of Woodcraft Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.