


## V3 FRAME SLIDERS KIT 2.0


# KAWASAKI ER6 N

year of production: '09-'11

product code: SR130

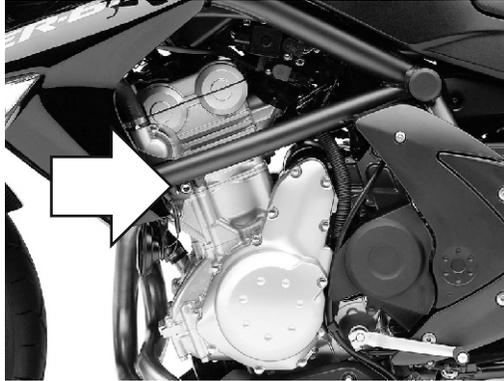

Assembly position  
(left side)

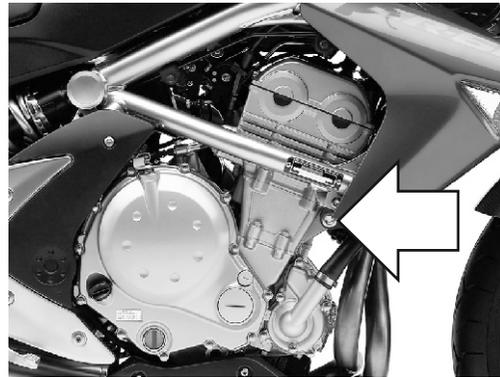


Assembly position  
(right side)



### Assembly instructions

1. Remove the original bolts indicated with the arrows on the assembly position scheme above.
2. Replace the original bolt by the new mounting bolt (parts #7), the spacer 1 (parts #9) and adapter (part #6) according to the scheme on the right page. Put the adapter (part #6) in the right position according to the drawing on the right page.
3. Assemble the slider, round cylindrical body, the bolt and the steel sleeve (parts #1, #2, #3, #4 and #5) according to the drawing on the right page. Put them into the threaded hole in adapter (part #6).
4. Same operation is required in another side of the motorbike.  
We suggest to use the threadlocker (eg. Loctite®) to make sure that the vibrations of the engine do not loosen the bolts.

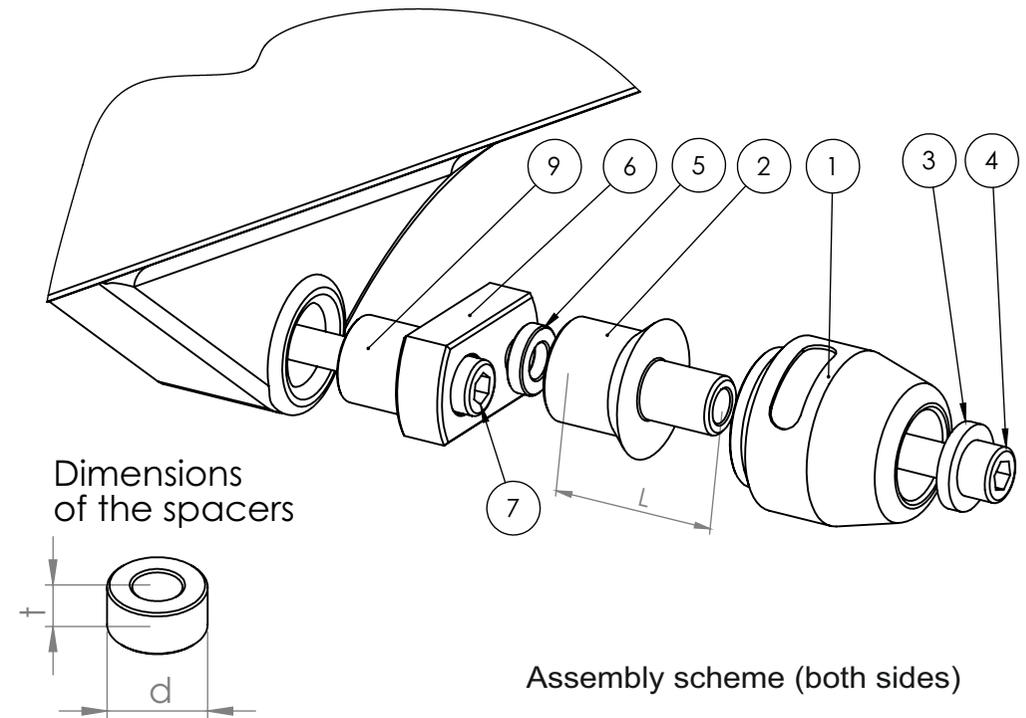

Part name	Left side (as You sit on the motorbike)	Right side
Slider	1 pcs.	1 pcs.
Round cylindrical body	L = 80 mm	L = 60 mm
Steel sleeve	1 pcs.	1 pcs.
Allen bolt (8,8 class)	M10x110 mm	M10x90 mm
Spacer	t=20mm, d=5 mm	t=20mm, d=5 mm
Adapter	Aluminium	Aluminium
Mounting bolt 1	M10x80	M10x130
Mounting bolt 2	-	-
Spacer 1	t=20mm, d=15 mm	t=20mm, d=5 mm
Spacer 2	-	-
Nut	1 pcs.	1 pcs.
Washer	-	-

Legal note. This product is a professional accessory to be used on the race track. Neither manufacturer, nor Seller take responsibility for any damages occurred despite of using protective accessories. For more information go to [vortexracing.com](http://vortexracing.com)