



# FLARE® WINDSHIELD FOR 2023.5+ ROAD GLIDE

**INCLUDED COMPONENTS:**

- Flare® Windshield
- L & R Lower Mounting Blocks
- L & R Top Mounting Blocks
- Hardware

**TOOLS NEEDED:**


- T25 Torx Driver Tool
- Shine Werks (recommendation)

**QUESTIONS?**

- EMAIL: info@getklocked.com
- CALL: (605) 996.3700



1. Remove the 4 factory windshield mounting bolts. These will not be reused. Gently remove your windshield by pulling back and up (FIG 1).
2. Place the Klock Werks **Lower Mounting Blocks** onto the OEM mounts. L and R are noted on each mounting block (FIG 2). A small piece of painters tape at the rear may help hold them in place (FIG 3).

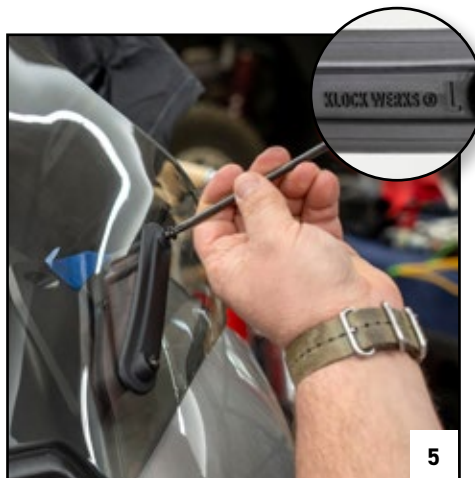

3. Aligning with the center tabs, install your Klock Werks **Flare® Windshield** and lay back onto the mounting blocks (FIG 4).
4. Starting with the **Left Top Mounting Block** (L indicated on the bottom and towards the front of the bike). Install the longer torx bolt in the rear hole, and shorter torx bolt in the front hole (FIG 5). Repeat on right side.  
**NOTE:** For Sport Flare® models, the four screws are all the same length.
5. **Torque bolts in an even pattern up to 8-10 in-lbs (0.90-1.13 Nm).**
6. Using your Shine Werks, give the windshield and fairing a good wipe down and enjoy the ride (FIG 6).

**WARNING!** Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192