CS1: DUCATI MONSTER 796
SLIP-ONS
INSTALLATION INSTRUCTIONS
PART# 30509/40509

MORE POWER : LESS NOISE

Congratulations, you have purchased the finest exhaust system for your motorcycle on the market. Your Vance & Hines exhaust system is designed and crafted for maximum performance, a perfect fit, a great sound and unbeatable style. Please follow the installation instructions below and if you have any questions, please call our technical support line at (562) 926-5291.

Attention installer (if other than owner), please forward this instruction sheet to the owner of this product. These instructions contain valuable information to the end user.

BEFORE YOU BEGIN

- Make sure your bike is on a flat and stable surface before beginning this install.
- Before you start work make sure you have protective clothes and eye wear.
- You will need the following tools to perform the installation:
  - 13mm socket and ratchet
  - 2 & 13mm Combination wrench
  - 5 & 6mm Allen wrenches
  - Spring Puller (provided in kit)

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

STOCK EXHAUST SYSTEM REMOVAL

1. Starting on the left side, remove spring at the front of the mid-pipe. Save springs for re-use (Figure 1).
2. Remove nut from the back of the muffler bolt on the muffler bracket (Figure 1).
3. Supporting the mufflers weight, remove bolt from bracket and slide entire muffler assembly off of the bike. NOTE: Take care not to let the muffler drop against the bike as it is quite heavy.
4. Remove muffler bracket from subframe (Figure 2).
5. Repeat steps 1 through 4 on the right side muffler.

VANCE & HINES OPTIONAL ACCESSORIES

FUELPAK

Take the guess work out of fuel injection with Fuelpak Fuel Management. Visit fuelpakfi.com for more information and to find out if your application is supported. Contact your local dealer or call (562) 921-0071 to order. Fuelpak is intended for racing or off-highway use only, and is not legal for sale or use in California on pollution-controlled vehicles.

SPARE PARTS & ACCESSORIES

1. 1 - 1/2" Sound lowering Right Insert P/N: A180SN-R
2. 1 - 1/2" Sound lowering Left Insert P/N: A181SN-R
3. 1 - 5/8" Sound lowering Right Insert P/N: A175SN-R
4. 1 - 5/8" Sound lowering Left Insert P/N: A176SN-R
5. 1 - 7/8" Sound lowering Right Insert P/N: A165SN-R
6. 1 - 7/8" Sound lowering Left Insert P/N: A166SN-R
7. 1 - 3/4" Sound lowering Right Insert P/N: A170SN-R
8. 1 - 3/4" Sound lowering Left Insert P/N: A171SN-R
9. Muffler Re-Pack P/N: A236FG-R

MORE POWER : LESS NOISE

FIGURE 1

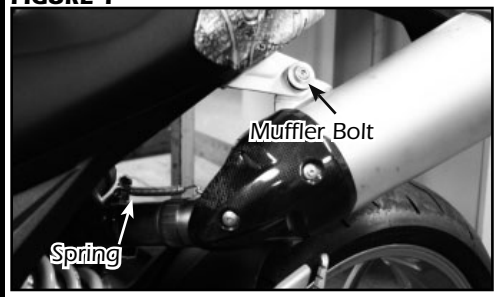

FIGURE 2

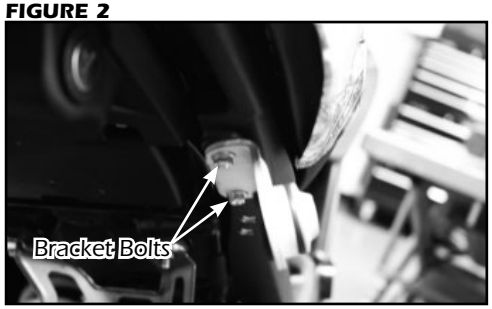

FIGURE 3

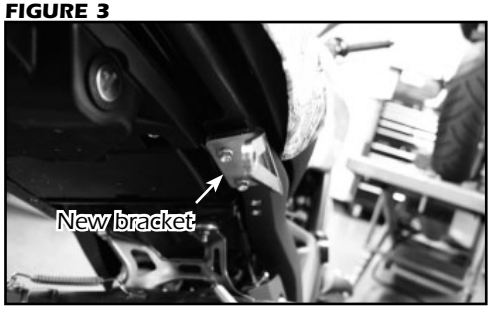

FIGURE 4

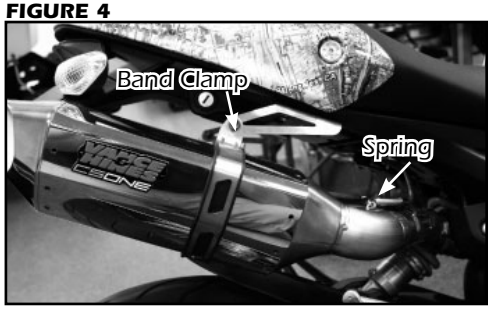

VANCE & HINES EXHAUST SYSTEM INSTALLATION

1. Starting on the right side, install 594-P bracket (Provided) to subframe with mounting tab facing out and back using supplied A446HW bolts (Figure 3).
2. Put isolator strap (A394HW) inside the #465 band clamp, and press into place. Be sure to align the straps so that there is not a large gap on either end of the band clamp, and that it is seated evenly all the way around the band clamp.
3. Carefully position band clamp over muffler body. Install muffler assembly onto tail pipe with band clamp installed. Line up the band clamp hole with the outside of the new bracket and install provided nut and bolt (finger tight) (Figure 4).
4. Install stock spring from stock location on the header to the the spring clip on the CS-ONE mid-pipe. Fully tighten nut and bolt that attach band clamp to bracket (Figure 4).
5. Repeat steps 1 through 4 for left side installation.
6. Be sure all hardware is tight. Before starting the motorcycle, completely clean tail pipes and mufflers with warm soapy water and a clean soft cloth that will not leave residue. Dry with a clean towel. NOTE: Any residue, oil, or fingerprints will tarnish the finish when the exhaust system heats up. Do NOT use anything abrasive to clean black mufflers as it may remove the finish.

PACKING LIST

PARTS SHOWN ARE NOT ACTUAL SIZE

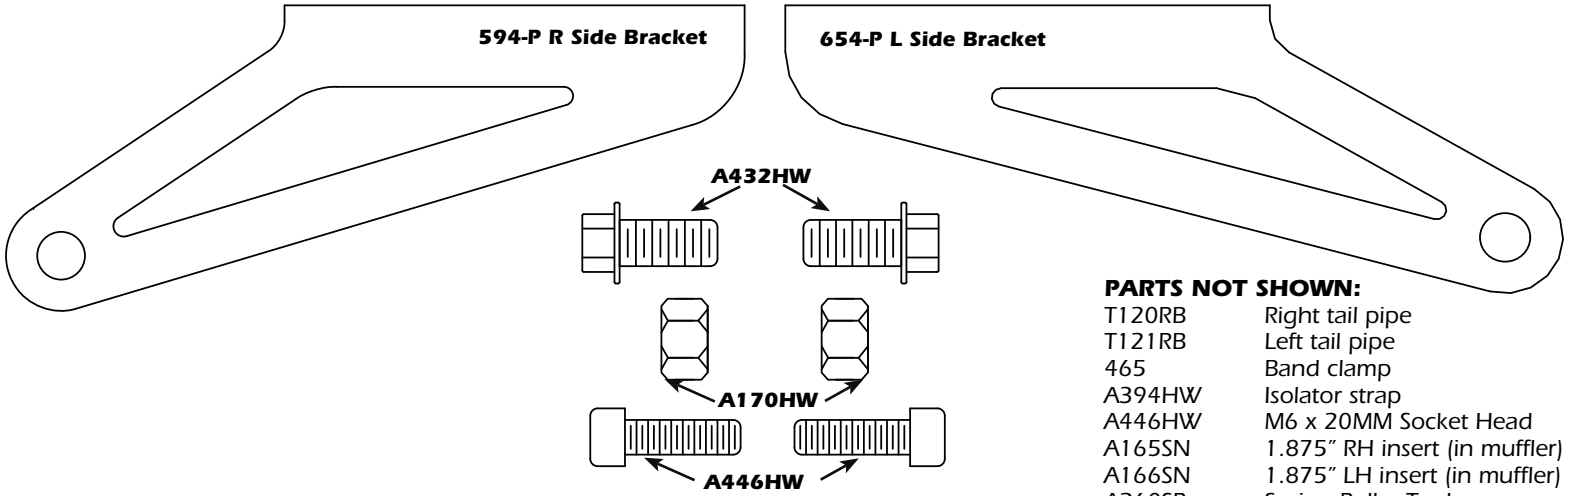

PARTS NOT SHOWN:

T120RB	Right tail pipe	x 1
T121RB	Left tail pipe	x 1
465	Band clamp	x 2
A394HW	Isolator strap	x 2
A446HW	M6 x 20MM Socket Head	x 2
A165SN	1.875" RH insert (in muffler)	x 1
A166SN	1.875" LH insert (in muffler)	x 1
A260SP	Spring Puller Tool	x 1

WARRANTY

All of our exhaust systems are warranted against defects in material and/or workmanship for a period of 90 days. This warranty shall be limited to the repair or replacement of the system, which may be proven defective under normal use. We will not warranty any system that has been abused, misused, improperly installed, or modified. Failure to follow muffler packing instructions and maintenance will also not be covered under warranty.