


## Assembly Instructions

Model:	KLZ1000A/B
Description:	U-Lock Kit
Part Number:	99994-0340

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	U Lock Bracket	11056-2028	1	
2	Bolt	130CB0614	2	M6 × 14
3	Washer	92200-0283	2	
4	Nut	92210-0303	2	
5	Pad	39156-0867	1	170 × 50
6	Pad	39156-0868	1	170 × 25
7	Pad	39156-0900	1	75 × 53
8	Band	92072-1338	1	

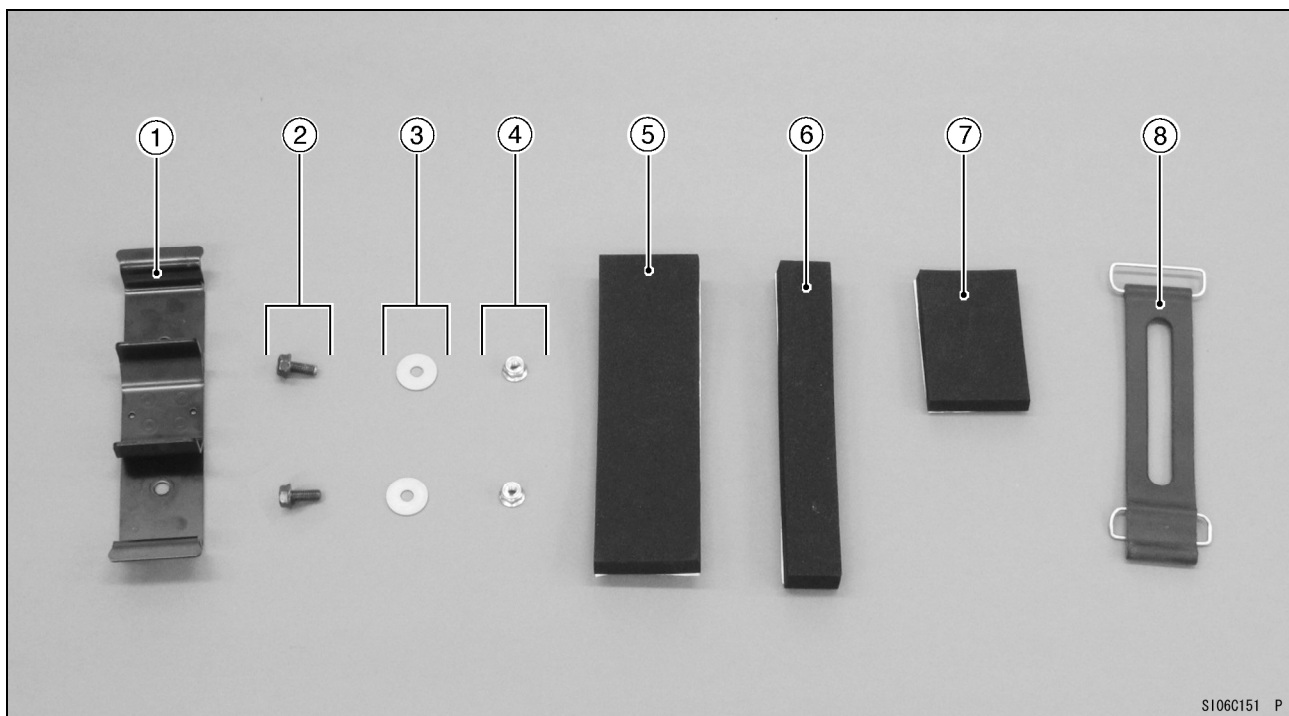


S106C151 P


## Installation Instructions

### Assembly Procedure (Reference Model: KLZ1000B)


- Insert the ignition key [A] into the seat lock, turning the key clockwise, pulling up on the rear of the seat [B], and pull the seat backward.

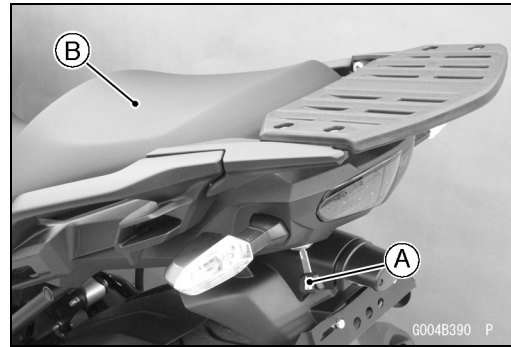


- Drill the emboss line [A] on the rear fender using 6.3 mm (0.25 in.) drillbit.

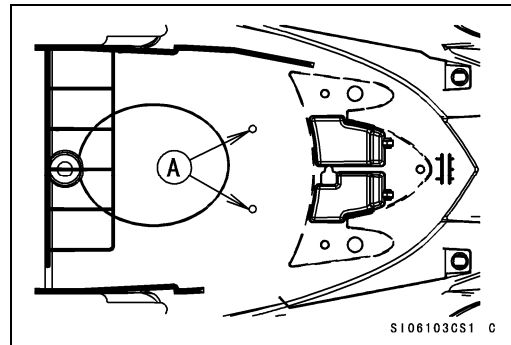

- Remove:  
Pad [A]

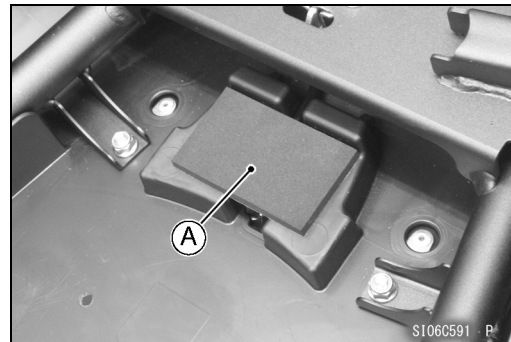


- Install:  
Bolts [2] and Washers [3]  
U-Lock Bracket [1]  
Nuts [4]

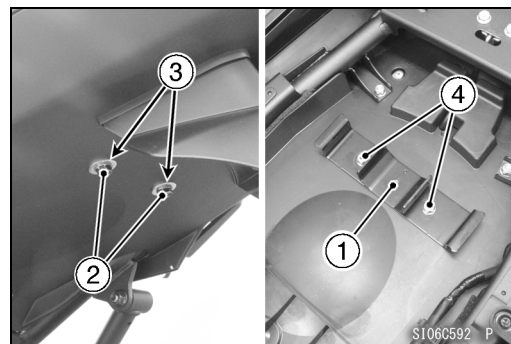


- Install the dampers [5] [6] [7] on the rear fender as shown.


About 50 mm (1.97 in.) [A]  
 About 18 mm (0.71 in.) [B]  
 About 5 mm (0.20 in.) [C]  
 85 mm (3.35 in.) [D]  
 37.5 mm (1.48 in.) [E]  
 About 2 mm (0.08 in.) [F]

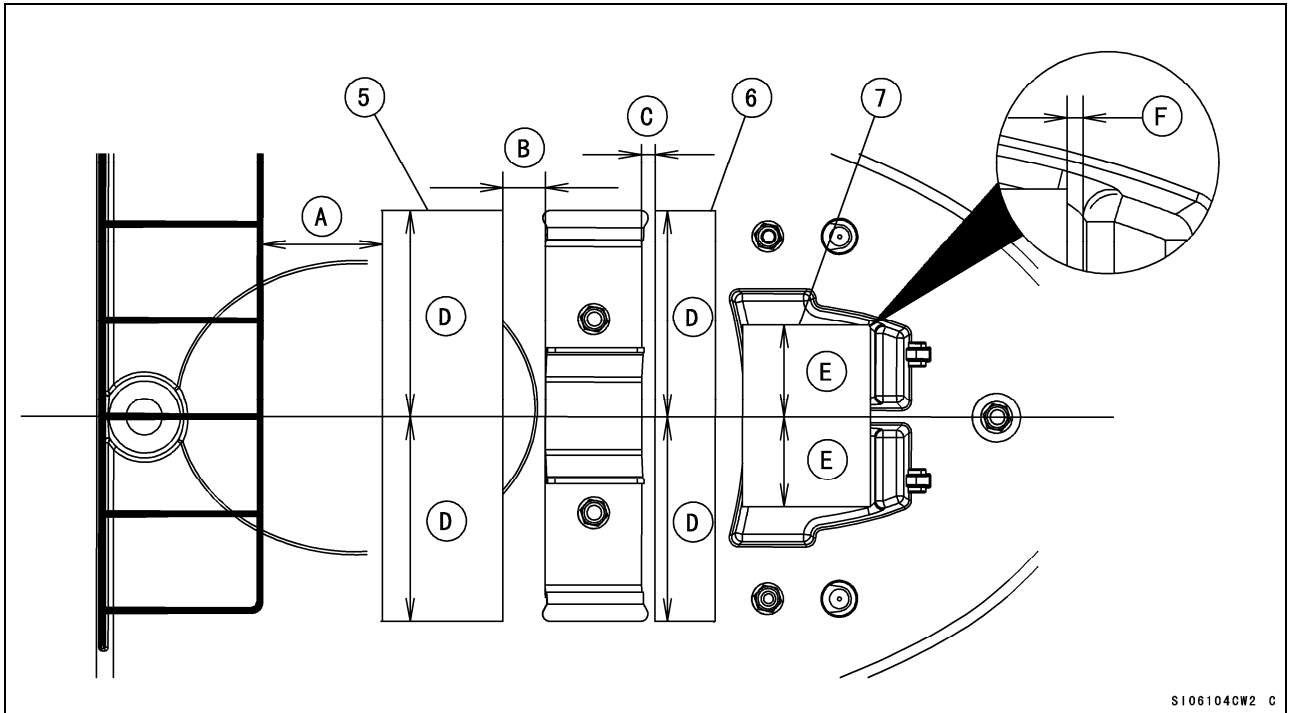

- Install:  
 U-Lock [A] (Optional Part)  
 Band [8]

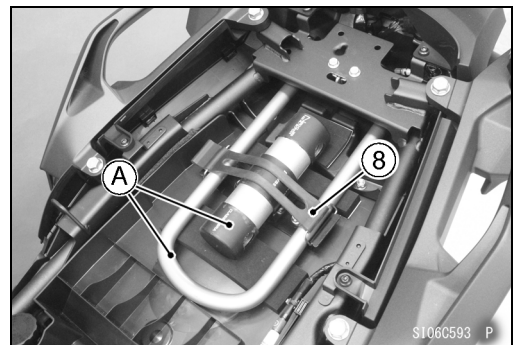

- Insert the tabs [A] at the front part of the seat under the fuel tank bracket [B].
- Insert the hooks [C] of the seat into the guides [D] on the frame.
- Insert the hook [E] at the rear part of the seat into the latch hole [F] on the frame.
- Push down the rear part of the seat until the lock clicks.

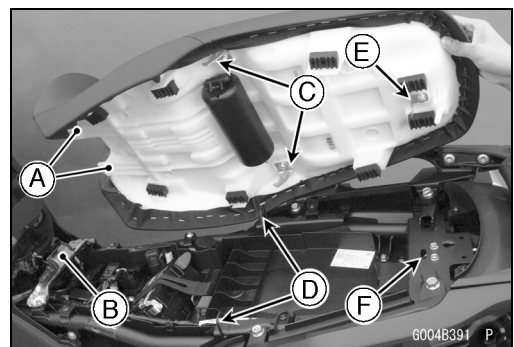

### Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

**Check tightness of all fasteners in regular interval. Retighten loose fasteners.**